



niceboy RAZE 4 ORIGIN Bluetooth Speaker User Manual

[Home](#) » [niceboy](#) » niceboy RAZE 4 ORIGIN Bluetooth Speaker User Manual

Contents [[hide](#)]

- 1 RAZE 4 ORIGIN Bluetooth Speaker
 - 1.1 PACKAGE CONTENTS
 - 1.2 PRODUCT DESCRIPTION
 - 1.3 CHARGING
 - 1.4 POWER ON / OFF
 - 1.5 CONNECTING TO BLUETOOTH
 - 1.6 PLAYBACK
 - 1.7 AUX MODE
 - 1.8 FM MODE
 - 1.9 MICRO SD CARD
 - 1.10 PHONE CALLS
 - 1.11 TRUE WIRELESS (TWS) CONNECTION
 - 1.12 PARAMETERS
- 2 Documents / Resources
- 3 Related Posts

RAZE 4 ORIGIN Bluetooth Speaker

RAZE 4 ORIGIN User Manual / Bluetooth Speaker


1

PACKAGE CONTENTS

Niceboy RAZE 4 Origin Loudspeaker
USB-C charging cable
Audio cable
Operating instructions

PRODUCT DESCRIPTION

1. LED indicator
2. Increase volume / Next song
3. Power On / Power Off / Playback / Pause / Change Mode / Hands-free
4. Decrease volume / Previous song
5. 3.5 mm jack AUX input
6. USB-C charging input
7. SD card slot

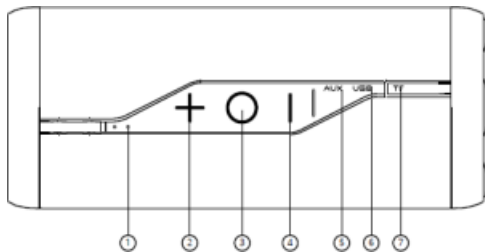

CHARGING

We recommend that you fully charge the speaker before using it for the first time to maximize battery life. It takes approximately 2-3 hours to fully charge. An acoustic signal will indicate a low battery. To charge the loudspeaker battery, connect the supplied USB-C cable to the charging port (6) and connect it to any charging adapter (5V voltage and at least 1A output current) or to a USB in a PC. During charging, the LED indicator remains red (1) and turns off after the charging is fully completed.

POWER ON / OFF

To turn the loudspeaker on or off, press and hold the „O“ button (3) for 2-3 seconds. After 10 minutes of inactivity, the loudspeaker will turn off automatically to save energy.

CONNECTING TO BLUETOOTH

1. Press the „O“ button (3) for 2-3 seconds to turn the loudspeaker on. The loudspeaker is now in pairing mode for Bluetooth connectivity. Pairing mode is signalled by flashing of the blue operating LED (1).
2. Activate Bluetooth on your device. Select “Niceboy RAZE 4 Origin” in the list of available devices.
3. The device will connect to the loudspeaker. A successful pairing is signalled by an acoustic prompt and the blue operating LED (2) will remain lit.

To disconnect from Bluetooth, press the “O” button (3) three times.

PLAYBACK

To start or pause a track, briefly press the “O” button (3). To control the volume, briefly press buttons “+” (2) and “-” (4). Press and hold these buttons to skip to the next or previous track.

AUX MODE

1. Insert the included 3.5mm jack cable into the audio input (5) and the loudspeaker will automatically switch to

the appropriate mode.

2. Use the device to which you have connected the loudspeaker to control the music being played.

To control the volume of the loudspeaker, briefly press buttons “+” (2) and “-” (4).

By pressing the “O” button (3) you will switch the sound off (mute), press it again to switch the sound on (unmute).

FM MODE

The FM Mode is activated by pressing the “O” button (3) twice; then press both buttons “+” (2) and “-” (4) simultaneously to search and save radio stations automatically. To stop the automatic search, briefly press the “O” button (3). To switch between the radio stations, press and hold the “+” (2) and “-” (4) buttons. For better signal reception, connect the USB-C cable to the input (6). The cable alternates as an auxiliary antenna.

MICRO SD CARD

1. After inserting the SD card, the loudspeaker will automatically switch to the appropriate mode.

The device supports data storage devices with a maximum capacity of 32GB and MP3 and WAV audio formats.

PHONE CALLS

To answer and then end the phone call, press the “O” button (3). Press the same button twice to reject an incoming call.

TRUE WIRELESS (TWS) CONNECTION

Thanks to the True Wireless (TWS) technology, you can connect two Niceboy RAZE 4 Origin loudspeakers and play music at the same time.

1. Turn both Niceboy RAZE 4 Origin loudspeakers on and make sure they are not connected to any Bluetooth device (mobile, notebook etc.).
2. Briefly press “+” (2) and “-” (4) button on one of the loudspeakers. An acoustic prompt will announce a successful connection of loudspeakers. An LED indicator on one of the loudspeakers (1) will remain blue while on the other loudspeaker the LED will flash blue – this means they are in pairing mode for Bluetooth connection.
3. Now you can open the Bluetooth settings on your device. Select “Niceboy RAZE 4 Origin” in the list of available devices. An acoustic prompt will announce a successful pairing.

PARAMETERS

Bluetooth version: 5.0

Supported codecs: SBC

Supported profiles: A2DP, AVRCP, HFP

Power output: 20W

Impedance: 6 Ω


Sensitivity: >75dB

Frequency range: 70 Hz– 18 kHz

Bluetooth transmission distance: 10 meters

Frequency FM: 87.5MHz ~ 108MHz
Supported data devices: micro SD card, max. 32GB
Battery: Li-Ion 2000 mAh
Battery life: 20 hours (at 50% volume)
Waterproof level of protection: IP67
This product complies with all the basic requirements of relevant EU directives.

Documents / Resources

	niceboy RAZE 4 ORIGIN Bluetooth Speaker [pdf] User Manual RAZE 4 ORIGIN, Bluetooth Speaker
---	---