



niceboy RAZE Origin 5 Wireless Speaker User Manual

[Home](#) » [niceboy](#) » niceboy RAZE Origin 5 Wireless Speaker User Manual 

Contents

- [1 niceboy RAZE Origin 5 Wireless Speaker](#)
- [2 PACKAGE CONTENTS](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 CHARGING](#)
- [5 POWER ON / OFF](#)
- [6 CONNECTING TO A DEVICE](#)
- [7 PARAMETERS](#)
- [8 SAFETY INFORMATION](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

niceboy®


niceboy RAZE Origin 5 Wireless Speaker



PACKAGE CONTENTS

- Niceboy RAZE Origin 5 wireless speaker
- USB-C charging cable
- Audio cable
- Instruction manual

PRODUCT DESCRIPTION

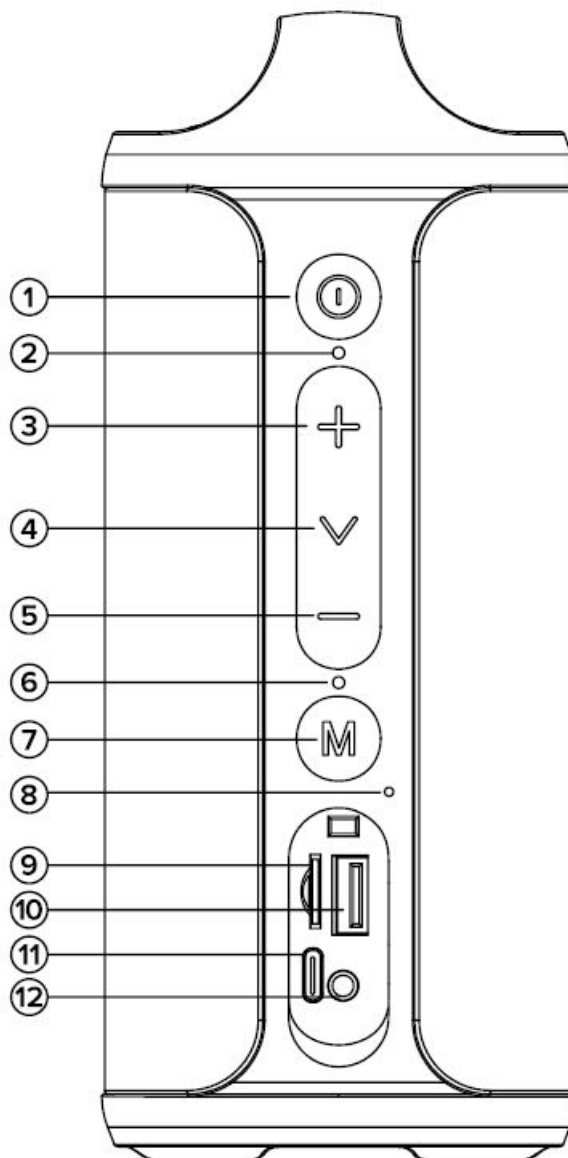

1. On / off / light mode button
2. Operating LED indicator
3. Volume increase button
4. Playback / Pause / Accept / End / Reject a call / The last number called
5. Volume decrease button
6. LED charging indicator
7. Change mode / TWS mode
8. Microphone
9. Input for micro SD card

10. Charging USB – output, input for USB flash drive
11. Charging USB-C input
12. AUX input for 3.5 mm jack

CHARGING

We recommend that you fully charge the speaker before using it for the first time to maximize battery life. Full charging takes approximately 3 hours. A low battery is indicated by an audio signal. To charge the speaker's battery, plug the supplied USB-C cable into the charging port (11) and connect it to any charging adapter (5 V voltage and at least 1 A output current) or to a USB port in a PC. Charging is indicated by a red charging LED (6); the LED turns off once the battery is fully charged.

POWER ON / OFF

- To turn the speaker on or off, press and hold button (1) for 3 seconds.
- If the speaker is left inactive, it will turn off automatically after 10 minutes to save power.

CONNECTING TO A DEVICE

1. Press and hold the on/off button (1) for 3 seconds to turn the speaker on. The speaker is now in pairing mode for wireless connectivity. Pairing mode is indicated by the flashing of the blue operating LED (2).
 2. Activate Bluetooth on your device. Select "Niceboy RAZE Origin 5" in the list of available devices.
 3. The device will connect to the speaker. A successful pairing is indicated by a tone and the blue operating LED (2) lighting up.
- When switched on again, the speaker automatically connects to the last paired device.
 - End pairing by long-pressing button "M" (7).

PLAYBACK

To start or pause a track, short-press button (4). Control the volume by short-pressing buttons (3) or (5). Long-pressing button (3) or (5) skips to the next or previous track.

AUX MODE

1. Plug the enclosed 3.5 mm jack cable into the audio port (12); the speaker will automatically switch to the corresponding mode.
2. Control what music the speaker plays using the device the speaker is connected to. Control the speaker's volume by short-pressing buttons (3) or (5). Long-pressing button (3) or (5) skips to the next or previous track.

USB FLASH DRIVE AND MICRO SD CARD

- Insert a data storage device into the corresponding port (9), and (10).
- The speaker automatically switches to playback mode, indicated by a tone.
- To start or pause a track, short-press button (4). Control the volume by short-pressing buttons (3) or (5). Long-pressing button (3) or (5) skips to the next or previous track.
- The device supports data storage devices with a maximum capacity of 32 GB and MP3, WAV, and WMA audio

formats.

PHONE CALLS

To answer and afterward end a phone call, press the button (4). Long-press the same button to reject an incoming call. Press the button twice to redial the last number called.

LIGHTING MODES

- Pressing button (1) switches between individual color modes.
- **Note:** Power consumption increases when a lighting mode is active.

TRUE WIRELESS (TWS) CONNECTION

Using True Wireless (TWS) technology, you can connect two Niceboy RAZE Origin 5 speakers and play music simultaneously in stereo.

1. Turn on both speakers and make sure they are not connected to any Bluetooth device (cell phone, laptop, etc.).
2. Double-press the M button (7) on one of the speakers to start speaker pairing. This is indicated by the orange flashing operation LED (2). An acoustic signal announces the successful completion of the speaker connection.
3. Now you can open the Bluetooth settings of your device. Then select „Niceboy RAZE Origin 5“ in the list of available devices. The successful pairing will be announced by an acoustic signal.

You can exit TWS mode by double-pressing the M button again.

FACTORY SETTINGS

In case of technical problems, reset the speaker to factory settings. The speaker must be turned on. Press and hold button (1) for 8 seconds. The speaker will turn off then back on again. The reset is now complete.

PARAMETERS

- **BT version:** 5.3
- **Frequency band:** 2.4 GHz
- **Radiofrequency power:** ≤ 2.5 mW
- **Transmission range:** 10 meters
- **Supported codecs:** SBC
- **Supported profiles:** A2DP, AVRCP, HFP
- **Power output:** 20 W
- **Impedance:** 4 Ω
- **Sensitivity:** >85 dB
- **Frequency range:** 55 Hz – 20 kHz
- **Supported data storage devices:** USB flash drive, micro SD card, max. 32 GB
- **Supported audio formats:** MP3, WAV, WMA
- **Battery:** 2x Li-Ion 1200 mAh
- **Battery life:** 20 hours (at 50% volume)
- **Waterproofness:** IPX7

SAFETY INFORMATION

Listening to music at a very high volume can damage your hearing. Do not expose the device to fluids or humidity. Do not expose the device to extreme temperatures or try to disassemble it. Protect the device from sharp objects and falls from height. Batteries – improper handling (prolonged charging, short circuit, breakage by other objects, etc.) may result in fire, overheating or battery leakage.

The battery or accumulator that may be included with the product has a service life of six months, as it is consumable. The manual is available for download in electronic form at www.niceboy.eu in the support section. NICEBOY s.r.o. hereby declares that radio device type Niceboy RAZE Origin 5 complies with Directives 2014/53/EU, 2014/30/EU, 2014/35/EU, and 2011/65/EU. The full EU Declaration of Conformity is available at the following website: <https://niceboy.eu/en/declaration/raze-origin-5>.

INFORMATION FOR USERS ON DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT (HOUSEHOLDS)

The above symbol on the product or accompanying documentation means that used-up electrical or electronic products must not be disposed of as communal waste. To dispose of the product correctly, bring it to designated waste collection points, where it will be disposed of free of charge. Proper disposal of the product helps preserve valuable natural resources and prevent potential negative impacts on the environment and human health caused by improper waste disposal. For more information, contact local authorities or the nearest waste collection point. Improper disposal of this type of waste may result in a fine pursuant to national legislation.





Information for Users on Disposal of Electrical and Electronic Equipment (Corporate Use) To properly dispose of electrical and electronic equipment for corporate use, contact the manufacturer or importer of the product. They will provide you with information on disposal methods for the product and will inform you on who is obligated to fund the disposal of the electrical device based on the date the product was put on the market. Information on Disposal in Countries outside the European Union. The above symbol only applies to EU countries. To properly dispose of electrical and electronic equipment, request more information from your local authority or the seller of the product.




MANUFACTURER





- NICEBOY s.r.o., 5. května 1746/22, Nusle, 140 00,
- Praha 4, Czech Republic, ID: 294 16 876.
- Made in China.

Documents / Resources

 <small>RAZE ORIGIN 5 User Manual / Wireless Speaker</small> 	niceboy RAZE Origin 5 Wireless Speaker [pdf] User Manual RAZE Origin 5 Wireless Speaker, RAZE Origin 5, Wireless Speaker, Speaker
---	--

References

-  [Niceboy - IT'S YOUR DAY!](#)
-  [Niceboy - IT'S YOUR DAY!](#)
-  [Niceboy - IT'S YOUR DAY!](#)

-  [Niceboy - IT'S YOUR DAY!](#)
-  [Niceboy - IT'S YOUR DAY!](#)
-  [Niceboy - IT'S YOUR DAY!](#)
-  [Niceboy - IT'S YOUR DAY!](#)

Manuals+.