



niceboy VOICE Intercom Conference Headset User Manual

[Home](#) » [niceboy](#) » niceboy VOICE Intercom Conference Headset User Manual 

niceboy®

VOICE INTERCOM
User Manual / Conference Headset



Contents

[1 DESCRIPTION](#)

[2 CONNECTING TO A PC](#)

[3 PARAMETERS](#)

[4 SYSTEM](#)

[REQUIREMENTS:](#)

[5 PACKAGE CONTENTS](#)

[6 Documents / Resources](#)

[6.1 References](#)

[7 Related Posts](#)

DESCRIPTION

1. Microphone
2. USB cable
3. Driver

CONNECTING TO A PC

Connect the cable leading from the headphones to the USB in the PC. Niceboy VOICE Intercom is a Plug & Play device and sets itself up as an audio output device.

PARAMETERS

Converter:	40 mm
Impedance:	32 Ω
Sensitivity:	106 \pm 3dB (1mW/1Khz)
Frequency range:	20 Hz-20 kHz
Max. output:	100mW
Microphone:	Φ 6*5mm
Impedance:	2.2k Ω
Sensitivity:	-58 \pm 3dB
Frequency range:	30Hz-16KHz
Microphone type:	Directional
The cable length:	1.8 m
Connection:	USB Port

SYSTEM REQUIREMENTS:

Windows 8.1 and later MacOS 10.1 and later, USB 2.0

PACKAGE CONTENTS

Niceboy VOICE Intercom headphones Integrated USB cable Manual

You can find this manual in electronic form at www.niceboy.eu in the support section. This product complies with all the basic requirements of relevant EU directives.

niceboy®

Importer to EU: RTB media s.r.o., Pretlucka 16, Prague 10, 100 00, Czech Republic, ID: 294 16 876
Made in China.

RoHS **CE**   

Documents / Resources



[niceboy VOICE Intercom Conference Headset](#) [pdf] User Manual
VOICE, VOICE INTERCOM, Intercom Conference Headset, Conference Headset

References

-  [Niceboy - IT'S YOUR DAY!](#)

[Manuals+](#)