



Nicor PR-BUTTON-W-WH Wireless Button Instruction Manual

[Home](#) » [NICOR](#) » Nicor PR-BUTTON-W-WH Wireless Button Instruction Manual 

Contents

- [1 Nicor PR-BUTTON-W-WH Wireless Button](#)
- [2 INSTALLATION INSTRUCTIONS](#)
- [3 GENERAL PRODUCT WARRANTY.](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



Nicor PR-BUTTON-W-WH Wireless Button




INSTALLATION INSTRUCTIONS

Tools Needed


The Wireless Button requires very few tools for installation. A screwdriver will be required to install the button.



1. Carefully unpack Wireless Button.
2. Remove the bottom cover from the button.

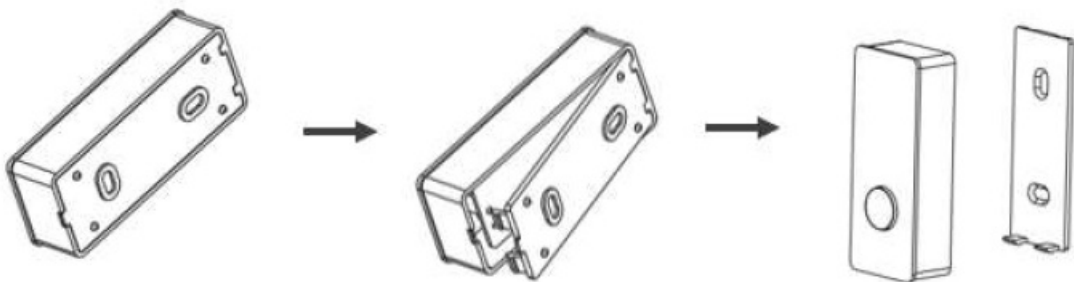


3. Screw the bottom cover to the wall

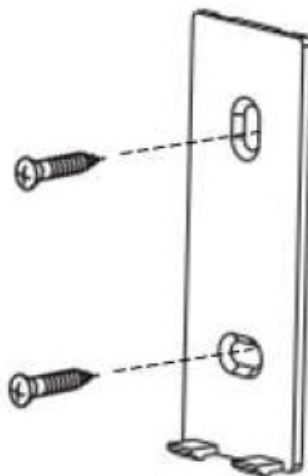


4. Put the battery(23A 12V) in the button.


Note: Ensure that the positive and negative terminals of the battery are installed correctly

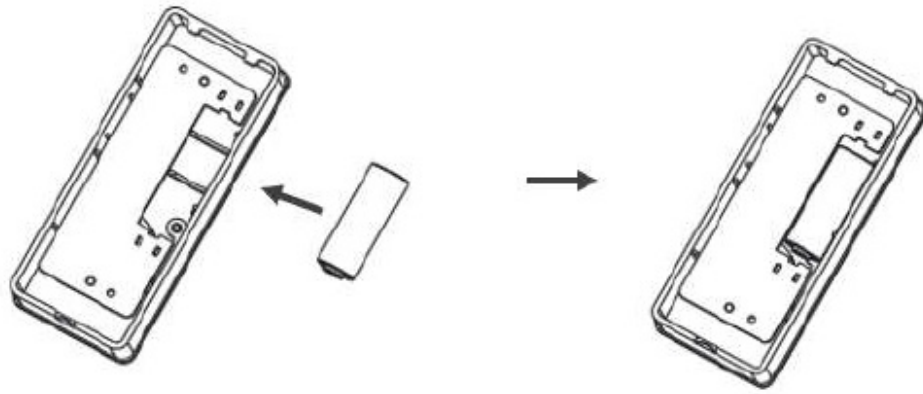

5. Hook the Button with battery onto the wall mounted bottom cover.

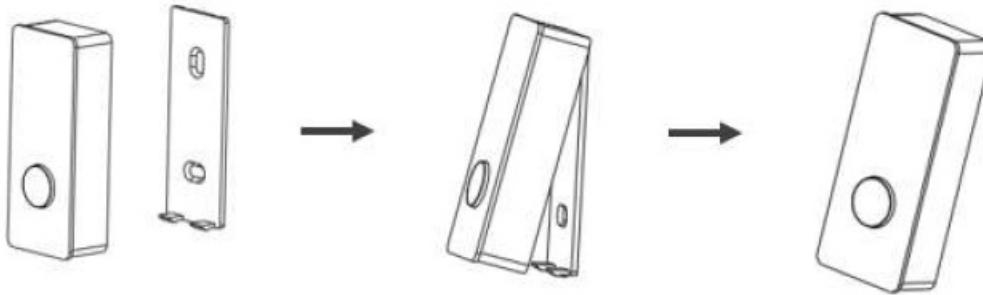

6. Press the Key to check whether the function is normal.

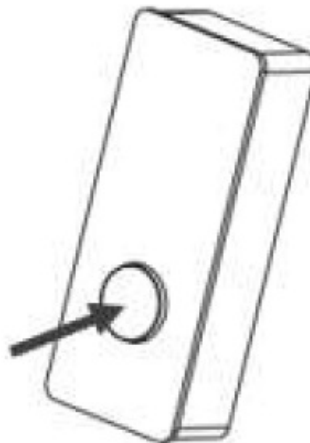

GENERAL PRODUCT WARRANTY.

Each NICOR product will be free from defect in materials and workmanship for a period of one (1) year from the date of delivery to the end-user. Powder Coat paint finish on products, other than natural aluminum or brass, will not exhibit cracking, peeling, excessive fading, or corrosion during the warranty period. Exceptions apply as defined in each NICOR product's specification sheets, which are incorporated by reference herein. Warranty does not cover improper installation, operation, alterations, power surges, overheating due to external conditions, or acts of nature including but not limited to lightning strikes.

ALL NICOR WARRANTIES APPLY ONLY TO NICOR PRODUCTS THAT HAVE BEEN PURCHASED FROM AN AUTHORIZED NICOR DISTRIBUTOR; WHO PURCHASED THE PRODUCT DIRECTLY FROM NICOR; THE PRODUCT WAS NEW AND IN AN UNOPENED NICOR PACKAGE AT THE TIME OF INSTALLATION; AND WAS INSTALLED BY A LICENSED ELECTRICIAN OR UNDER THE SUPERVISION OF A LICENSED ELECTRICIAN. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Documents / Resources

	<p>Nicor PR-BUTTON-W-WH Wireless Button [pdf] Instruction Manual PR-BUTTON-W, PRBUTTONW, 2A3EFPR-BUTTON-W, 2A3EFPRBUTTONW, PR-BUTTON-W-BK, PR-BUTTON-W-WH Wireless Button, Wireless Button</p>
---	--