

NICREW Hyper Reef Controller



NICREW Hyper Reef Controller Instruction Manual

[Home](#) » [NICREW](#) » NICREW Hyper Reef Controller Instruction Manual 

Contents

- [1 NICREW Hyper Reef Controller](#)
- [2 Safety Instructions](#)
- [3 What's in the Box](#)
- [4 Navigation](#)
- [5 Get Started](#)
- [6 Limited Warranty](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

NICREW

NICREW Hyper Reef Controller




Safety Instructions

- DO NOT use a power supply outside the specifications.
- DO NOT use outdoors. This unit is intended for indoor use only.
- DO NOT expose the unit to an extremely humid environment or submerge the unit in water. This may lead to unit failure.
- DO NOT mount over open water.
- ENSURE that the back plate is correctly mounted to a steady surface. Incorrect mounting can result in detachment of the plate and controller.

What's in the Box

- 1 x HyperReef Controller
- 2 x Screws
- 2 x Nylon Anchors
- 1 x Magnetic Back Plate
- 2 x 3.5mm TRRS Cables

Navigation

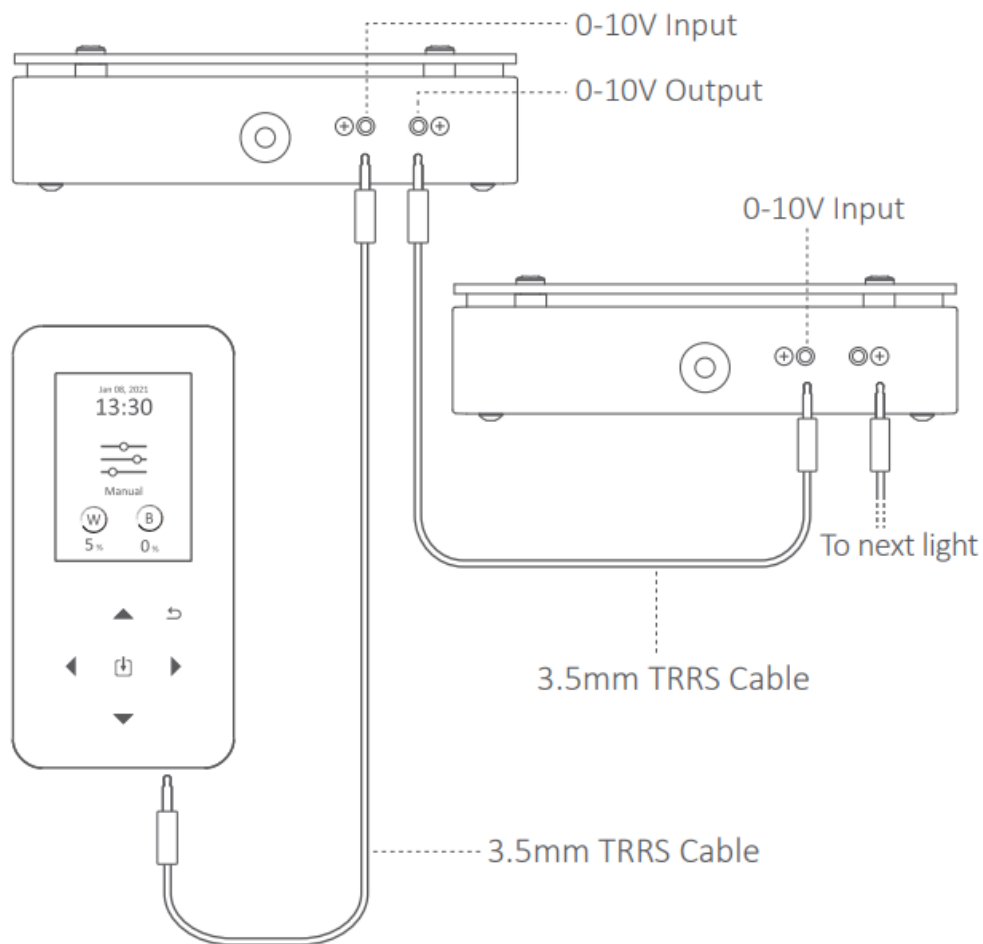

Get Started



Step 1: Power

 
- Insert the 3.5mm TRRS cable into the light fixture.
- Plug the other end to the controller port.

Alternative

- For third-party light fixtures, plug the Type-C cable into the USB Type-C slot and a 5V/1A USB power adapter. (USB power adapter and Type-C cable are not included.)
- The HyperReef controller can be powered off through HyperReef 50, 100, and 150 if the controller is not connected to a 5V/1A USB power adapter.


Step 2: Set Up

- Use the Direction Pad to navigate to the Setting tab.
- Press  to access the setting.
- Press  to return to the Dashboard.

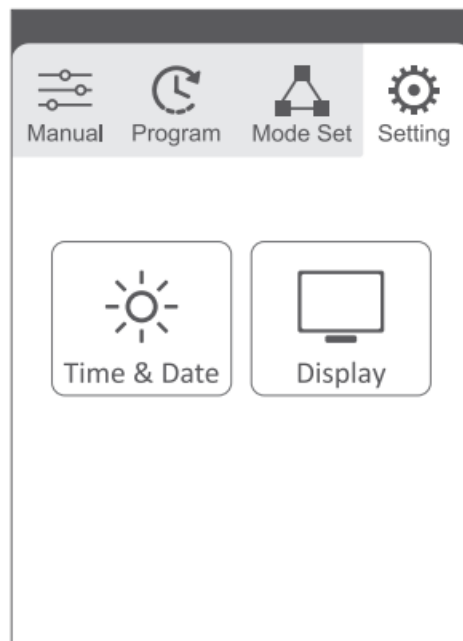



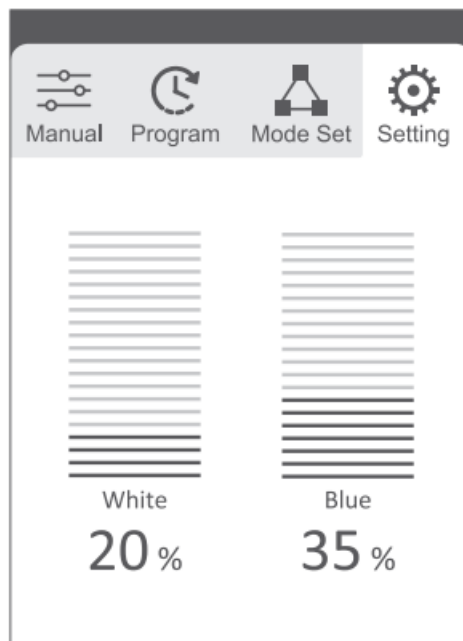

Step 3: Manual Configuration


- Navigate to the Manual tab by pressing ◀▶ the button.
- Press ⏴ to access manual mode.
- Press ◀▶ to select the lighting bar, and press to set the light intensity.
- Press ⏴ to return to the tab options.






Step 4: Program


- Navigate to the Program tab.
- Press ⏴ to access the program's settings.
- Press ◀▶ ⏴ to navigate between preset programs or new programs and press ⏴ to enter.
- Press ◀▶ to choose the time point and press ⏴ to enter for detail settings.

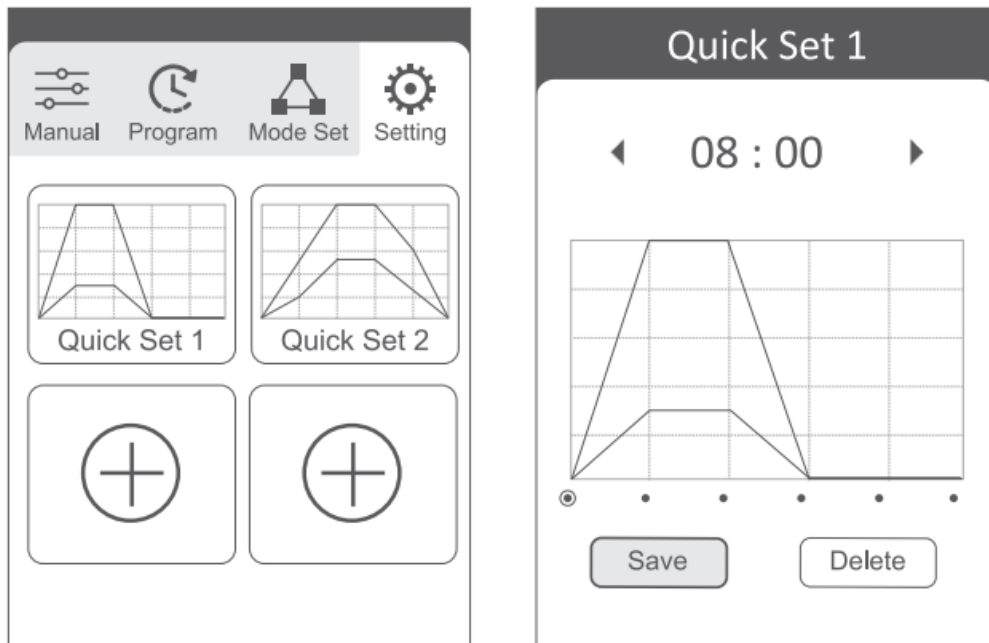- Press  to navigates between functional settings.
- Press  and then press  to adjust the value.
- Press  to returns to the tab options.
- **NOTE:** Make sure to save when finished.



Step 5: Mode Set

- Navigate to the Mode Set tab.
- Press  to access the lighting mode selection.
- Press  to select the desired lighting schedule.
- Press  to return to the tab options.

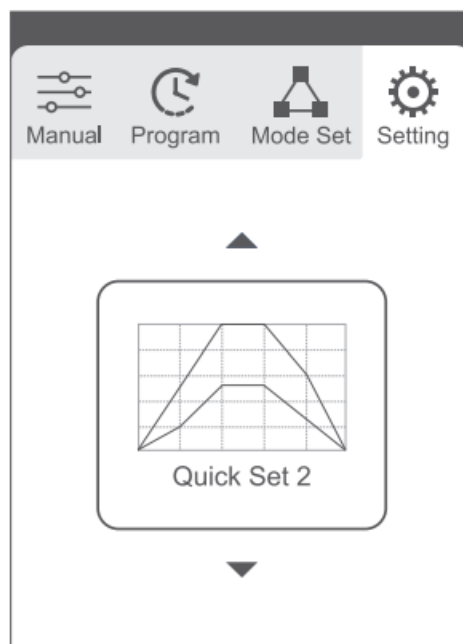

Step 6: Mounting

- Use the screws provided to mount the magnetic back plate to a wooden surface.

- If mounting to a wall, pre-drill two 6mm holes and insert nylon anchors before screwing the plate in.

 
Disposal Information (for EU countries only)

- The symbol shown as follows, applied to the product or on its package, at the end of life, the product must not be thrown away, or disposed of into domestic waste!

Limited Warranty

- NICREW products carry a 12-month limited warranty from the date of purchase. If your product is within warranty and you require a replacement part or service, please contact us at support@nicrew.com.
- For more information, please visit www.nicrew.com.

Documents / Resources

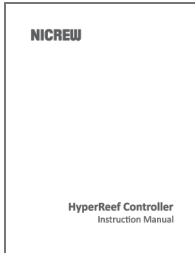	NICREW Hyper Reef Controller [pdf] Instruction Manual Hyper Reef Controller, Hyper Reef Controller, Reef Controller, Controller
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.