

niko M41HC Motion Detector Instruction Manual

Home » niko w niko M41HC Motion Detector Instruction Manual



Contents


- 1 niko M41HC Motion
- Detector
- 2 Installation
- 3 LED behavior
- **4 Specifications**
- 5 Detection area
- 6 Troubleshooting 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**



niko M41HC Motion Detector




Motion detector M41HC, 230 V, secondary, high ceiling, 18-53 m, 360°, for surface mounting **Wiring**

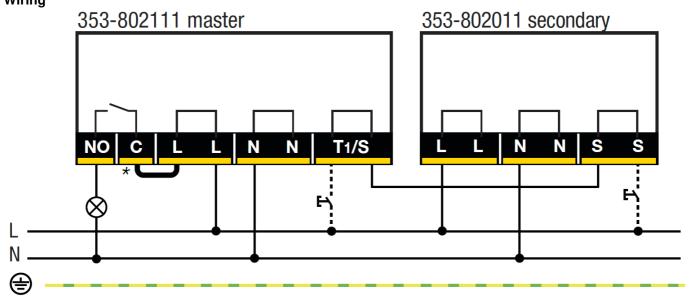

• remove if you want to use the contact as a dry contact (potential-free)


Dimensions


Dimensions

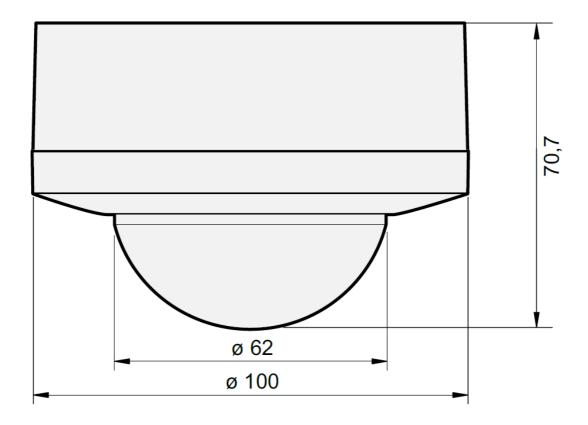


Installation


Installation

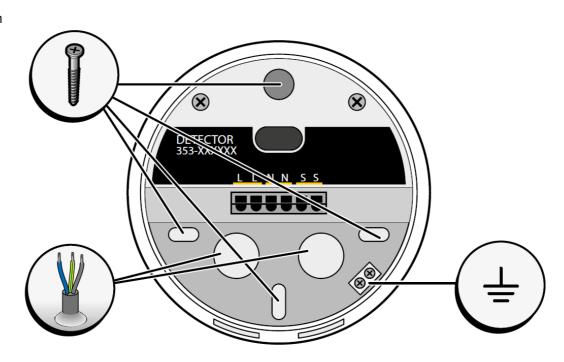

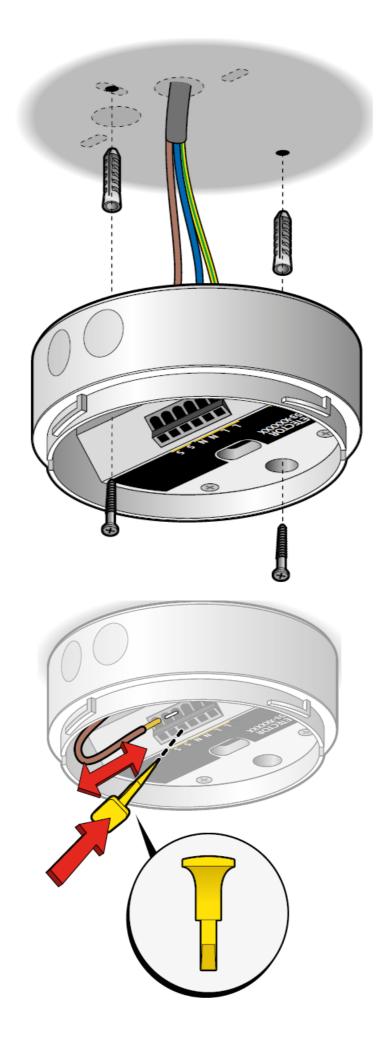


10 - 12 mm

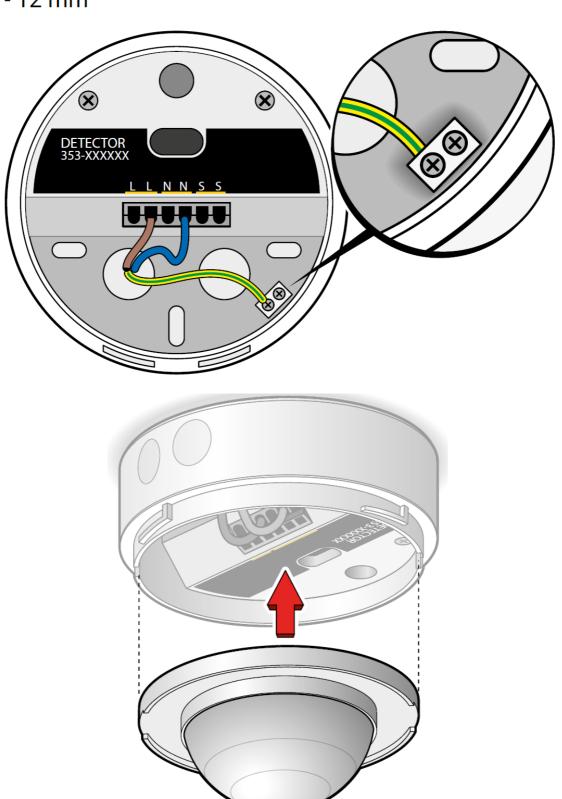

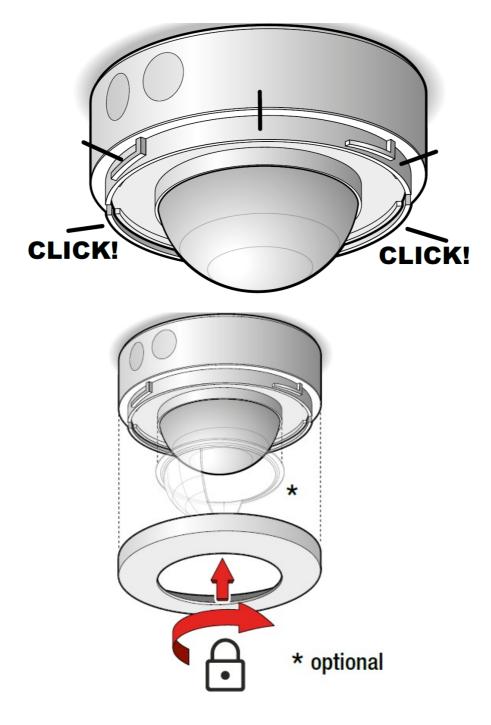

• If a grommet needs to be replaced, please make sure the new grommet is halogen-free

Dismantling

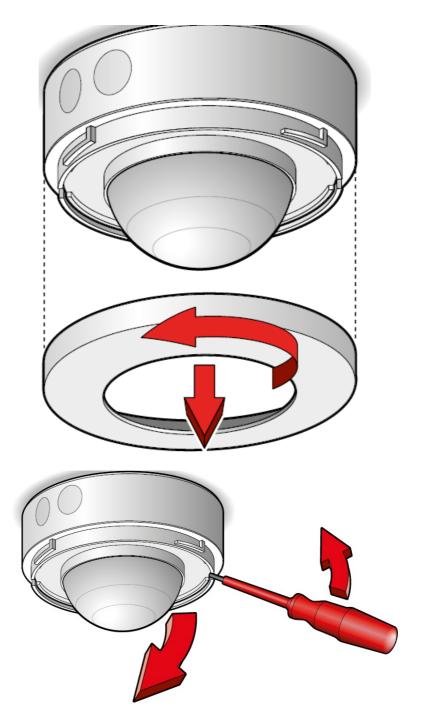

App settings

	Sensitivity
Factory Settings	High

LED behavior

Green LED continuous on		Connection OK	
Green LED flashing	- *	Warming up	Wait
Red LED continuous on		Error	
Blue LED flashing	★	Walk test active	niko
			More info -> detector tool


Specifications

Article number	353-802011
Configuration	230 V Secondary detector
Input voltage	230 Vac ± 10 %, 50 Hz
Maximum power consumption	0.2 W
Detection angle	360 °
Detection range (PIR)	Ø 53 m from a height of 12 m
Ambient temperature	-25 - +40 °C
Mounting method	surface mounting
Mounting height	4 – 12 m
Colour	white (RAL 9010)
Dimensions visible (HxWxD)	100 x 100 x 70.7 mm
Dimensions (HxWxD)	100 x 100 x 70.7 mm
Wire capacity	1.5/2.5 mm ²
Maximum range Bluetooth® (free field	d, depending on the device) 50 m
Operating frequency	2.4 GHz
Maximum radio frequency power	-2 dBm
Protection degree	IP54
Impact resistance	IK04
Modification of settings	app (iOS/Android) and 2-way Bluetooth® communication
Halogen-free	yes

CE

Detection area

Marking

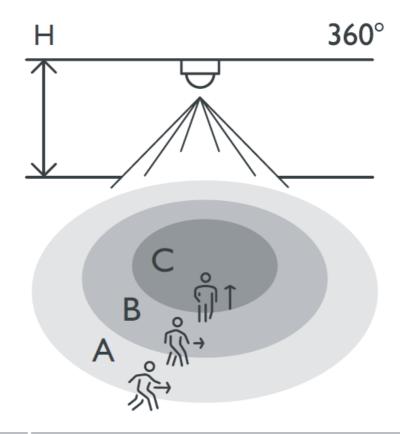

H →	A Walking	B Across	C Towards n↑
4.0 m	Ø 18 m	Ø 18 m	Ø 11 m
8.0 m	Ø 35 m	∅ 33 m	Ø 23 m
12.0 m	Ø 53 m	*	Ø 13 m

• not specified Measured according to EN/IEC63180

Troubleshooting

Problem	Possible cause	Proposed solution
Load does not turn on	The wiring is not correct	Check the wiring scheme
Load does not turn off	The detector receives false triggers	Check for any objects that may cause false triggering and remove them from the detection range or lower the sensitivity
App cannot connect to the detector	Bluetooth® has been disabled on your mobile device	Enable Bluetooth® on your mobile device

Support & contact

Industriepark West 40 9100 Sint-Niklaas, Belgium www.niko.eu

+32 3 778 90 80	support@niko.eu
-----------------	-----------------

Niko prepares its manuals with the greatest care and strives to make them as complete, correct and up to date as possible. Nevertheless, some deficiencies may subsist. Niko cannot be held responsible for this, other than within the legal limits. Please inform us of any deficiencies in the manuals by contacting Niko customer services at support@niko.eu.

Documents / Resources



niko M41HC Motion Detector [pdf] Instruction Manual M41HC, Motion Detector, M41HC Motion Detector

References

• Niko - home automation, switches, socket outlets and detector

Manuals+,