



Nintendo PowerA Enhanced Switch Wireless Controller User Manual

[Home](#) » [Nintendo](#) » Nintendo PowerA Enhanced Switch Wireless Controller User Manual



PowerA Enhanced Switch Wireless Controller User Manual

UsersManuals

- make sure you read this guide before using the wireless controller
- reading the guide will help you learn to use the controller properly



Contents [[hide](#)

- [1 Pack Contents](#)
- [2 Products Features](#)
- [3 How to pair the Switch Pro Controller](#)
- [4 TROUBLESHOOTING for the first connection](#)
- [5 How to wake up your controller](#)
- [6 Automatic power-off & Sleep Function](#)
- [7 Battery Warnings](#)
- [8 Reset function](#)
- [9 How to charge the controller](#)
- [10 Specification](#)
- [11 How to upgrade your switch controller](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)

Pack Contents

- 1 x Switch controller
- 1 x 1.2M Charging Cable
- 1 x User Manual

Products Features

- Wireless Controller for the switch.
- Includes 4 LED indicators to indicate the connection port(player number)and the battery's low power status.
- Sleep function, automatic power off.
- 600mAh rechargeable battery pack, it is charged using the type-C plug in the controller.
- Wide range: up to 8m approx



How to pair the Switch Pro Controller

The Pro Controller can be paired to the Switch console in the following ways.


USB Connection/Pairing:

- Place the N Switch console in the dock.
- Connect the Pro Controller to the dock with the included USB cable.



Additional Information:

This option [**Pro controller Wired communication**] needs to be set to on.

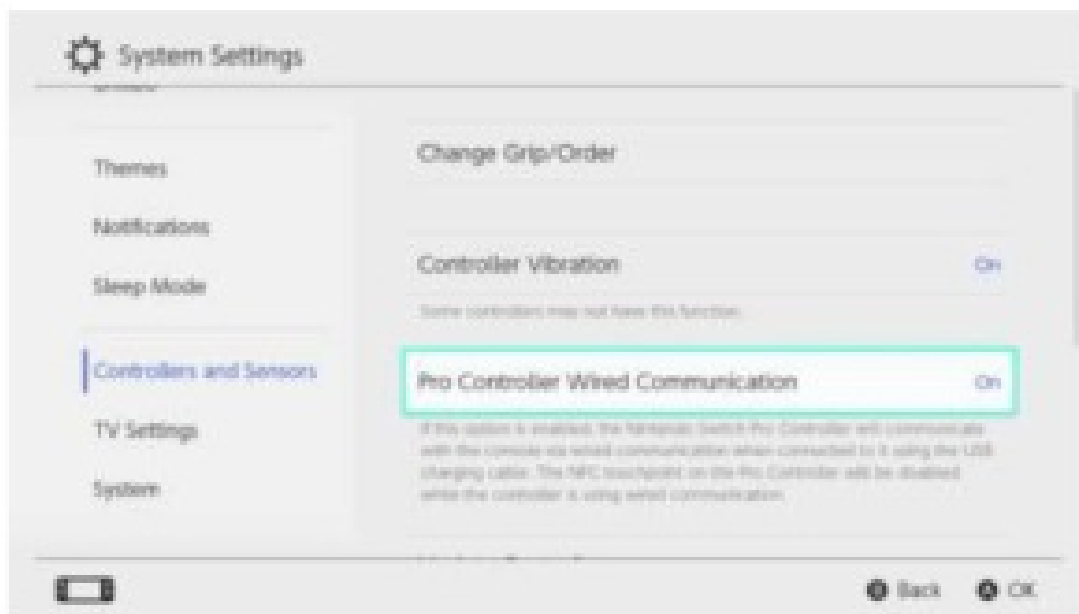

Button Pairing or Wireless Pairing.

- From the HOME Menu, select “Controllers,” then “Change Grip and Order.” While the following screen is displayed, press and hold down the **SYNC Button** for at least one second on the Pro Controller you wish to pair.



Additional Information:

- The console must be powered on. It is not possible to pair a controller while the console is powered off or in sleep mode.
- Once paired, the player LED(s) corresponding to the controller number will remain lit.
- Up to eight wireless controllers can be paired to the Nintendo Switch console. However, the maximum number of controllers that can be connected will vary depending on the type of controllers and features that are used.

TROUBLESHOOTING for the first connection

Solution 1:

When your controller has been connected, please just press[A Button] one time to confirm

- If you press two times [A button], the controller connected will be disconnected.
- [Change Grip/Order]means disconnect all the controllers that have been connected



- After you connect your controller and return to this step,
- please DO NOT press[A button] again, you can press[B button] or [HOME button]

Solution 2:

because of Bluetooth pairing problems between NS Switch and controller, if you can't finish the first connection, please restart your NS Switch as below and try again.

- Hold the power button located on the top of the Switch for around 5 seconds
- Under sleep mode, you will see "power Options"
- Under the Power Option, you can choose to restart or turn the power off

How to wake up your controller

- When the controller is in sleep mode, you should wake up your controller with a short press [A, B, X, Y Button], LED channel light 1-4 will blink

Automatic power-off & Sleep Function

Status	
When connecting the switch for the first time	If the first connection can't be completed, after 60 seconds, th
When the controller is connected	It will sleep in accordance with the host system's sleep setting

Battery Warnings

- This controller works ONLY with the battery pack LI-ON 3.7V/600mAh built-in.
- Do not use the product if it appears to be damaged or leaking, showing discoloration, shape or any other

changes.

- If battery leakage occurs avoid contact with skin, clothes, and wipe off any deposit. if contact occurs, immediately wash thoroughly and check with a doctor.
- Make sure you keep the controller, clean and dry, away from liquids, dust and dirty Do not expose it to extreme weather conditions(heat and cold)or extreme fluctuations in air moisture.
- This product is ONLY for HOME use only. recycle it accordingly, not into domestic waste.

Reset function

- When the controller is out of order, which can be reset by poking the reset key at the back of it



How to charge the controller

The Pro Controller can be charged in the following ways:

While connected to the N Switch dock.

- Connect the N Switch AC adapter to the dock and then to a wall outlet.
- **Note:** In order to charge the Pro Controller, the N Switch console does not need to be docked.
- Connect the USB charging cable included with the Pro Controller to the controller and then to an available USB port on the dock.



While connected directly to the Nintendo Switch AC adapter.

- Connect the N Switch AC adapter directly to the Pro Controller and then to a wall outlet.



Additional Information:

- It takes approximately six hours in order for the N Switch Pro Controller to Tully charge.
- Once the Pro Controller is fully charged, the recharge LED beside the USB connector will shut ott.

Specification

Battery	Built-in polymer lithium battery
Battery using time	About 22 hours
Charging time	About 2 hours
Charging method	USB DC 5V
Charging current	< 500mA
External dimensions (width X height X depth)	Approx. 157x110x57mm
Mass	Approx.200g
Charging port	Type C
Vibration function	Supports double motor
Motion sensor	Six-axis gyroscope sensor

How to upgrade your switch controller

- When Nintendo updates the system in the future, In order to prevent a mismatch between system and controller. We'll also provide upgrading programs
- If your controller works well with the NS switch, DO NOT update your controller, which may be caused the controller's system confusion

Nintendo switches is a registered trademark or a trademark of Nintendo Inc, in Japan and/or other countries. This product is not designed, manufactured, approved, sponsored, or endorsed by Nintendo. All trademarks belong to their respective owners.

