

NINJA®

BC251EUSL Blast Max Portable Blender



NINJA BC251EUSL Blast Max Portable Blender User Guide

[Home](#) » [Ninja](#) » NINJA BC251EUSL Blast Max Portable Blender User Guide 

Contents

- 1 NINJA BC251EUSL Blast Max Portable Blender
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 BATTERY USE
- 4 PARTS
- 5 CHARGING
- 6 BEFORE FIRST USE
- 7 USING THE CONTROL PANEL
- 8 USING THE BLENDING VESSEL
- 9 CARE & MAINTENANCE
- 10 TROUBLESHOOTING GUIDE
- 11 FCC Statement
- 12 TECHNICAL SPECIFICATIONS
- 13 Documents / Resources
 - 13.1 References







NINJA®

NINJA BC251EUSL Blast Max Portable Blender



IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

| | |
|---|---|
|  | Read and review instructions for operation and use. |
|  | Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored. |
|  | For household use only. |
|  | Indicates location to attach cable for charging unit. |
|  | Do not immerse in any liquid. |
|  | Indicates a specific separate supply unit is required for connecting electrical equipment to the supply mains. Use only with supply until that the type reference is input 100-240V~ 50/60Hz 0.5A / output 13.3V d.c. 0.75A. |
| When using electrical appliances, basic safety precautions should always be followed, including the following: | |

WARNING: To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

1. Read all instructions prior to using the appliance and its accessories.
2. Use only a power supply with an extra low voltage corresponding to the marking on the bottom of the motor base.
3. ALWAYS exercise care when cleaning the CrushBlade Assembly inside the vessel. The blades are sharp, handle carefully. Failure to use care when handling the CrushBlade Assembly will result in a risk of laceration.

4. Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp blades that can cause injury if mishandled.
5. Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
6. Before use, wash all parts that may contact food. Follow washing instructions covered in this Owner's Guide.
7. DO NOT blend hot, effervescent, or carbonated liquids, as doing so may cause pressure build-up, resulting in risk of burns or other injuries to the user.
8. DO NOT fill the blending vessel past the MAX FILL line.
9. Blades are sharp. Handle carefully.
10. Keep hands, hair, and clothing out of the vessel when loading and operating.
11. DO NOT put your hands inside the vessel or anywhere near the CrushBlade Assembly. Blades can still activate when the sip lid is removed. Remove utensils prior to processing. Failure to remove may cause the blending vessel to be damaged or to shatter, which may cause personal injury.
12. To protect against the risk of fire from battery damage, DO NOT submerge the motor base in any form of liquid.
13. DO NOT store outdoors or allow the motor base to come into contact with any liquid.
14. DO NOT allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
15. This appliance is NOT intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. Before each use, inspect CrushBlade Assembly for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
17. DO NOT attempt to sharpen blades.
18. DO NOT allow any part of the unit to contact hot surfaces, including stoves and other heating appliances.
19. ALWAYS use the appliance on a dry and level surface.
20. Keep hands, hair, and clothing out of the vessel when loading and operating.
21. ONLY use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
22. During operation and handling of the appliance, avoid contact with moving parts.
23. DO NOT operate the appliance with an empty container.
24. DO NOT microwave any containers or accessories provided with the appliance.
25. DO NOT perform grinding operations.
26. DO NOT attempt to defeat the interlock mechanism. Ensure the vessel and sip lid are properly installed before operation.
27. DO NOT expose the containers and accessories to extreme temperature changes. They may experience damage.
28. NEVER leave the appliance unattended while in use.
29. If you find unmixed ingredients sticking to the sides of the cup, turn off the appliance using the Power Button, and use a scraper to dislodge ingredients.
30. DO NOT attempt to remove the vessel and/or sip lid from the motor base while the CrushBlade Assembly is still spinning. Allow the appliance to come to a complete stop before removing lid and/or vessel.
31. DO NOT store ingredients for extended amounts of time before or after blending them. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure build-up that can pose a risk of injury.

 
32. If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, turn OFF the Ninja Blast Max Portable Blender using the Power Button and allow it to cool for at least 60 minutes before using again.
33. DO NOT process dry ingredients without adding liquid to the blending vessel. Unit is not intended for dry blending.
34. Operate ONLY with the lid in position as indicated in the instructions. Never put a hand in the jar when it is placed on the base unit. If food needs to be pushed down, use a suitable tool e.g. spatula.
35. DO NOT refrigerate or freeze the blender motor base.

BATTERY USE

1. The battery is the power source for the Ninja Blast Max Portable Blender. Carefully read and follow all charging instructions.
2. DO NOT incinerate this appliance even if it is severely damaged. The lithium-ion batteries can explode in a fire. Always properly recycle products powered by lithium-ion batteries.
3. Since there is no power cord, prevent accidental blade activation by ensuring the blender is turned OFF when not in use, while cleaning, or when drinking from the sip lid.
4. Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or screws. Shorting the battery terminals together increases the risk of fire or burns.
5. Under abusive conditions, liquid may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
6. This unit contains batteries that are only replaceable by skilled persons.
This unit contains batteries that are non-replaceable and moving parts that potentially present risk to the user.


PARTS

- A Sip Lid
- B Carry Handle
- C Blending Vessel with built-in CrushBlade Assembly
- D Motor Base
- E Charging Cord
- F Charging Port

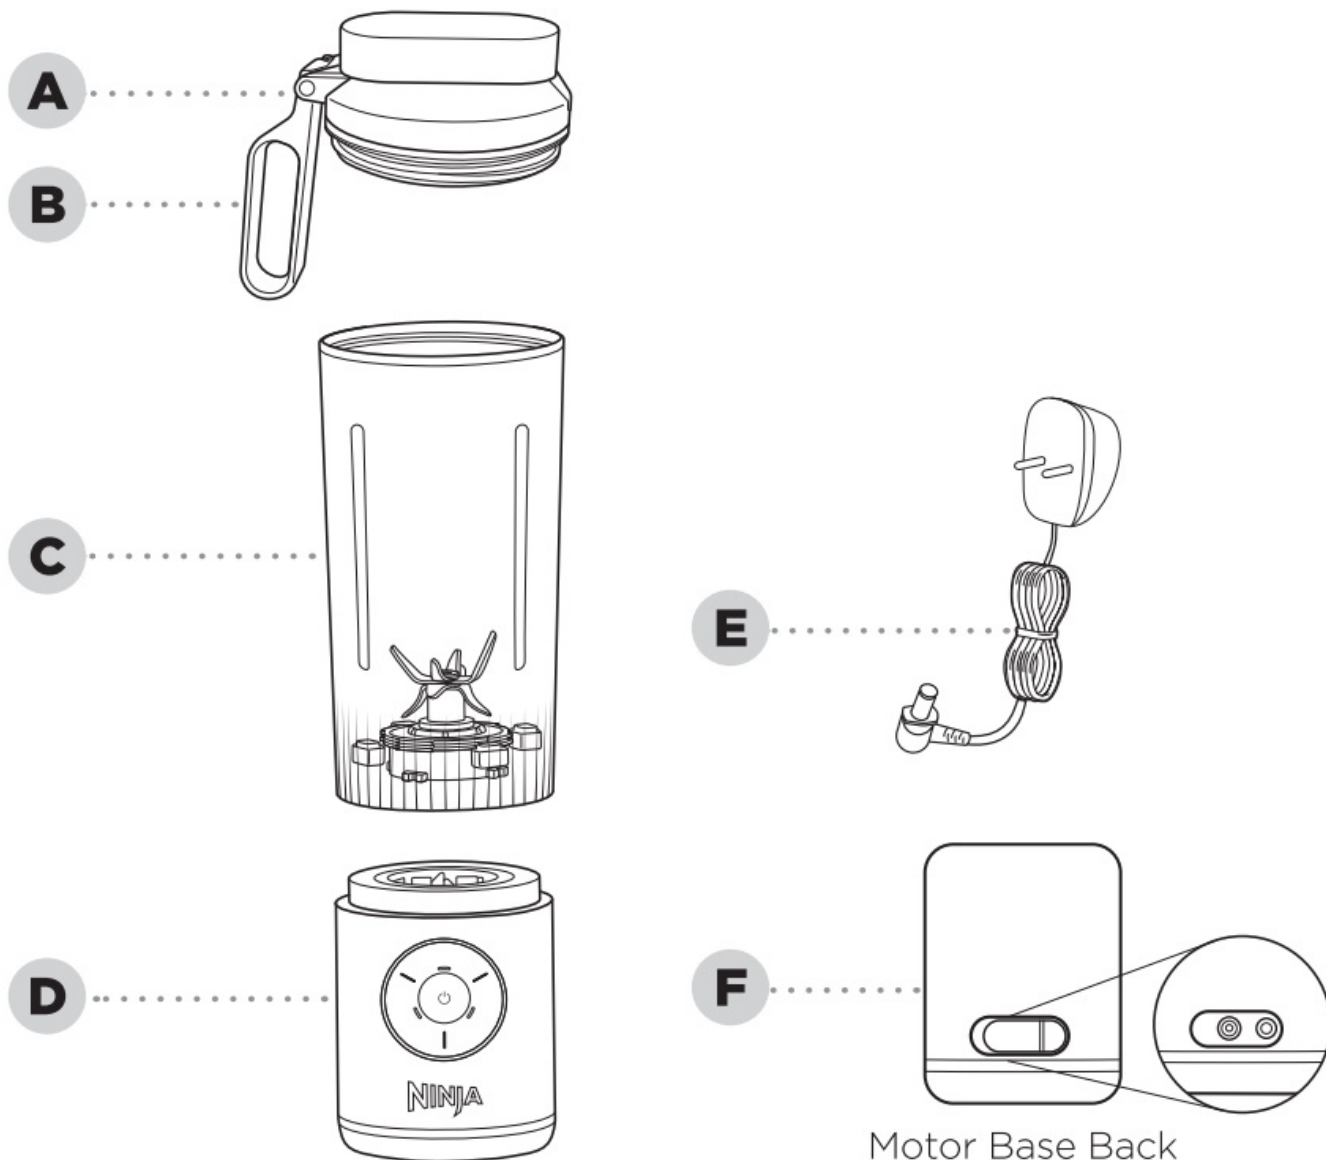

*Blending vessel size and quantity, accessories, and colour vary by model.

CHARGING

Charge the unit before first use with the provided charging cord. Charging port is located at the back of the motor base. When charging, the  LED will flash GREEN. When charge reaches 100%, the power icon LED will remain solid GREEN. A full charge may take up to 3 hours. Refer to the LED section for additional information on charging states.

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

NOTE:

- All attachments are BPA free. All attachments EXCEPT the motor base are top-rack dishwasher safe. DO NOT use a heated dry cycle. Ensure the vessel is removed from the motor base before placing the vessel in the

dishwasher. Exercise care when handling CrushBlade Assembly.

- Thoroughly rinse and air-dry all appropriate parts.

Remove all packaging materials from the unit. Exercise care when unpacking CrushBlade Assembly, as the blades are sharp.

 
To clean the vessel and lid, remove the vessel from the motor base, remove the lid, and add warm water up to the MIN LIQUID line. Next, add a small drop of dish soap. Securely attach the lid to the vessel, attach the vessel to the motor base, and blend. After the blend has completed, remove the vessel from the motor base and empty the contents into a sink. Rinse the vessel and lid with warm water then let air-dry.

DO NOT submerge the motor base in water when cleaning. Exercise care when handling the CrushBlade Assembly, as the blades are sharp.

USING THE CONTROL PANEL

POWER BUTTON

Power unit **ON** and **OFF**. Battery icon LEDs display battery status.

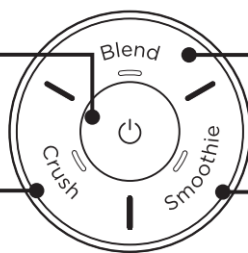

BLEND






30-second manual blend mode for smoothies and protein shakes.

CRUSH

Auto-iQ program for ice crushing power for frozen drinks. Program runs for less than 60 seconds.

SMOOTHIE




Auto-iQ program for fresh and frozen fruit smoothies. Program runs for less than 60 seconds.


| LED Shows | BATTERY LEDs |
|--|--|
| All programs solid WHITE | Ready to blend—  displays battery life color. |
|  solid GREEN | Fully charged. |
|  flashing GREEN | Charging state. |
|  solid RED | Low battery—charge unit. |
|  flashing RED | Dead battery—requires charge. |

| LED Shows | TROUBLESHOOTING | Solutions |
|--|-----------------------------|--|
| All Programs Flashing WHITE | Vessel Improperly Installed | Re-install the vessel on the motor base, twisting clockwise until the vessel clicks into place. |
| Selected Blend Program Flashing PURPLE | Blades Blocked | Ingredients are stuck in blades. Add more liquid or remove the vessel from the motor base and shake the blockage free before reinstalling the vessel and blending again. |
| Programs Solid Orange | Motor Base Overheating | Let the motor base sit at room temperature to cool down for at least 60 minutes before blending again. Motor base will not charge when overheated. |
| Power LED Flashing RED & GREEN | Incorrect Charger | Unplug and find correct 13.3V DC==, 0.75A charger. |
| All LEDs Flashing RED | Motor Operation Error | Call Customer Service. |

USING THE BLENDING VESSEL


IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

 1. Install the vessel onto the motor base, rotating clockwise until it clicks into place.
2. Turn unit ON by pressing the  button until all program LEDs illuminate solid WHITE and the  illuminates, displaying the remaining battery life color. Ensure the unit is fully charged ( is solid GREEN) before loading the vessel.

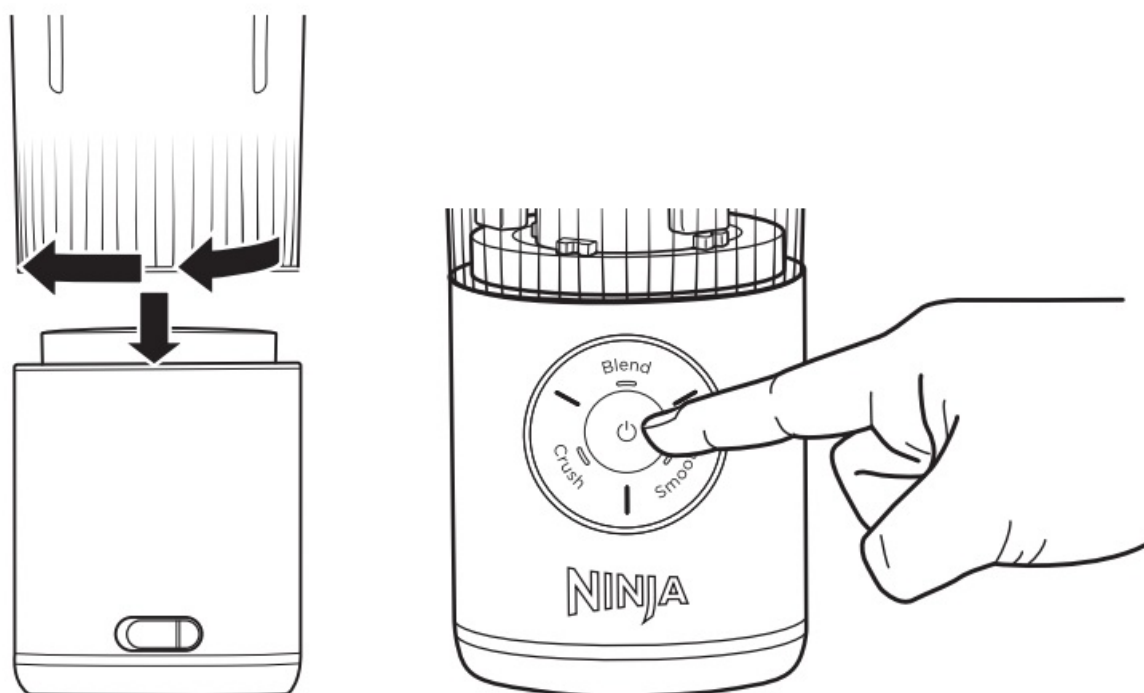


3. Remove lid from vessel and add ingredients, starting with liquids then solid ingredients. If using ice, always add last. DO NOT fill ingredients past the MAX FILL line. Secure lid onto the vessel, twisting clockwise to tighten.
4. For a 30-second blend, press the BLEND button. For ingredients including fresh or frozen fruit, press

 
SMOOTHIE, and for frozen drinks with just ice and liquid, press CRUSH. Press the BLEND button to re-blend if necessary.'

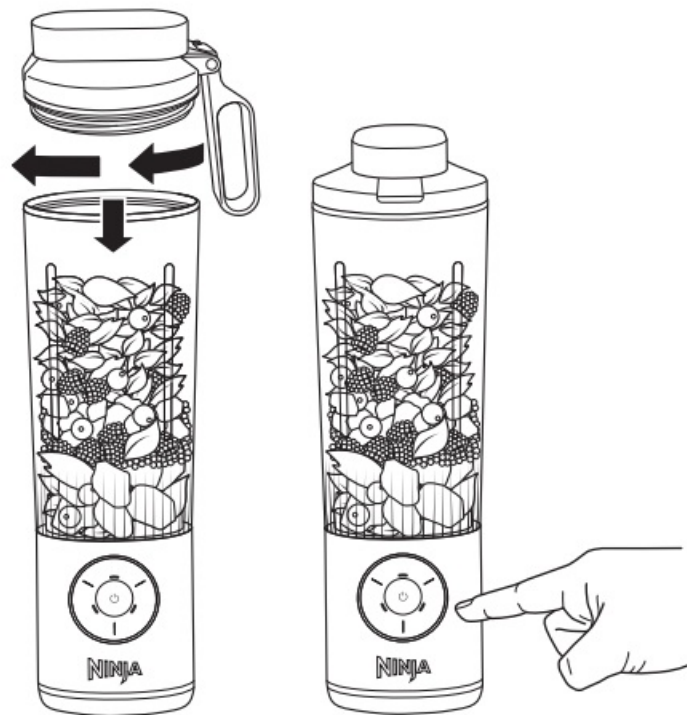

 5. When blending is complete, remove the vessel from the motor base by rotating the vessel counterclockwise and lifting up. DO NOT remove the vessel before the blade has stopped moving.
6. Open the sip lid to sip or pour the contents out into another container.

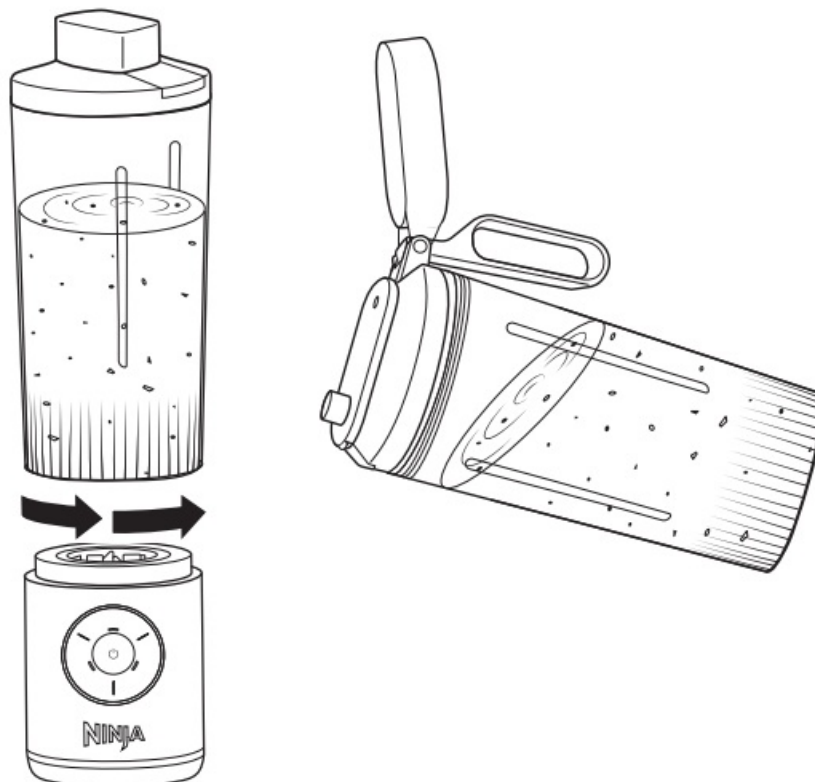

 7. Power OFF the unit by pressing the O button. If you want to drink with the motor base attached, turn the motor base OFF before drinking.
8. Refer to the Care & Maintenance section for cleaning and storage instructions.

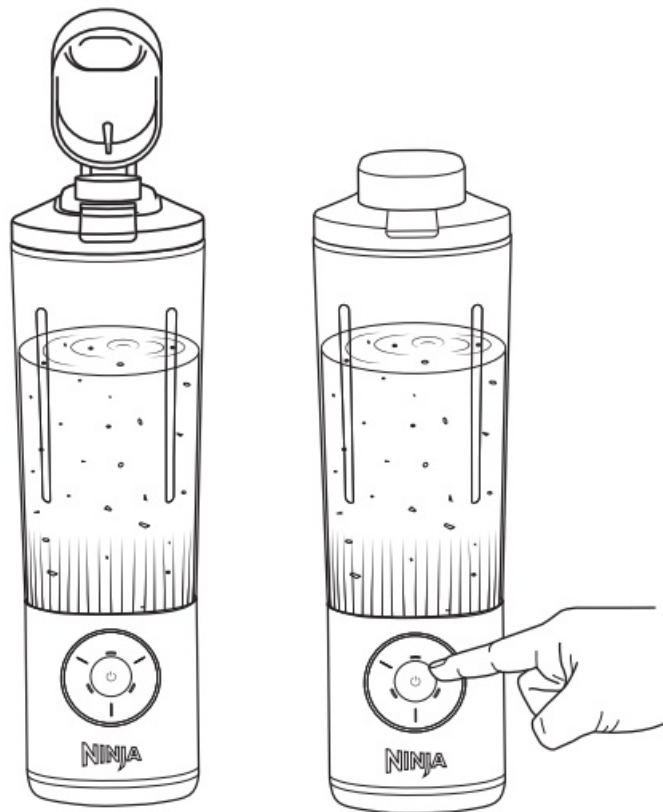

CARE & MAINTENANCE

CLEANING

Blades can still operate when the lid is removed. Always remove the vessel from the motor base before cleaning the vessel.

Quick Clean

Remove the vessel from the motor base and remove lid from the vessel. Add warm water to the MIN LIQUID line then add 1 small drop of dish soap. Secure the lid onto the vessel, attach the vessel onto the motor base, and press BLEND. Let blend for a few seconds, then press the BLEND button again. Remove the vessel from the motor base, empty the contents, and rinse the vessel and lid with warm water. If needed, wipe the motor base with a damp cloth.

Hand-Washing

Remove the vessel from the motor base and wash the lid and vessel with warm, soapy water. Use a dishwashing utensil to clean the CrushBlade Assembly inside the vessel. Exercise care when cleaning the CrushBlade Assembly as the blades are sharp. Empty contents and rinse vessel and lid with warm water. DO NOT expose the motor base to water or other liquids. Let all parts air-dry.

Motor Base

The motor base is NOT dishwasher safe and CANNOT be exposed to or submerged in water or other liquid.

DEEPER CLEAN

Dishwasher

Vessel and sip lid are top-rack dishwasher safe. DO NOT use a heated dry cycle. Ensure the vessel and sip lid are removed from the motor base before placing them in the dishwasher.

STORING

Store the unit upright in a cool, dry environment.

DO NOT store blended or unblended ingredients in the vessel with the CrushBlade Assembly for prolonged periods of time.

DO NOT stack items on top of the vessel. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard. If your unit needs servicing, call Customer Service at 0800 862 0453. So we may better assist you, please register your product online at registeryourninja.eu and have the product on hand when you call.

PRODUCT REGISTRATION

Please visit <https://ninjakitchen.eu/> to register your new Ninja® product within twenty eight (28) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit ninjakitchen.eu.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn OFF unit before troubleshooting.

Ensure the unit is not charging when troubleshooting. Ensure the unit is fully charged and vessel is properly aligned.

Control panel doesn't turn off.

- Press the O button to turn the unit ON and OFF.

Doesn't mix well; ingredients get stuck.

- When filling the vessel, start with liquid then fresh fruit or veggies, followed by leafy greens or herbs. Then add seeds, powders, or nut butters. Finish with ice or frozen ingredients.
- If ingredients are routinely getting stuck, adding some liquid will usually help. You can also shake the blender while blending or turn the blender upside down, start a blend cycle, and turn it right side up to move ingredients while blending.

Sip lid is hard to assemble onto the vessel.

- Set the assembled motor base and vessel on a level surface. Place the sip lid on top of the vessel and align the threads so the sip lid sits flat. Turn clockwise until you have a tight seal.

Vessel is hard to assemble onto the motor base.

Set the motor base on a level surface. Place the vessel on top of the motor base and align the threads so the vessel sits flat. Turn clockwise until the vessel clicks into place. When the vessel is properly installed, the program LEDs on the control panel will be white and the O button will display the current battery level.

FCC Statement

FCC WARNINGS

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the product and receiver. Connect the product into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: This product may not cause harmful interference, and this product must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this product.

TWO (2) YEAR LIMITED GUARANTEE

When a consumer buys a product in Europe, they get the benefit of legal rights relating to the quality of the product (your statutory rights). You can enforce these rights against your retailer. We give you an additional manufacturer's guarantee of two years. These terms and conditions relate to our manufacturer's guarantee only – your statutory rights are unaffected. The conditions below describe the prerequisites and scope of our guarantee. They do not affect your statutory rights or the obligations of your retailer and your contract with them.

Ninja* Guarantees

Every Ninja machine comes with a free parts and labour guarantee. You'll also find online support at www.ninjakitchen.eu

How do I register my Ninja guarantee?

You can register your guarantee online within 28 days of purchase. To save time, you'll need the following information about your product.

- Date you purchased the unit (receipt or delivery note).
- To register online, please visit www.ninjakitchen.eu

IMPORTANT:

- The guarantee will only cover your product from the date of purchase.
- Please keep your receipt at all times. Should you need to use your guarantee, we will need your receipt to verify the information you have supplied to us is correct. The inability to produce a valid receipt may invalidate your guarantee. What are the benefits of registering my free

Ninja guarantee?

When you register your guarantee we'll have your details to hand if we ever need to get in touch. You can also receive tips and advice on how to get the best out of your Ninja unit and hear the latest news about new Ninja® technology and launches. If you register your guarantee online, you'll get instant confirmation that we've received your details.

What is covered by the free Ninja guarantee?

Repair or replacement of your Ninja machine (at Ninja's discretion), including all parts and labour. A Ninja guarantee is in addition to your legal rights as a consumer.

What is not covered by the free Ninja guarantee?

1. Normal wear and tear of wearable parts (such as accessories). Replacement parts are available for purchase at www.ninjakitchen.eu
2. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance or damage due to mishandling in transit.
3. Damage caused by maintenance not authorised by Ninja.

Where can I buy genuine Ninja spares and accessories?

You'll find a full range of Ninja spares and replacement parts/accessories for all Ninja machines at www.ninjakitchen.eu. Please remember that damage caused by the use of non-Ninja spares may not be covered under your guarantee.



REGISTER YOUR PURCHASE

- ninjakitchen.eu
- Scan QR code using mobile device

RECORD THIS INFORMATION

- Model Number:

 
- Serial Number:
- Date of Purchase: (Keep receipt)
- Store of Purchase:

TECHNICAL SPECIFICATIONS

Voltage: 13.3V DC, 0.75A

- @ninkakitchen

Documents / Resources

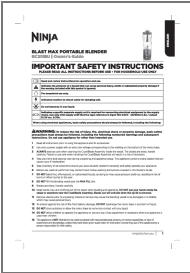

[NINJA BC251EUSL Blast Max Portable Blender](#) [pdf] User Guide
BC251EUSL Blast Max Portable Blender, BC251EUSL, Blast Max Portable Blender, Max Portable Blender, Portable Blender, Blender

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.