

NINJA BL610 Professional Blender Total Crushing Juicer Owner's Manual

Contents

1 BL610

1.1 OWNER'S GUIDE

1.1.1 IMPORTANT SAFETY INSTRUCTIONS

1.1.1.1 POLARIZED PLUG

1.1.1.2 TECHNICAL SPECIFICATIONS

1.1.2 Getting Started

1.1.2.1 FEATURES:

1.1.3 Using the Ninja® Professional Blender 1000

1.1.3.1 BEFORE FIRST USE

1.1.3.2 HOW TO ASSEMBLE

1.1.3.3 HOW TO USE

1.1.4 Care & Maintenance

1.1.4.1 HOW TO CLEAN

1.1.4.2 HOW TO STORE

1.1.5 Replacement Parts

1.1.5.1 ORDERING REPLACEMENT PARTS

1.1.6 Blending Chart

1.1.7 Troubleshooting Guide

1.1.8 ONE (1) YEAR LIMITED WARRANTY

1.1.9 Product Registration

2 Documents / Resources

2.1 References

BL610



OWNER'S GUIDE



www.ninjakitchen.com

1.877.646.5288

IMPORTANT SAFETY INSTRUCTIONS

For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® PROFESSIONAL BLENDER 1000.

POLARIZED PLUG

WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

1. To protect against electrical shock, do not submerge the blender or allow the power cord to come into contact with water or any other liquid.
2. Close supervision is necessary when any appliance is used by or near children.
3. Never leave an appliance unattended when in use.
4. Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.

5. **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
6. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. Return the appliance to EURO-PRO Operating LLC for examination, repair or adjustment.
7. **DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
8. Always use appliance on a dry, level surface.
9. Keep hands, hair, clothing, as well as utensils out of container while blending to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the blender is not running.
10. **CAUTION: Blade assembly is sharp, handle with care. When handling the blade assembly, always hold by the shaft.**
11. Avoid contact with moving parts.
12. **DO NOT attempt to sharpen blades.**
13. **DO NOT** use the appliance if blade assembly is bent or damaged.
14. To reduce risk of injury, never place the blade assembly on base without pitcher properly attached.
15. **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
16. The use of attachments or accessories not included with the unit such as canning jars, is not recommended by the manufacturer and may result in fire, electric shock or personal injury.
17. **DO NOT** remove the pitcher from the motor base while the blender is in operation.
18. To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the cutting blades are properly installed before operating the appliance.
19. **DO NOT** expose pitcher to extreme temperature changes.
20. **CAUTION: DO NOT BLEND HOT LIQUIDS.**
21. **DO NOT** overfill.
22. **DO NOT** operate the appliance empty.
23. To reduce the risk of burns, always allow the appliance to cool before taking off parts and before cleaning.
24. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 15 minutes before using again.
25. **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.



WARNING: Extension cords are not recommended for use with this product.

SAVE THESE INSTRUCTIONS

THIS BOOK COVERS MODEL NUMBER:

BL610 30

TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz.

 
Power: 1000 Watts

Pitcher Capacity: 72 ounces (2.1 L)

Euro-Pro and Ninja are trademarks of Euro-Pro Operating LLC.


Thank you for purchasing the Ninja® Professional Blender 1000.

Getting Started

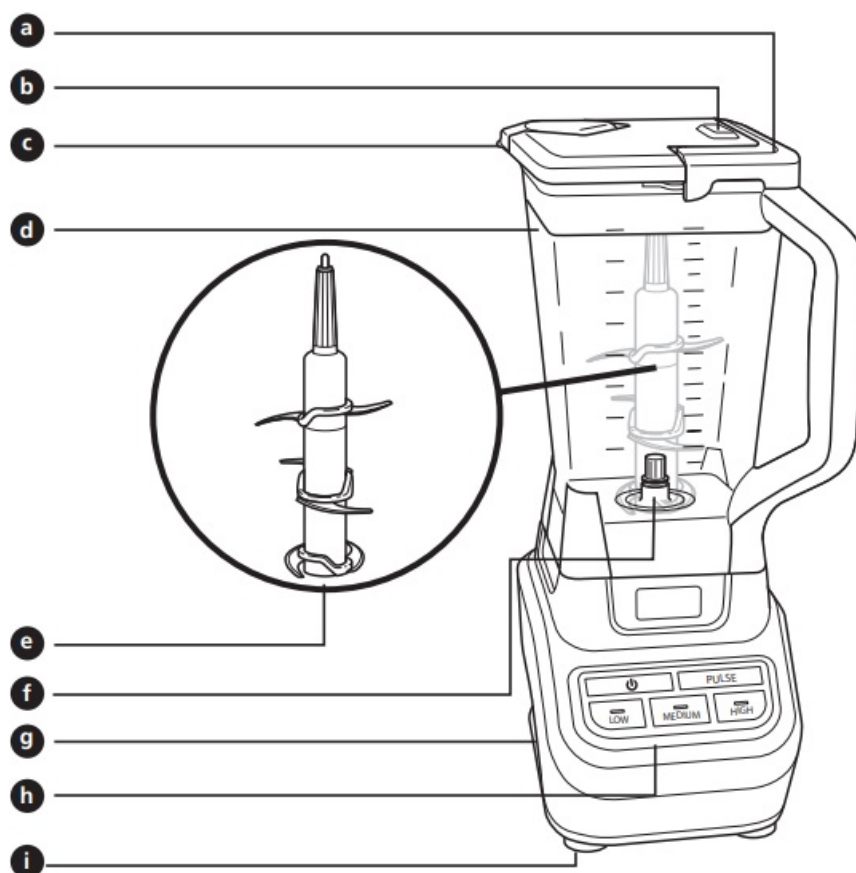

- a** Lid with Locking Handle
- b** Locking Handle Release Button
- c** Pouring Spout with Cap
- d** Pitcher
- e** Ninja® Stacked Blade
- f** Gear Shaft
- g** Motor Base
- h** Control Panel
- i** Non Slip Bottom
- j** Power Cord (not shown)
- k** Cord Storage (in back) (not shown)

 The Ninja® Professional Blender 1000 is a high powered kitchen tool that is perfect for ice crushing, blending, pureeing and controlled processing. Create all of your favorite recipes quickly and easily with just one touch of a button. For best results, be sure to carefully read all the instructions contained in the manual before using this appliance.

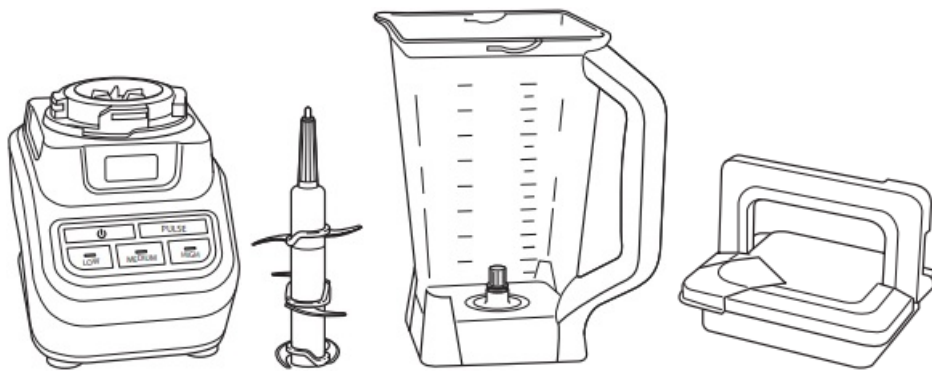

FEATURES:

- 1000 Watt Motor Base
- Total Crushing™ Technology
- Extra Large 72 oz. Pitcher
- Easy Lock Lid with Built-In Pour Spout
- Easy Clean Control Panel
- BPA Free Pitcher
- Cord storage

Using the Ninja® Professional Blender 1000

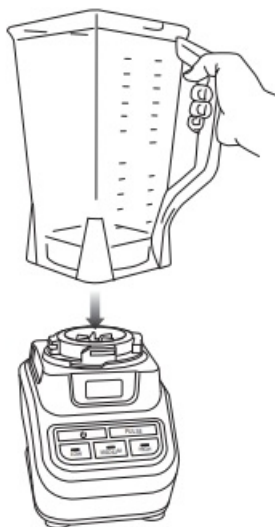 


Fig. 1



Fig. 2



Fig. 3a



Fig. 3b

BEFORE FIRST USE

1 Remove all packaging material and labels from the appliance.

2 Wash the lid, pitcher and blade assembly in warm, soapy water with a soft cloth. **Use caution when washing**

the blade assembly as the blades are very sharp.

3 Rinse and dry thoroughly.

4 The pitcher, lid and blade assembly are all dishwasher safe. It is recommended that the lid and blade assembly go on the top rack. Ensure that the blade assembly is removed from the pitcher before placing in the dishwasher.

5 The motor base can be wiped clean with a damp cloth. Make sure the unit is not plugged into the electrical outlet when using the damp cloth to clean the base.

HOW TO ASSEMBLE

⚠ CAUTION: Make sure that the motor base is unplugged from the power source.

1 Place the motor base on a clean, dry, level surface.

2 Lower the pitcher onto the motor base. **(Fig. 1)**

3 Rotate the pitcher to the left as far as it will go. As the pitcher rotates, it will lower and the safety tabs on the bottom of the pitcher will slide under the safety tabs on the top of the motor base. **(Fig. 2)**

4 The pitcher can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. **(Fig. 3a, Fig. 3b)**

5 Holding the blade assembly by the shaft, place it onto the gear shaft inside the pitcher. **(Fig. 4)**
Ensure that the blade assembly fits around the gear shaft and that the blade shaft is standing straight.

⚠ CAUTION: Blades are sharp! Use extreme caution when handling the blades.
Always hold them by the shaft.

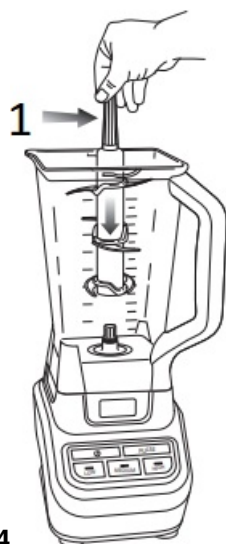 


Fig. 4

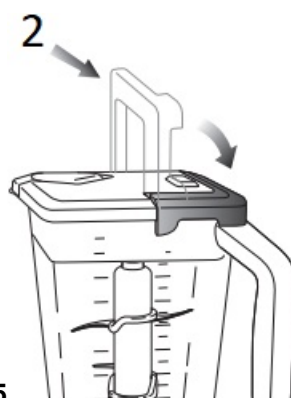 


Fig. 5

1. Shaft

2. Locking Handle

HOW TO USE

⚠ IMPORTANT: DO NOT attempt to operate the appliance without the lid on.

1 Place pitcher on motor base and insert the blade assembly. (See 'HOW TO ASSEMBLE'.)

2 Add the ingredients to the pitcher. Make sure your total of ingredients don't go higher than the highest measured marking line on the side of the pitcher.

⚠ IMPORTANT: Never add ingredients into the pitcher before placing the blades in first.

3 Place the lid onto the pitcher with the locking handle in the upright position and the pouring spout on the corner opposite the pitcher handle. Align the arrows (▼) located on the lid and pitcher handle. Ensure that the lid is completely seated and press the lid down into the pitcher. Press the locking handle down so that the latches on the lid fit under the tabs on the pitcher. (**Fig. 5**)

NOTE: If you need to add additional ingredients while the blender is processing, open the pouring spout cap and pour the ingredients in through the opening.

 
 
4 Plug the power cord into the electrical outlet and press on the power button (⏻).

NOTE: As a safety feature, the power button (⏻) will flash and the motor will not work if the pitcher and lid are **not** installed correctly. When the pitcher and lid are installed properly, the power button (⏻) will be solid, indicating that the blender is ready for use.


5 Select the speed according to your blending requirements*:


- Use the LOW setting for processing and mixing.
- Use the MEDIUM setting for blending and ice crushing.
- Use the HIGH setting for pureeing and liquefying.
- Use the PULSE button for controlled chopping and processing.

* See Blending Chart.

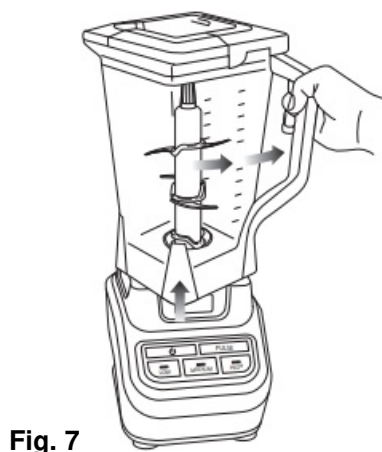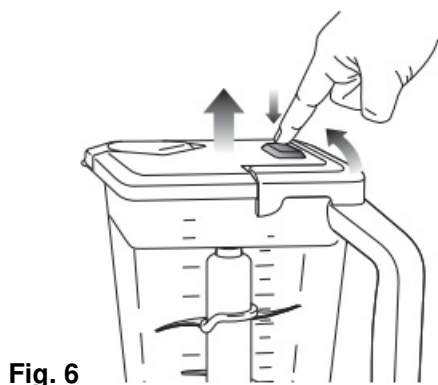

6 Press power button (⏻) or the same speed button a second time to stop the blades or press a different button to change the speed.


7 If the ingredients stick to the side of the pitcher, stop the appliance by pressing the power button () and wait for the blades to stop turning. Then remove the lid by pressing the release button, lifting the handle up and pulling straight up. **(Fig. 6)** Use a rubber spatula to dislodge the pieces, replace the lid and continue processing.

8 To remove the pitcher, press the power button () to turn the appliance 'Off'. Wait for the blades to stop moving before removing. **(Fig. 7)**

 **CAUTION:** Never remove the pitcher while the blender is still running.


9 Depending on the consistency of the contents, open the pouring spout cap and use the spout to empty liquid contents. For thicker consistencies, remove the lid and blade assembly carefully (by its shaft), then empty contents of the pitcher.

10 Unplug the appliance after use.

 **IMPORTANT:** Never run the appliance empty.


 **CAUTION: DO NOT BLEND HOT LIQUIDS.**


 **WARNING:** Secure the blender while in use by pressing down on the lid with one hand.

 **WARNING:** Never leave the blender unattended while in use.

Care & Maintenance

HOW TO CLEAN

 **CAUTION:** Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.

 **CAUTION: DO NOT** immerse the motor base into water or any other liquid. Clean with a damp sponge or cloth and wipe dry.

1 The pitcher, lid and blade assembly are all dishwasher safe. It is recommended that the lid and blade assembly be placed on the top rack.

2 You may also wash the blender by filling $\frac{3}{4}$ of the pitcher with warm water and a drop of dish washing detergent, placing the lid on the pitcher and pressing the pulse button a few times. Once clean, remove the pitcher from the motor base. Rinse the pitcher, blade assembly and lid under running water. Allow all the parts to dry before storing.

Use extreme caution when handling the blade assembly as blades are very sharp.

Please call customer service if any servicing needs to be performed on the appliance at 1- [877-646-5288](tel:877-646-5288).

HOW TO STORE

1 Store the Ninja® Professional Blender 1000 upright with the pitcher, blade assembly and cover on the motor base. Do not place anything on top.


2 Wrap the power cord around the cord storage hook in the back of the unit.

Replacement Parts


ORDERING REPLACEMENT PARTS

To order additional parts and accessories, please visit our website: www.ninjakitchen.com or feel free to contact customer service at 1-877-646-5288.

Blending Chart

B U T T O N	FUNCTION	USE
P O W E R 	On/Off	Always turn appliance 'Off' when not in use.
L O W	Processing & Mixing	Use to mix thin batters, gravies and marinades, scramble eggs, puree cooked foods and uncooked fruits and chop vegetables for dips and salsa.
M E D I U M	Blending & Ice Crushing	Use to grate hard cheeses, cream soups, beat dips, grind nuts, thorough chopping, blend sauces and spreads. Blend mixed drinks, powdered drinks or milk shakes. Crush ice cubes for snow cones, chilled beverages or frozen slushes.
H I G H	Pureeing & Liquefying	Use to mix smoothies, frappes, liquefy thick mixtures and blend whole fruits and vegetables.
P U L S E	Controlled Processing & Bursts of Power	Use to control chopping and processing.

Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Motor Doesn't Start or Blades Don't Rotate.	<p>Make sure the pitcher is securely placed on motor base.</p> <p>Make sure the lid is securely on pitcher in the correct position (align arrows).</p> <p>The blender is turned 'Off'. Press the power button () to turn 'On'.</p> <p>Check that the plug is securely inserted into the electrical outlet.</p> <p>Check the fuse or circuit breaker.</p> <p>The unit has overheated. Unplug and wait approximately 15 minutes before using again.</p>
Food is Unevenly Chopped.	Either you are chopping too much food at one time, or the pieces are not of even size and processing smaller amounts per batch.
Food is Chopped Too Fine or is Too Watery.	The food has been over-processed. Use PULSE button for controlled processing.
Food Collects On Lid or On the Sides of the Pitcher.	The mixture is too thick. Add more liquid.
You Cannot Achieve Snow From Solid Ice.	Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer and make sure that the pitcher is completely dry before adding ice.

Notes

EURO-PRO

ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from material defects and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This Limited Warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This Limited Warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This Limited Warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO Operating LLC**.

If your appliance fails to operate properly while in use under normal household conditions within the Limited Warranty period, you may return the complete appliance and accessories with proof of purchase and date, freight prepaid. For Customer Service support, call 1-[877-646-5288](tel:877-646-5288) or visit our website www.ninjakitchen.com.

If the appliance is found by **EURO-PRO Operating LLC** to be defective, in **EURO-PRO Operating LLC's** sole discretion, we will repair or replace it free of charge. Proof of purchase date and a check made payable to **EURO-PRO Operating LLC** in the amount of \$19.95 to cover the cost of return shipping and handling must be included.*

This Limited Warranty is extended to the original purchaser of the unit and excludes all other legal, implied and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of this Limited Warranty. In no event is **EURO-PRO Operating LLC** liable for incidental or consequential damages to anyone of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or from province to province.

***IMPORTANT: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your Limited Warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**

Please visit www.ninjakitchen.com or call **1-877-646-5288** to register your new **Ninja®** product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

 **1.877.646.5288**

www.ninjakitchen.com

Euro-Pro Operating LLC
US: Newton, MA 02459
CAN: Ville St-Laurent, QC H4S 1A7

1-[877-646-5288](tel:18776465288)

www.ninjakitchen.com

Copyright © 2014 Euro-Pro Operating LLC.


Euro-Pro & Ninja are trademarks of Euro-Pro Operating LLC.

Printed in China

Illustrations may differ from actual product.

BL610.30.E-F-S.140207.6

Documents / Resources

	<p>NINJA BL610 Professional Blender Total Crushing Juicer [pdf] Owner's Manual BL610 Professional Blender Total Crushing Juicer, Blender Total Crushing Juicer, Total Crushing Juicer, Crushing Juicer</p>
---	--

References

- [control.Se](http://control.se)
- 13.no
- [The domain name general.la is for sale](#)
- llc.si
- 17.no
- [N Ninja® Kitchen Appliances | Air Fryers, Blenders, Grills & More](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.