



BL682ANZMN Nutri Ninja Nutrient Extractor Processor Owner's Manual

[Home](#) » [Ninja](#) » **BL682ANZMN Nutri Ninja Nutrient Extractor Processor Owner's Manual** 



**Nutri Ninja Nutrient Extractor Processor
Owner's Manual**



THANK YOU
for purchasing The Nutri Ninja®|Ninja® Blender

REGISTER YOUR PURCHASE

AU ninjakitchen.com.au

NZ ninjakitchen.co.nz

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____ (Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220V–240V~ 50–60Hz

Power: 1500 Watts

Pitcher Capacity: 2.1 L

Max Liquid: 2 L

Bowl Capacity: 1.8 L

Nutri Ninja
Cup Capacity: 500 ml 650 ml 900 ml

PLEASE READ IT CAREFULLY AND KEEP IT FOR FUTURE REFERENCE

These instructions are designed to help you get a complete understanding of your new Nutri Ninja|Ninja Blender
If you have any questions, please call our Customer Service line at AU 02 8801 7666 or NZ 0800 112 660

Contents

1

IMPORTANT SAFETY INSTRUCTIONS

2

PARTS

3

BEFORE FIRST USE

4

FEATURES

5

USING THE NINJA® BLENDER

6

USING THE NINJA PROCESSOR BOWL

7

USING THE CHOPPING BLADE ASSEMBLY

8

USING THE DOUGH BLADE ASSEMBLY

9

USING THE NUTRI NINJA CUPS

10

PROGRAMS, SPEED SETTINGS & USES

11

CARE & MAINTENANCE

12

TROUBLESHOOTING GUIDE

13

Mann & Noble

14

Documents / Resources

14.1

References

15

Related Posts

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

	Read and review instructions for operation and use
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored
	For indoor and household use only
When using electrical appliances, basic safety precautions should always be followed, including the following:	

WARNING

To reduce the risk of injury, fire, electrical shock, or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions Do not use the appliance for other than intended use

1. Read all instructions prior to using the appliance and its accessories.
2. Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
3. Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
4. Take inventory of all contents to ensure you have all parts needed to properly and safely operate your

 
appliance.

5. Blades are sharp. Handle carefully.
6. This product is provided with a Stacked Blade Assembly and a Chopping Blade Assembly. ALWAYS exercise care when handling blade assemblies. The blade assemblies are sharp and are NOT locked in place in their containers. The blade assemblies are designed to be removable to facilitate cleaning and replacement if needed. ONLY grasp the blade assembly by the top of the shaft. Failure to use care when handling the blade assemblies will result in a risk of laceration.
7. ALWAYS exercise care when handling the Pro Extractor Blades™ Assembly.
The blades are sharp. ONLY grasp the Pro Extractor Blades Assembly by the outer perimeter of the blade assembly base. Failure to use care when handling the blade assembly will result in a risk of laceration.
8. Turn the appliance OFF, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. NEVER unplug by grasping and pulling the flexible cord.
9. Before use, wash all parts that may contact food. Follow the washing instructions covered in this instruction manual.
10. Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for a replacement.
11. DO NOT use this appliance outdoors. It is designed for indoor household use only.
12. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for servicing.
13. This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact SharkNinja for service.
14. Extension cords should NOT be used with this appliance.
15. To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
16. DO NOT allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
17. DO NOT allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
18. ALWAYS use the appliance on a dry and level surface.
19. DO NOT allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
20. This appliance is NOT intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
21. ONLY use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
22. NEVER place a blade assembly on the motor base without it first being attached to its corresponding container (pitcher or cup) with the lid also in place.
23. Keep hands, hair, and clothing out of the container when loading and operating.
24. During operation and handling of the appliance, avoid contact with moving parts.
25. DO NOT fill containers past the MAX FILL or MAX LIQUID lines.
26. DO NOT operate the appliance with an empty container.

27. DO NOT microwave any containers or accessories provided with the appliance.
28. NEVER leave the appliance unattended while in use.
29. DO NOT blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
30. DO NOT process dry ingredients with the Single-Serve Blending Cup and Pro Extractor Blades™ Assembly, the pitcher and Stacked Blade Assembly, or the processor bowl and Chopping Blade Assembly.
31. To reduce the risk of injury, never place Chopping Blade Assembly or discs on base without first putting the bowl properly in place.
32. DO NOT perform grinding operations with the Single-Serve Blending Cup and Pro Extractor Blades Assembly, the pitcher, and Stacked Blade Assembly, or the processor bowl and Chopping Blade Assembly.
33. NEVER operate the appliance without lids and caps in place. DO NOT attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
34. Before the operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
35. Keep hands and utensils out of containers while chopping to reduce the risk of severe personal injury or damage to the blender/food chopper. A scraper may be used ONLY when the blender or processor is not running. When using the processor, always use a food pusher to add food. NEVER add food by hand.
36. If you find unmixed ingredients sticking to the sides of the cup, stop the appliance, remove the blade assembly, and use a scraper to dislodge ingredients.
37. DO NOT open the pitcher's pour spout cap while the blender is operating.
38. If you find unmixed ingredients sticking to the sides of the pitcher, stop the appliance, remove the lid, and use a spatula to dislodge ingredients. NEVER insert your hands into the pitcher, as you may contact one of the blades and experience a laceration.
39. DO NOT attempt to remove the container or lid from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lids and containers.
40. If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 30 minutes before using it again.
41. DO NOT expose the containers and accessories to extreme temperature changes. They may experience damage.
42. Upon completion of processing, ensure the blade assembly is removed BEFORE emptying the container's contents. Remove the blade assembly by carefully grasping the top of the shaft and lifting it from the container. Failure to remove the blade assembly before emptying the container results in a risk of laceration.
43. If using the pitcher's pour spout, hold the cover in place on the container or ensure the lid lock is engaged when pouring to avoid the risk of injury.
44. Remove the Pro Extractor Blades™ Assembly from the Single-Serve Cup upon completion of blending. DO NOT store ingredients before or after blending them in the cup with the blade assembly attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. For ingredient storage in the cup, use only the Spout Lid to cover.
45. The maximum wattage rating for this appliance is based on the configuration of the Pro Extractor Blades Assembly and Single-Serve Cup. Other configurations may draw less power or current.
46. DO NOT submerge the motor base or control panel in water or other liquids. DO NOT spray the motor base or control panel with any liquid.

47. DO NOT attempt to sharpen blades.
48. Turn off the appliance and unplug the motor base before cleaning.
49. The unit is intended to create a dough ball.
It is NOT intended to continuously knead. After the dough ball forms, additional kneading should be done by hand on a work surface. If the unit moves excessively on the work surface, remove the dough ball and knead by hand.
50. DO NOT misuse the appliance to avoid the potential risk of injury.

PARTS

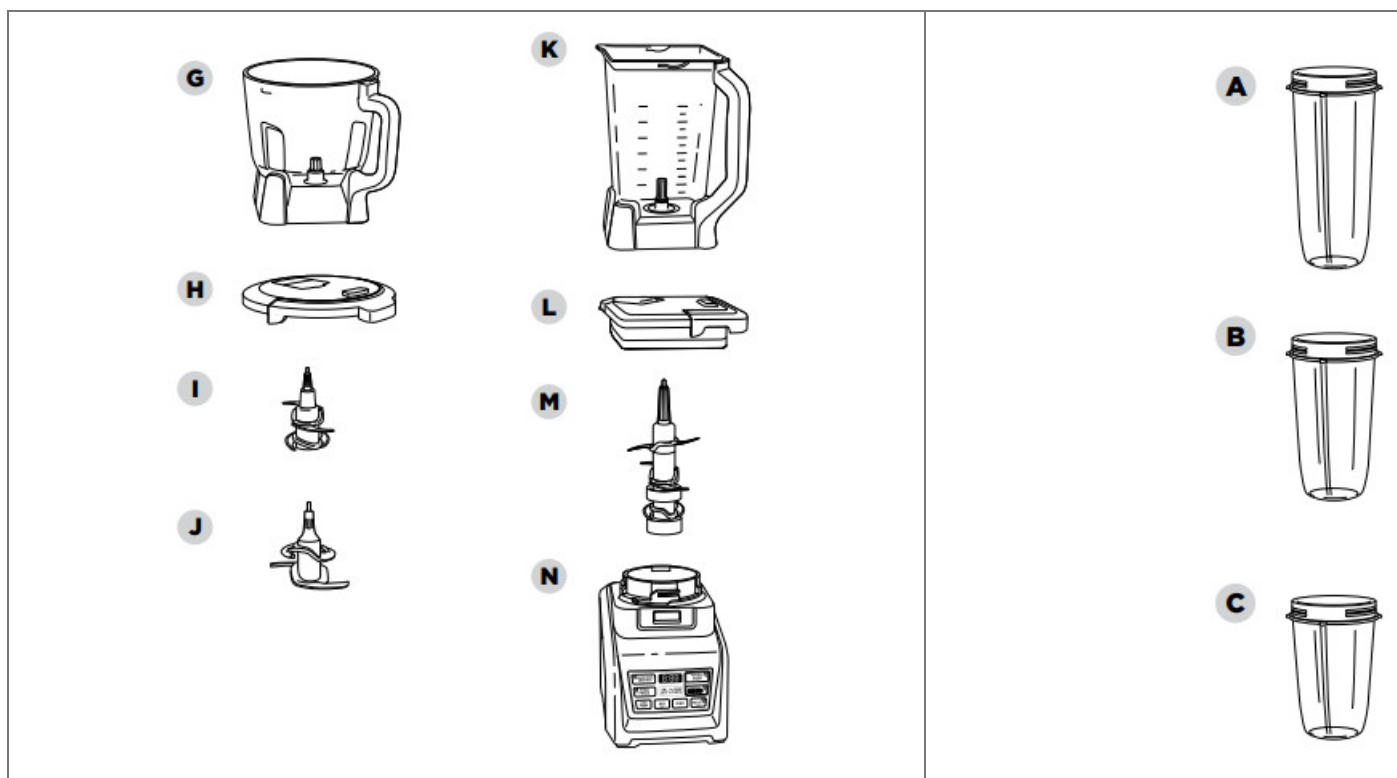

A 900 ml Nutri Ninja® Cup	H Food Processor Lid
B 650 ml Nutri Ninja Cup	I Chopping Blade Assembly (food processor)
C 500ml Nutri Ninja Cup	J Dough Blade Assembly (food processor)
D Pro Extractor Blades™ Assembly	K Pitcher
E Sip & Seal® Lid	L Blender Lid with locking handle
F Silicone Grip Sleeve	M Stacked Blade Assembly (blender)
G Food Processor Bowl	N Motor Base

BEFORE FIRST USE

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4–6 before proceeding.

NOTE: All attachments are BPA-free and dishwasher safe. It is recommended that the containers, lids, and blade assemblies be placed on the top rack of the dishwasher. Ensure blade assemblies and lids are removed from the containers before placing them in the dishwasher. Exercise care when handling blade assemblies.

1. Remove all packaging material and labels from the appliance. Separate/remove all parts from each other.
2. Wash the lids, pitchers, Nutri Ninja® Cups, and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dish-washing utensil with a handle to avoid direct hand contact with blades.
3. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.
4. The pitcher, lids, Nutri Ninja Cups, and blade assemblies are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack.

Ensure the blade assemblies are removed from the containers before placing in the dishwasher.

5. Wipe the motor base clean with a damp cloth.


FEATURES



The Power button should be used to turn the unit on or off.

AUTO-IQ®

The Nutri Ninja | Ninja Blender System with Auto-IQ Technology is a high-powered innovative tool with a sleek design and outstanding performance, a true asset to any kitchen. The Nutri Ninja | Ninja Blender System with Auto-IQ Technology features intelligent programs that combine pulsing, blending and pausing patterns that do the work for you. Get great results every time with no guesswork required. For best results, be sure to carefully read all the instructions contained in the manual before using this appliance.

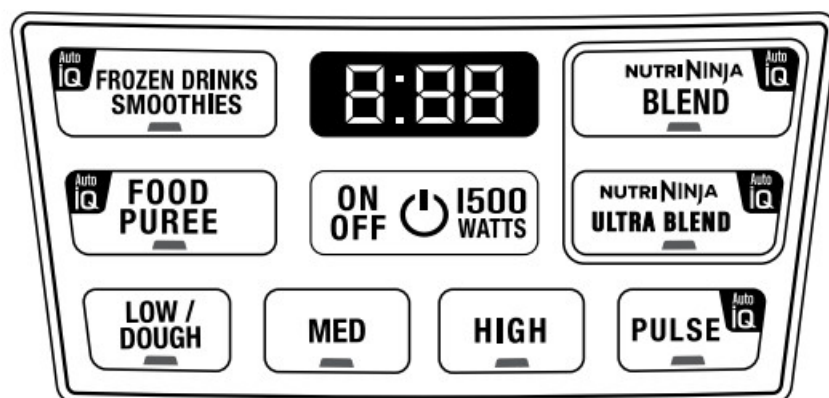 


- Patent Pending Ninja Blade Technology
- BPA-Free pitcher (maximum liquid capacity 2 L), Nutri Ninja Cups, Food Processor Bowl, and Lids
- Drip-Free Pour Spout
- Total Crushing® Technology
- LED Control Panel with Timer
- Sturdy, Non-Slip Base
- Smart Lid technology for easy release
- 3 speeds: Low/Dough, Medium & High
- 5 Auto-iQ settings – Auto-IQ Frozen Drinks/Smoothies, Auto-IQ Food Puree, Nutri Ninja Auto-IQ Blend, Nutri Ninja Auto-IQ Ultra Blend & Auto-iQ Pulse
- Nutrient & Vitamin Extraction*

USING THE NINJA® BLENDER

IMPORTANT: Review all warnings on pages 4–6 before proceeding.

IMPORTANT: Make sure that the motor base is plugged in for use.

 
1. Place the motor base on a clean, dry, level surface such as a counter or tabletop.

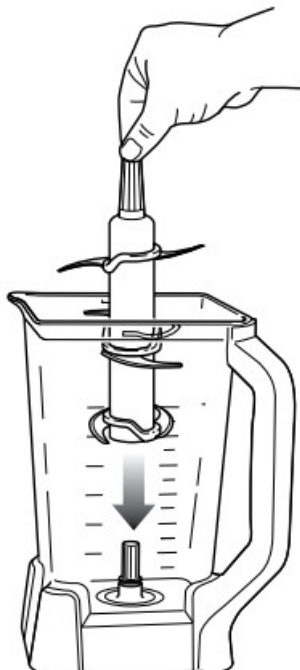


2. Holding the Stacked Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the Stacked Blade Assembly is seated properly and is standing upright.

NOTE: The Stacked Blade Assembly will fit loosely on the drive gear.

 
3. Place the motor base on a clean, dry, level surface such as a counter or tabletop.

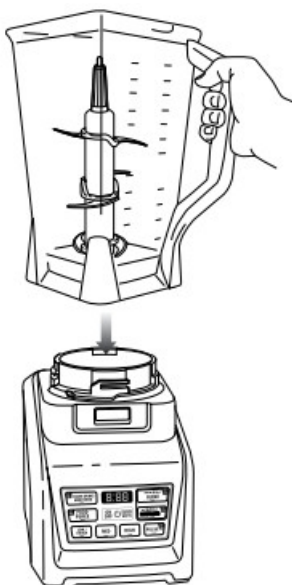

 4. Align and lower the pitcher onto the motor base. The handle should be aligned slightly to the right of the LOCK symbol on the motor base.

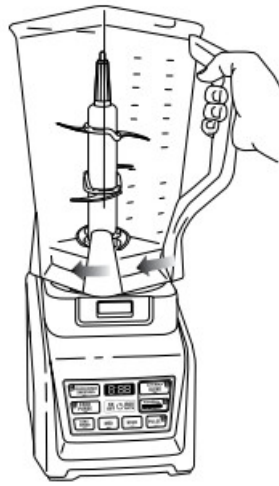

 5. Rotate the pitcher clockwise until it locks in place, you will hear a click when the lock is engaged.

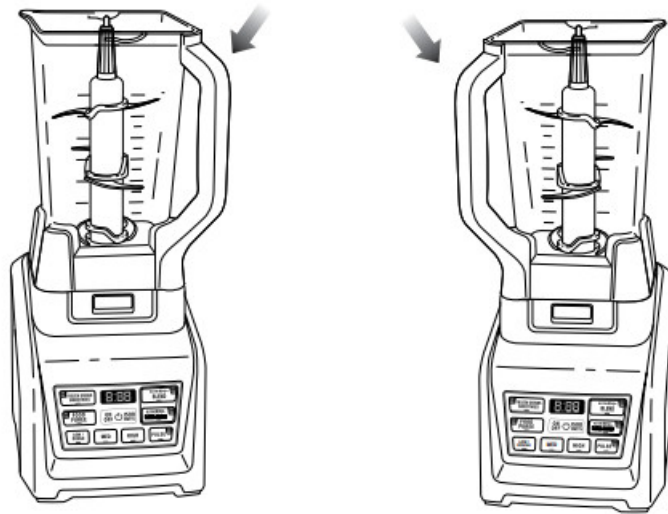


6. The pitcher can be placed on the motor base in two ways; the handle can be on the front right corner or the front left corner.

PULSE HIGH DOUGH LOW FROZEN SINGLE SERVE SMOOTHIE PUREE BLENDING


7. Add the ingredients to the pitcher, making sure that they do not exceed the highest measured marking line on the side of the pitcher.

NOTE: When blending any kind of liquids, such as mixtures of any drinks or smoothies, do not exceed the MAX LIQUID mark (2 L) on the pitcher.

 
NOTE: If you need to add additional ingredients while the appliance is processing, open the pour spout cap and pour the ingredients in through the opening.

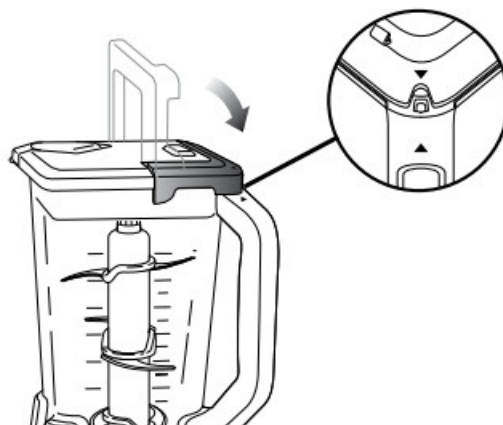

8. Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the triangle located on the lid with the triangle ▼ located on the pitcher's handle. Press the handle down until you hear a click. The triangles ▲ on the lid and the blender handle MUST be aligned in order for the blender to turn on.


9. Plug the power cord into the electrical outlet and press the power button ().

 IMPORTANT: As a safety feature, the power light will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power light will be solid, indicating that the appliance is ready for use.

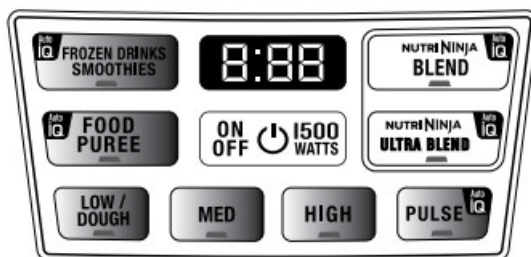

NOTE: Nutri Ninja | Ninja Blender System with Auto-iQ Technology can sense which jar is on the motor base. The available function lights will illuminate depending on which jar is placed on the motor base.

 10. Review warning and caution statements at the top of page 4 before proceeding to number 12.

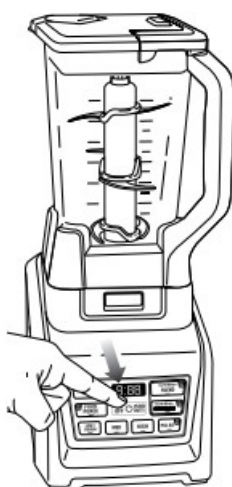


11. Press the power button to turn on the unit. Select the speed or Auto-iQ program that best suits your needs. The Auto-iQ program will stop the appliance automatically at the end of the program.


NOTE: Pulse ingredients for even chopping by holding the Auto-iQ PULSE button until your desired consistency is reached.

NOTE: Max PULSE iteration is 30 pulses.


After 30 pulses allow 10 minutes to pass before running the PULSE function up to an additional 30 pulses.

 12. To pause the appliance, press the selected speed or Auto-iQ program a second time. When the program is paused, the light on the program button will flash until you press it again to resume the rest of the program.

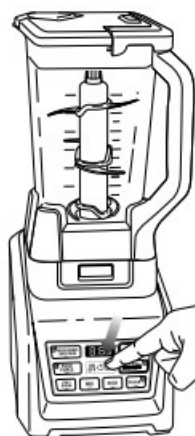

13. When you have reached your desired consistency, stop the appliance by pressing the power button  and

 wait for the Stacked Blade Assembly to stop turning.

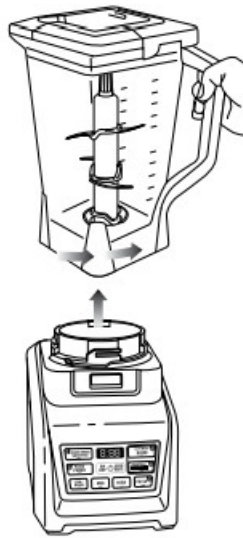


14. Turn the pitcher anticlockwise to remove and then lift off the base.



CAUTION: Never insert your hands in the pitcher as the blades are sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.

 15. Open the pour spout cap and use the spout to empty the liquid contents.

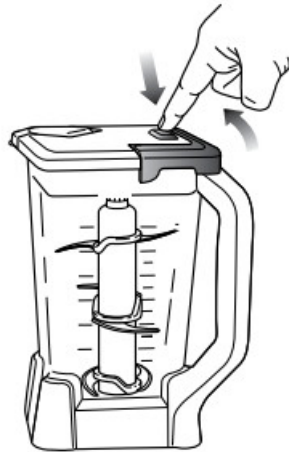

16. For thicker consistencies, first, remove the lid by pressing the release button and pulling the lid handle up to a 90-degree angle to lift lid off the pitcher.

Then, carefully remove the Stacked Blade Assembly by the top of the shaft. Place Stacked Blade Assembly away from the work area to avoid accidental contact.

Finally, empty contents from the pitcher.

17. Make sure that the unit is unplugged when not in use.



18. To release the motor base from the counter or tabletop, place your hands underneath both sides of the motor base and gently pull the unit up and towards you.

USING THE NINJA PROCESSOR BOWL


IMPORTANT: Review all warnings on pages 4–6 before proceeding.

IMPORTANT: Make sure that the motor base is plugged in for use.



NOTE: Nutri Ninja|Ninja Blender System with Auto-iQ Technology can sense which jar is on the motor base. The available function lights will illuminate depending on which jar is placed on the motor base.

 
1. Place the motor base on a clean, dry, level surface such as a counter or tabletop.

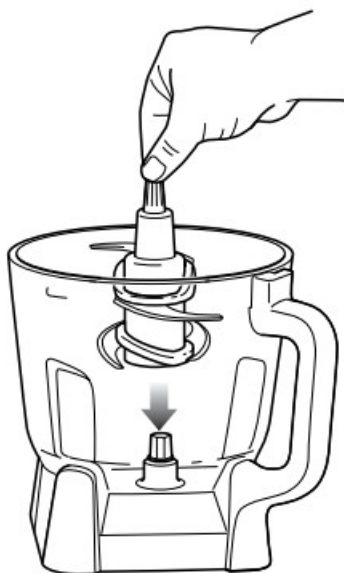


2. Holding the desired blade by the top of the shaft, place it onto the drive gear inside the bowl. Ensure that the attachment is seated properly and is standing upright.

NOTE: The blade assembly will fit loosely on the drive gear.

 
3. Place the motor base on a clean, dry, level surface such as a counter or tabletop.

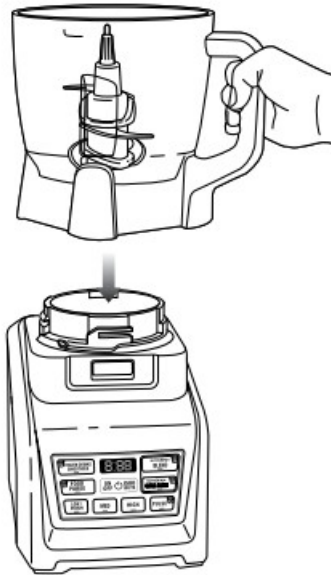

 
4. Align and lower the Processor Bowl onto the motor base. The handle should be aligned slightly to the right of the LOCK symbol on the motor base.

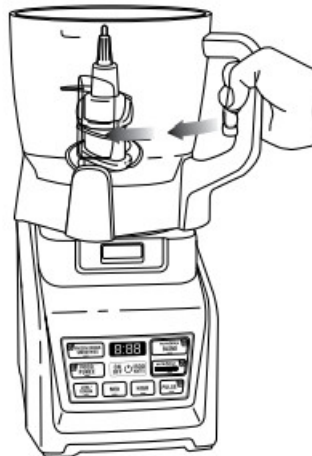

 5. Rotate the bowl clockwise until it locks in place, you will hear a click when the lock is engaged.

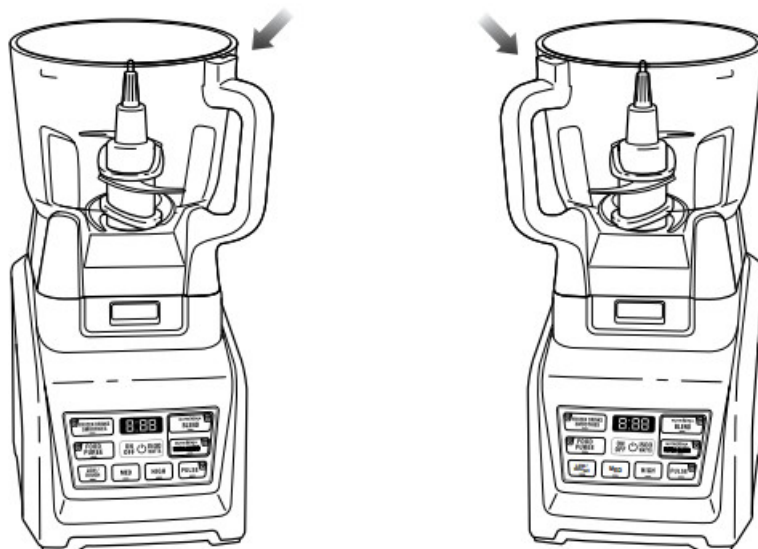

 
6. The bowl can be placed on the motor base in two ways; the handle can be on the front right corner or the front left corner.
7. Add the ingredients to the bowl, making sure that they do not exceed the MAX fill line on the side of the bowl. LOW/MED.

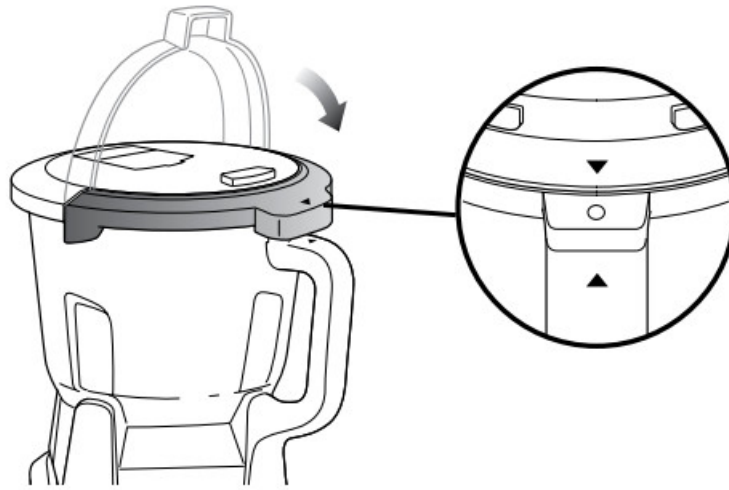



8. Holding the lid by the handle in the upright position, place it on top of the Processor Bowl aligning the triangle located on the lid with the triangle located on the Processor Bowl handle.

Press the handle down until you hear a click. The triangles on the lid and the Processor Bowl handle **MUST** be aligned in order for the blender to turn on.

NOTE: The 1.8 L bowl is not intended for blending drinks. Do not overfill.

9. Plug the power cord into the electrical outlet and press the power button ().

IMPORTANT: As a safety feature, the power button () will flash and the motor will not work if the bowl and lid are not installed correctly. When the bowl and lid are installed properly, the power button () will be solid, indicating that the appliance is ready for use.


USING THE CHOPPING BLADE ASSEMBLY

IMPORTANT: Review all warnings on pages 4–6 before proceeding.

1. Holding the Chopping Blade Assembly assembly by the shaft, place it onto the gear shaft inside the bowl. Ensure that the Chopping Blade Assembly fits around the gear shaft and that it is standing straight.



2. Add the ingredients and secure the bowl lid onto the bowl.

 
3. Plug the power cord into the electrical outlet and press on the power  button.


4. Select the speed or Auto-iQ program that best suits your needs. Pulse ingredients for even chopping by holding the Auto-iQ PULSE button until your desired consistency is reached

NOTE: Max PULSE iteration is 30 pulses.


After 30 pulses allow 10 minutes to pass before running the PULSE function up to an additional 30 pulses.

NOTE: Please refer to the “Speed Settings & Uses” chart for suggested uses and speeds.

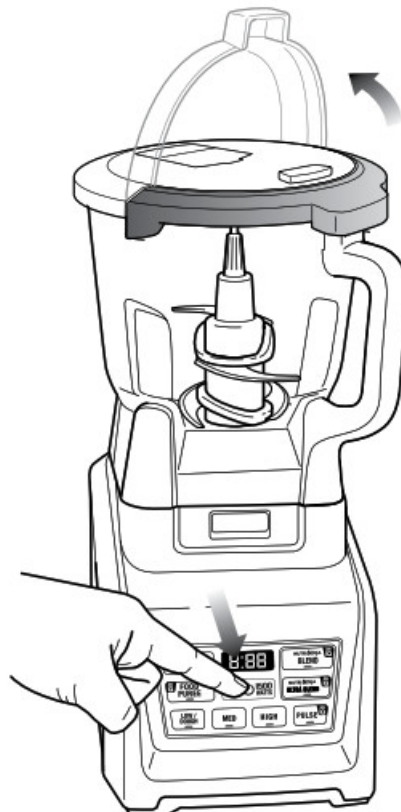


5. When you have reached your desired consistency, stop the appliance by pressing the power button  and

 wait for the blade to stop turning.

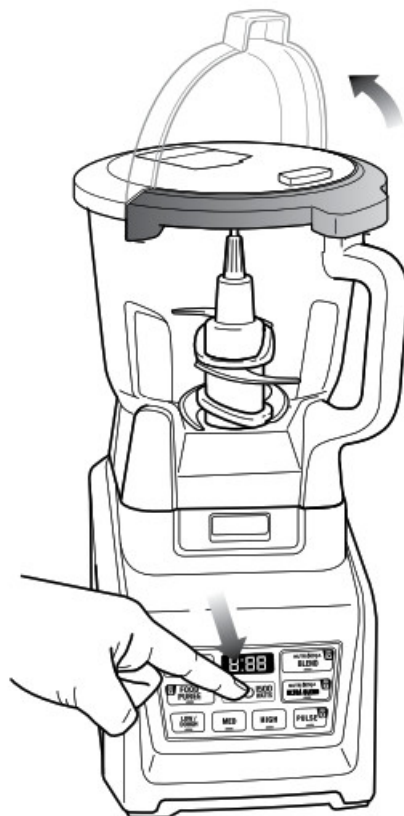

 6. To remove the lid, press the release button on the lid and pull the lid handle up to a 90-degree angle.

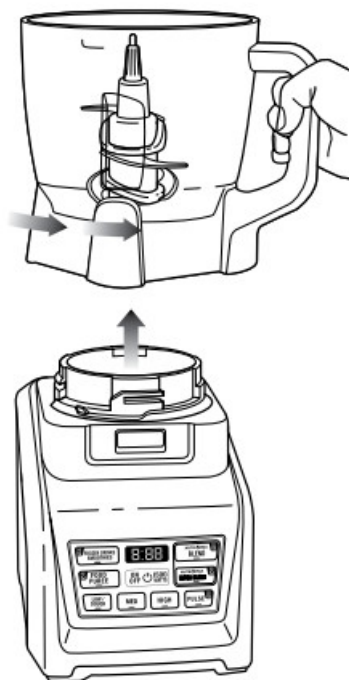


7. Turn the bowl anticlockwise and lift it to remove it from the motor base.




8. To release the motor base from the counter or tabletop, place your hands underneath both sides of the motor base and gently pull the unit up and towards you.

USING THE DOUGH BLADE ASSEMBLY

 
IMPORTANT: Review all warnings on pages 4–6 before proceeding.

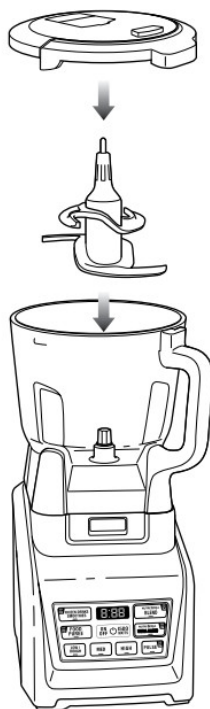


1. Holding the Dough Blade Assembly by the shaft, place it onto the gear shaft inside the bowl. Ensure that the Dough Blade Assembly fits around the gear shaft and that it is standing straight.
2. Add the ingredients and secure the bowl lid onto the bowl.


3. Plug the power cord into the electrical outlet and press on the power button . Select the LOW/DOUGH button and process until ingredients come together to form a mass.

NOTE: Please refer to the “Speed Settings & Uses” chart for suggested uses and speeds.

 
4. Once finished making dough, stop the appliance by pressing the power button and  wait for the blade to stop turning.

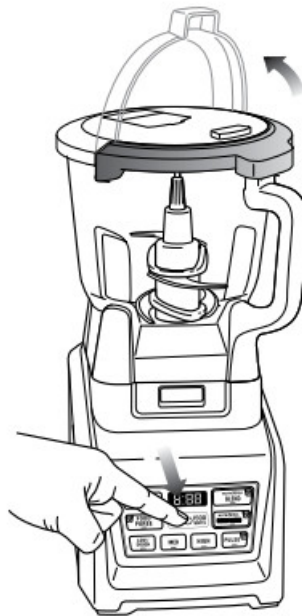

 5. To remove the lid, press the release button on the lid and pull the lid handle up to a 90-degree angle.

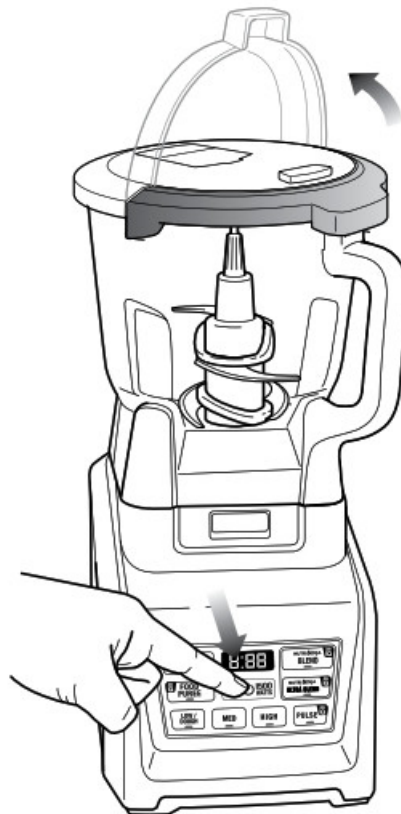

 6. To remove the lid, press the release button on the lid and pull the lid handle up to a 90 degree angle.

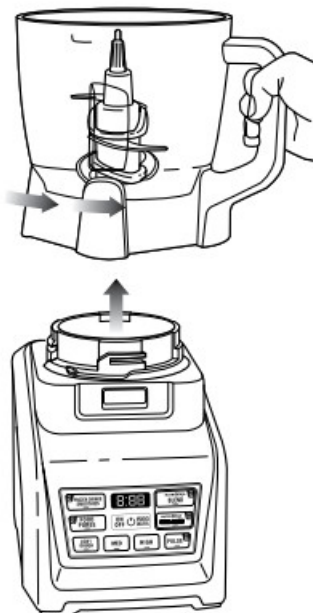

7. Turn the bowl anticlockwise and lift it to remove it from the motor base.



 
8. To release the motor base from the counter or tabletop, place your hands underneath both sides of the motor base and gently pull the unit up and towards you.

USING THE NUTRI NINJA CUPS

IMPORTANT: Review all warnings on pages 4–6 before proceeding.

IMPORTANT: When processing soft dry ingredients such as day-old bread or cheese use quick, short 1-second pulses.

Do not overfill to avoid overheating the appliance. Allow the appliance to cool after each use.

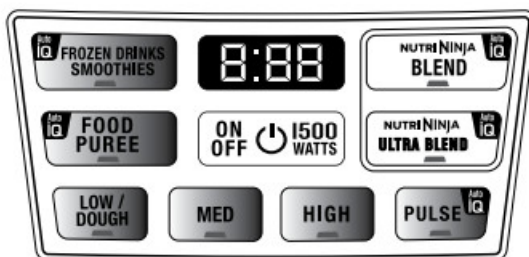


NOTE: Nutri Ninja | Ninja Blender Duo with Auto-IQ Technology can sense which jar is on the motor base. The available function lights will illuminate depending on which jar is placed on the motor base.


1. Place the motor base on a clean, dry, level surface such as a counter or tabletop. Press down on the motor base to make sure that the suction cups adhere to the counter or tabletop.
2. Add ingredients to the Nutri Ninja Cup.



 
3. Place the Pro Extractor Blades Assembly onto the cup and tightly screw it on clockwise until you have a good seal.

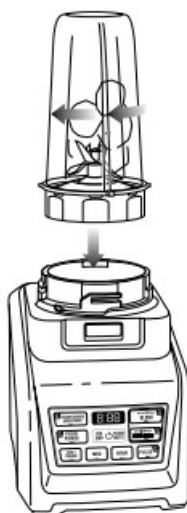

 4. Turn the Nutri Ninja Cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Rotate the Nutri Ninja Cup clockwise until it locks in place, you will hear a click when the lock is engaged.

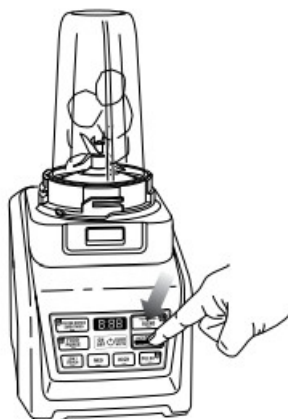

 5. Press the power button on, and select the speed or Auto-iQ program that suits your needs. The Auto-iQ program will stop the appliance automatically at the end of the program.
6. To pause the appliance, press the selected speed or Auto-iQ program a second time. When the program is paused, the light on the program button will flash until you press it again to resume the rest of the program.

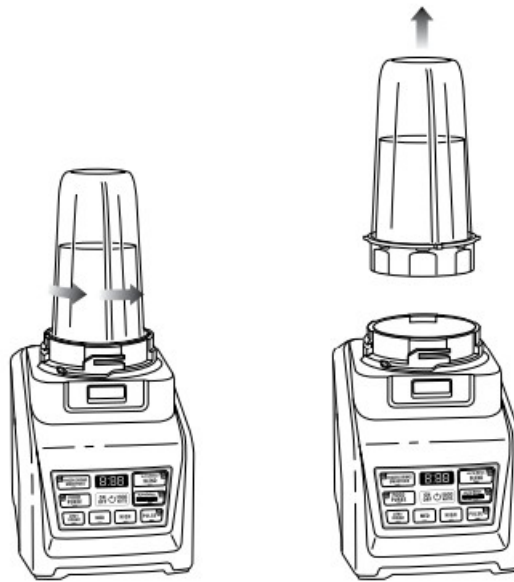

7. Once you have reached your desired consistency, stop the appliance by pressing the power button and wait for the Pro Extractor Blades Assembly to stop turning. Turn the Nutri Ninja Cup anticlockwise and pull straight up to remove it.

 
NOTE: Do not overfill. To avoid spillage, do not add ingredients past the MAX fill line.



8. Turn the cup upright and remove the Pro Extractor Blades Assembly by twisting the Pro Extractor Blades Assembly anticlockwise.
9. Do not store blended contents with the Pro Extractor Blades attached.
10. Place the Sip & Seal Lid or the spout lid onto the Nutri Ninja Cup, twist to seal, and enjoy.
11. Do not store blended contents with the Pro Extractor Blades attached.
12. Place the Sip & Seal Lid or the spout lid onto the Nutri Ninja Cup, twist to seal, and enjoy.
13. For storage, use Sip & Seal Lid or spout lid to cover.
14. Be sure to store the Pro Extractor Blades attached to an empty cup when not in use.
15. Make sure that the motor base is unplugged when not in use.
16. To release the motor base from the counter or tabletop, place your hands underneath both sides of the motor base and gently pull the unit up and towards you.


PROGRAMS, SPEED SETTINGS & USES

FOR THE PITCHER

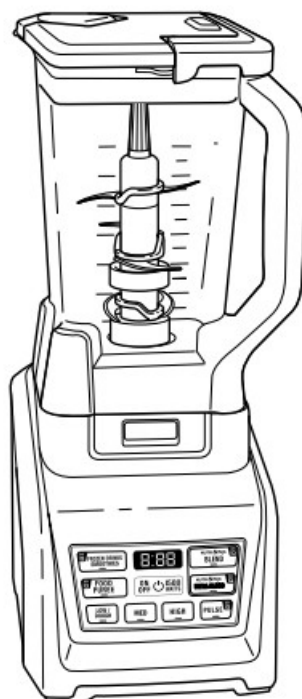

FUNCTION	CONTAINER	BLADE TYPE	SPEED or PROGRAM	TYPE OF FOOD
Frozen Drinks/ Ice Crush	Pitcher	Stacked Blade Assembly	Auto-iQ Frozen Drinks/ Smoothies	Ice Frozen Drinks Smoothies
Pureeing	Pitcher	Stacked Blade Assembly	Auto-iQ Food Puree	Smoothies Soups* Milkshakes

 FOR THE PITCHER THE FOOD PROCESSOR

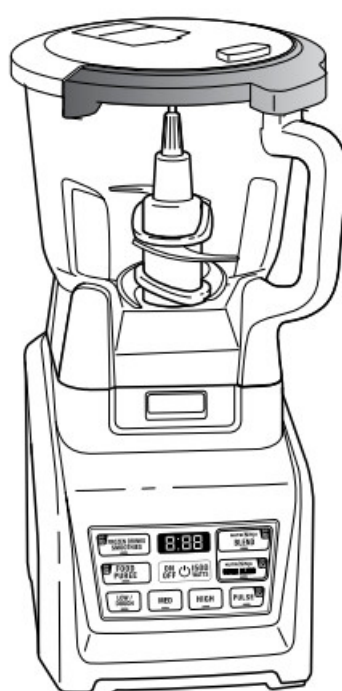


FUNCTION	CONTAINER	BLADE TYPE	SPEED or PROGRAM	TYPE OF FOOD
Mincing	Food Processor Bowl	Chopping Blade Assembly	Auto-iQ Pulse	Onion Garlic Herbs
Kneading & Dough Mixing	Food Processor Bowl	Dough Blade Assembly	Low/Dough	Bread Dough Pie Dough Pizza Dough Pretzel Dough Cookie Dough
Processing	Food Processor Bowl	Chopping Blade Assembly	Auto-1Q Food Puree Low/Dough Medium High	Pates Stewed Fruits Dips Apple Sauce Spreads
Emulsifying	Food Processor Bowl	Chopping Blade Assembly	Low/Dough Medium	Salad Dressings Dips Sauces'
Grinding	Food Processor Bowl	Chopping Blade Assembly	Medium	Meat
Grating	Food Processor Bowl	Chopping Blade Assembly	Auto-iQ Pulse	Grated Cheese Bread Crumbs Spices
Chopping	Food Processor Bowl	Chopping Blade Assembly	Auto-ia Pulse	Salsa Vegetables Nuts
Batters	Food Processor Bowl	Dough Blade Assembly	Low/Dough	Cake Mixes Batters

CAUTION: Do not blend dry ingredients unless pulsing for short intervals per the instructions. The continuous blending of dry ingredients will overheat the blender.

* When blending sauces and soups, make sure they're cooled to room temperature first.

Ninja containers are not intended for hot blending.

 FOR THE NUTRI NINJA CUP

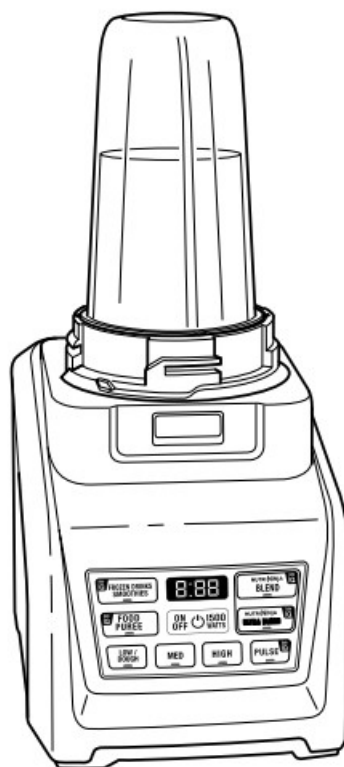

FUNCTION	CONTAINER	BLADE TYPE	SPEED or PROGRAM	TYPE OF FOOD
Smoothies	Nutri Ninja Cup	Pro Extractor Blades Assembly	Nutri Ninja Auto-iQ Blend	Smoothies Frappes Milkshakes Protein Drinks
Green Smoothies	Nutri Ninja Cup	Pro Extractor Blades Assembly	Nutri Ninja Auto-iQ Ultra Blend	Frozen Fruits Frozen Vegetables Kale Celery Spinach Seeds Ice
Grating	Nutri Ninja Cup	Pro Extractor Blades Assembly	Auto-iQ Pulse A Nutri Ninja Auto-iQ Blend High	Grated Cheese Bread Crumbs
Chopping	Nutri Ninja Cup	Pro Extractor Blades Assembly	Auto-iQ Pulse Nutri Ninja Auto-iQ Blend High	Salsa Vegetables Nuts



CAUTION: Do not blend dry ingredients unless pulsing for short intervals per the instructions. Continuous blending dry ingredients will overheat the blender.

* When blending sauces and soups, make sure they're cooled to room temperature first. Ninja containers are not intended for hot blending.

CARE & MAINTENANCE

CLEANING

CAUTION: Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.

CAUTION: DO NOT immerse the motor base into water or any other liquid. Separate all parts. Wash bowl in warm, soapy water with a soft cloth.

Hand-Washing

Wash the containers, lids, blade assemblies, and attachments in warm, soapy water.

When washing the blade assemblies, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.

Dishwasher

The containers, lids, blade assemblies, and attachments are all dishwasher safe. The lids and blade assemblies are top-rack dishwasher safe. Ensure that the blade assemblies are removed from the containers before placing them in the dishwasher.

WARNING: Handle the blade assemblies with care when washing, as the blades are sharp. Contact with the blades' edges can result in a laceration.

Wipe the motor base clean with a damp cloth. If the appliance needs servicing please call customer care at AU 02 8801 7666 or NZ 0800 112 660

STORING

1. Store the Nutri Ninja | Ninja Blender Duo with Auto-iQ Technology upright with the blade assembly inside the corresponding container with the lid secured on top. Do not place anything on top. Store the rest of the attachments in a safe place where they will not be damaged and won't cause harm. Loosely wrap the power cord around the motor base.

NOTE: Do not store blended or unblended ingredients in the Nutri Ninja Cup with the blade assembly attached.

RESETTING THE MOTOR THERMOSTAT

Store the Nutri Ninja | Ninja Blender System with Auto-iQ Technology features a unique safety system that prevents damage to the unit's motor and drive system should you inadvertently overload your appliance.

If the appliance is overloaded, the motor will stop. Allow the appliance to cool for approximately 15 minutes. To reset the appliance, follow the resetting procedure below:

1. Unplug the appliance from the electrical outlet.
2. Remove and empty the container and ensure that no food is jamming the blade assembly.
3. Allow the appliance to cool for approximately 15 minutes.
4. Re-install the container onto the base and re-plug the appliance into the electrical outlet.
5. Proceed to use the appliance as before making sure not to exceed the recommended maximum capacities.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.

Motor Doesn't Start or Blade Assembly Doesn't Rotate.

- Make sure the container is securely locked into the motor base.
- Make sure the lid is securely on container in the correct position (align arrows).
- The appliance is turned Off. Press the power button to turn On.
- Check that the plug is securely inserted into the electrical outlet.

- Check the fuse or circuit breaker.
- The unit has overloaded. The appliance will stop and the power light will flash. Unplug and wait approximately 15 minutes before using again.
- The unit has overheated. Unplug and wait approximately 15 minutes before using again.
- Check to make sure the unit is not overloaded.
Food is Unevenly Chopped.
- Either you are chopping too much food at one time, or the pieces are not of even size and processing smaller amounts per batch.
Food is Chopped Too Fine or is Too Watery.
- The food has been over processed. Use Auto-iQ PULSE button for controlled processing.
Food Collects On Lid or On the Sides of the Container.
- The mixture is too thick. Add more liquid.
You Cannot Achieve Snow From Solid Ice.
- Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer. Start with a few pulses and then go to a continuous blending cycle.
You Cannot Achieve Snow From Solid Ice.
- Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer. Start with a few pulses and then go to a continuous blending cycle.
Motor Base Won't Stick to Counter or Tabletop.
- Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces. Suction feet WILL NOT stick on some surfaces such as wood, tile, and non-polished finishes.
- DO NOT attempt to use an appliance when the motor base is stuck to a surface that is not secure, (cutting board, platter, plates, etc.).
You get an "Error" message.
- Your unit is able to detect which jar is on the base. You may be trying to use a program that is not designed for the jar you have installed. The programs will light up indicating which programs are available for each jar.
You have a blinking red light.
- The unit is not installed properly. For your safety, the unit will only be able to be turned on when it is properly assembled. Please refer to the assembly pages of this inspiration guide for assistance.

Mann & Noble

ONE (1) YEAR LIMITED REPLACEMENT WARRANTY

The warranty commences on the date of purchase and expires at the end of the 1 year period. In the unlikely event of a defect due to faulty materials or workmanship within the guarantee period, we will replace the defective/faulty part with a new product, free of charge, or if the unit is deemed defective/faulty we replace the unit with an equivalent or upgraded model, at our discretion.

For warranty claims, you will need to submit proof of purchase in the form of a valid receipt that displays the date and place of purchase.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase. Please note:

Your warranty is subject to the following conditions:

- DO NOT operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.

- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident
- Accidental damage
- Damage as a result of use not in accordance with the rating plate
- Use of parts and accessories that are not genuine Ninja components

Customer costs within warranty

- The customer is responsible for any inward freight charge to return a product for warranty if requested, and outward freight charge for warranty parts and or replacement unit.

Who is covered?

- This warranty applies only to the original purchaser, who bought the product from an authorized retailer and may not be transferred. Proof of purchase is required.

What is not covered?

- Accessories are supplied with the item.
- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorized/improper maintenance/handling or overload is excluded from this warranty.

VISIT US ONLINE AT:

AU ninjakitchen.com.au NZ ninjakitchen.co.nz

Or follow us on any of our social media pages:



@ninjakitchenapac

Mann&Noble Pty Ltd

Building D, 33 Quarry Road
Erskine Park NSW, Australia, 2759
AU 02 8801 7666 | NZ 0800 112 660


AU ninjakitchen.com.au | NZ ninjakitchen.co.nz

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.


AUTO-IQ, NINJA, NUTRI NINJA, SIP & SEAL, and TOTAL CRUSHING
are registered trademarks of SharkNinja Operating LLC.

PRO EXTRACTOR BLADES is a trademark
of SharkNinja Operating LLC.

 © 2022 SharkNinja Operating LLC
BL682ANZMN_IB_REV_Mv4

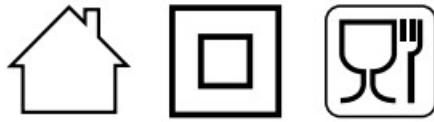

Documents / Resources

	<p>NINJA BL682ANZMN Nutri Ninja Nutrient Extractor Processor [pdf] Owner's Manual BL682ANZMN, Nutri Ninja Nutrient Extractor Processor, Nutri Ninja, BL682ANZMN Nutri Ninja Nutrient Extractor Processor, Nutrient Extractor, Nutrient Extractor Processor, Extractor Processor, Processor</p>
---	---

References

- [ninjakitchen.co](https://www.ninjakitchen.co)
- [Ninja Kitchen New Zealand](#)
- [Ninja Kitchen Australia | Blenders, Kitchen Systems and Cooking](#)