



NINJA CB100EU Power Nutri Blender 2 In 1 Instruction Manual

[Home](#) » [Ninja](#) » NINJA CB100EU Power Nutri Blender 2 In 1 Instruction Manual 

NINJA®



**POWER NUTRI
BLENDER 2-IN-1
Instruction Manual**

THANK YOU FOR PURCHASING

The Ninja® Foodi® Power Nutri Blender 2-in-1



<https://ninjakitchen.eu>

REGISTER YOUR PURCHASE



ninjakitchen.eu



Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____

(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage:	220-240 V~ 50-60 Hz
Watts:	1100W

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

TIP: You can find the model and serial numbers on the QR code label on the back of the unit by the power cord.

This marking indicates this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

Contents

- 1 IMPORTANT SAFEGUARDS
- 2 GETTING TO KNOW YOUR BLENDER
- 3 USING THE CONTROL PANEL
- 4 USING THE POWER NUTRI BOWL
- 5 USING THE POWER NUTRI CUP
- 6 CARE & MAINTENANCE
- 7 TROUBLESHOOTING GUIDE
- 8 PRODUCT REGISTRATION
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE



Read and review instructions for operation and use.



Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.



For indoor and household use only.



WARNING

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions

1. Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
2. ALWAYS exercise care when handling the Hybrid Edge Blades Assembly. The blades are sharp, handle carefully. ONLY grasp the Hybrid Edge Blades Assembly by the outer perimeter of the blade assembly base. Failure to use care when handling the blade assembly will result in a risk of laceration.
3. Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
4. Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
5. Blades are sharp. Handle carefully.
6. Unplug the appliance from the socket when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug by the body and pull from the socket. NEVER unplug by grasping and pulling the flexible cord.
7. Before use, wash all parts that may come into contact with food. Follow washing instructions covered in this instruction manual.
8. To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
9. DO NOT use this appliance outdoors. It is designed for indoor household use only.
10. This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is moulded onto cord) is not suitable for replacement.
If damaged, the appliance should be replaced.
11. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user- serviceable parts. If damaged, contact SharkNinja for servicing.
12. Extension cords should NOT be used with this appliance.
13. DO NOT allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
14. This appliance is NOT intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Before each use, inspect blade assembly for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
16. DO NOT attempt to sharpen blades.
17. DO NOT allow the unit or the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
18. DO NOT allow any part of the unit to contact hot surfaces, including stoves and other heating appliances.
19. ALWAYS use the appliance on a dry and level surface.
20. NEVER place a blade assembly on the motor base without it first being attached to the cup.
21. Keep hands, hair and clothing out of the container when loading and operating
22. ONLY use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
23. During operation and handling of the appliance, avoid contact with moving parts.

24. DO NOT operate the appliance with an empty container.
25. DO NOT fill containers past the MAX FILL or MAX LIQUID lines.
26. DO NOT microwave any containers or accessories provided with the appliance.
27. DO NOT use for grinding ingredients.
28. Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
29. NEVER operate the appliance without lids and caps in place. DO NOT attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
30. DO NOT expose the containers and accessories to extreme temperature changes. They may experience damage.
31. NEVER leave the appliance unattended while in use.
32. DO NOT blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
33. If you find unmixed ingredients sticking to the sides of the cup, stop the appliance, remove the blade assembly and use a scraper to dislodge ingredients.
34. DO NOT attempt to remove the container and lids from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lid and container.
35. Remove the Hybrid Edge Blades Assembly from the Power Nutri Cup or Power Nutri Bowl upon completion of blending. DO NOT store ingredients before or after blending them in the cup with the blade assembly attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. For ingredient storage in the cup, use only Spout Lid to cover. For ingredient storage in the bowl, use only Spout Lid or Storage Lid.
36. If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 15 minutes before using again.
37. The maximum wattage rating for this appliance is based on the configuration of the Hybrid Edge Blades Assembly and Power Nutri Cup. Other configurations may draw less power or current.
38. DO NOT process dry ingredients without adding liquid to the Power Nutri Cup or Power Nutri Bowl. They are not intended for dry blending.
39. To protect against risk of electrical shock, DO NOT immerse the motor base in water or other liquid. Unplug the motor base before cleaning.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR BLENDER

There are a variety of accessories that are compatible with this blender series.

NOTE: The top flap of your box shows the select accessories that are included with your model.

To order additional parts and attachments, visit ninjakitchen.eu

PARTS

A Spout Lid

 
B 700ml Power Nutri™ Cup

C Storage Lid

D 400ml Power Nutri™ Bowl

E Hybrid Edge™ Blades Assembly

F Motor Base (attached power cord not shown)

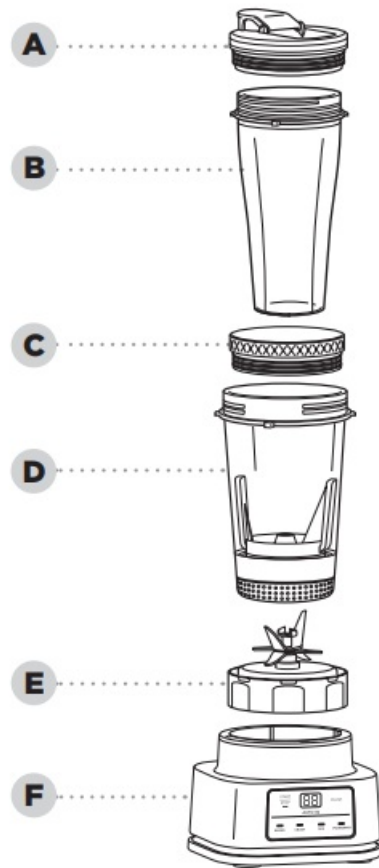

NOTE: The Hybrid Edge™ Blades Assembly is not compatible with other Ninja products.

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 32-33 before proceeding.

NOTE: Handle the Hybrid Edge Blades Assembly by grasping around the perimeter of the blade assembly base.

NOTE: All attachments are BPA free and dishwasher safe. It is recommended that the containers, lids and blade assembly be placed on the top rack of the dishwasher. Ensure blade assembly and lid are removed from the container before placing in the dishwasher. Exercise care when handling blade assembly.

1. Remove all packaging materials from the unit. Exercise care when unpacking blade assembly, as the blades are sharp.
2. Wash containers, lids and blade assembly in warm, soapy water using a dishwashing utensil with a handle to avoid direct contact with the blades.
Exercise care when handling blade assembly, as the blades are sharp.
3. Thoroughly rinse and air-dry all parts.

GETTING TO KNOW THE POWER NUTRI BOWL

 


Powering through tough and frozen ingredients used to require a lot of stopping, scraping and recipe tinkering. But now, it's easier than ever to create thick and spoonable smoothie bowls, nut butters and more. All you have to do is twist the Power Paddle while blending to push ingredients down toward the blade. It's like having a built-in tamper.

USING THE CONTROL PANEL

AUTO-IQ® PROGRAMS

Intelligent preset programs combine unique blending and pausing patterns that do the work for you. Once a preset program is selected, it will start immediately and automatically stop when blending is complete. To stop blending before the end of the program, press the currently active button again.

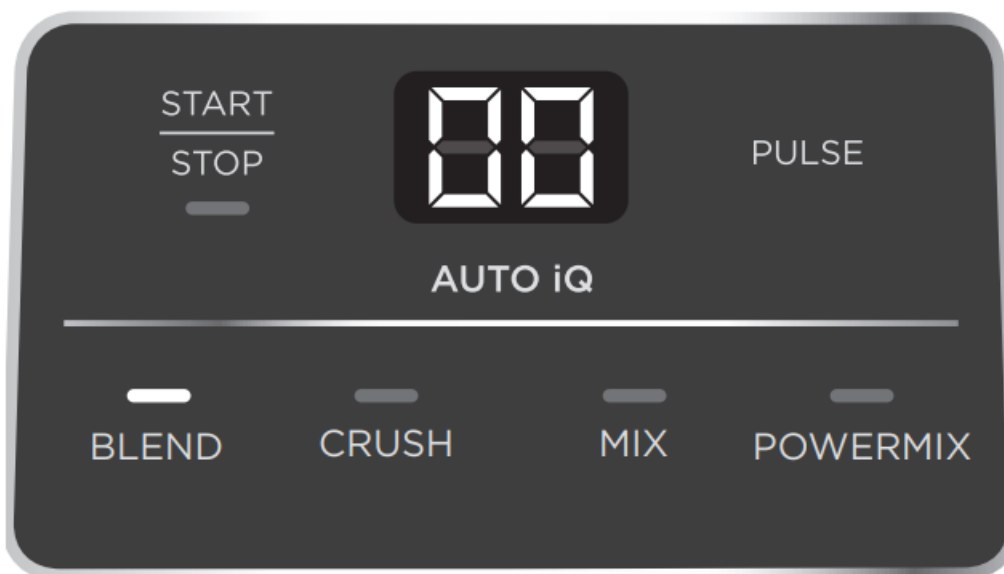

AUTO-IQ PROGRAMS:

BLEND

Combine your favourite fresh or frozen ingredients, liquids and powders to create smoothies and proteins shakes.

CRUSH

Turn ice, juice and fruit into expertly blended frozen drinks. Also ideal for tough, leafy or fibrous whole fruits and vegetables including their skins, seeds and stems.

MIX

Create spoonable smoothie bowls to frozen yogurt.

POWERMIX

Create anything from spreadable nut butters to the perfect houmous.

NOTE: For best results when using the Power Nutri Bowl, use the Auto-iQ Programs, MIX and POWERMIX.

MANUAL PROGRAMS:

NOTE: Manual programs cannot be used in conjunction with any Auto-iQ programs.

START/STOP

Press once to start continuous running up to 60 seconds; press again to stop.

Can also be pressed to stop a running

Auto-iQ program.

PULSE

Offers greater control of pulsing and blending. Operates only when PULSE is pressed. Use short presses for short pulses and long presses for long pulses.

USING THE POWER NUTRI BOWL

IMPORTANT: Review all warnings on pages 32-33 before proceeding.

NOTE: If the unit is plugged in, but the bowl or cup and blade assembly is not properly installed, the timer will display – " and the motor will be disabled.

NOTE: Auto-iQ® programs have pauses and changes in speed throughout the cycle.

 
1. Plug in motor base and place on a clean, dry, level surface such as a worktop or table.




2. Add liquid then ingredients to the PowerNutri Bowl. DO NOT add liquid past the LIQUID FILL line or ingredients past the MAX FILL line.



3. Place the Hybrid Edge Blades Assembly on the top of the bowl and turn clockwise to seal.

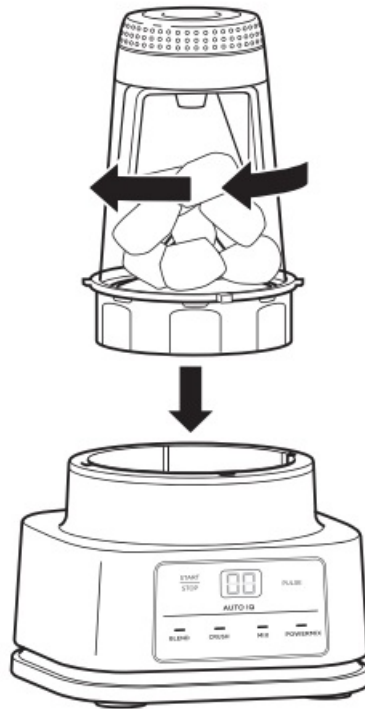


 4. Turn the bowl upside down and install on motor base by aligning the tabs on the bowl with the slots on the base. Then, rotate bowl clockwise until it clicks. Once locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.

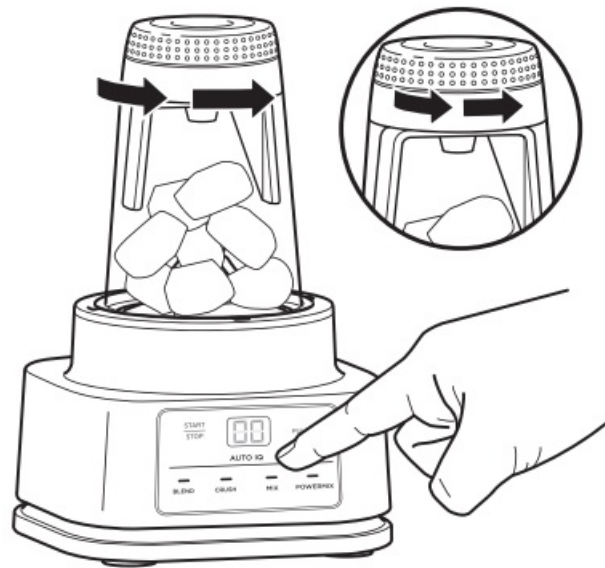

NOTE: While processing, twist the Power Paddle anti-clockwise continuously.

 5. 5a If using an Auto-iQ® program, select the program that best suits your desired output. During the blending process, twist the Power Paddle anti-clockwise continuously. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press the currently active program again.
 5b If using START/STOP, once the ingredients have reached your desired consistency, press START/STOP again and wait for the unit to come to a complete stop. During the blending process, make sure to twist the Power Paddle anti-clockwise continuously.

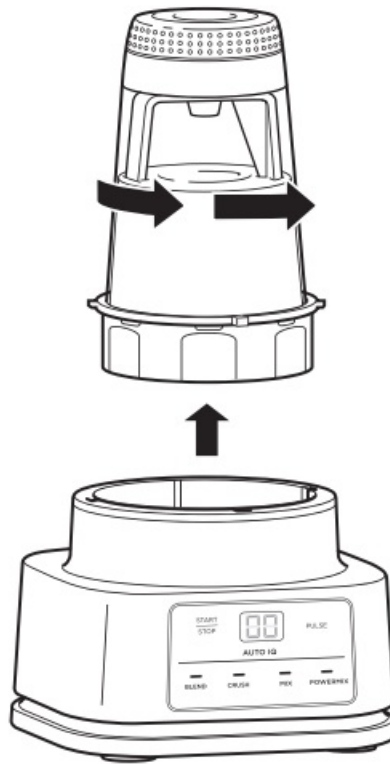


6. Remove the bowl from the motor base by turning it anti-clockwise and then lifting up.



7. Remove the blade assembly by twisting anti-clockwise. DO NOT store blended contents with the blade assembly attached. Only use the Spout Lid or Storage Lid to cover. Exercise care when handling the blade assembly, as the blades are sharp.



 8. To enjoy on the go, place the Spout Lid or Storage Lid onto the bowl and twist lid clockwise until firmly sealed.

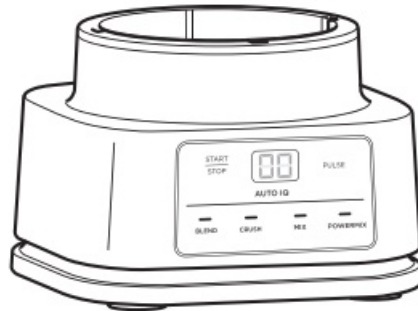

9. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.
NOTE: If the motor base is difficult to remove from the worktop or table, slide it across the surface, then lift. It shouldn't be forced as the suction cups will grip more tightly to the surface.

USING THE POWER NUTRI CUP

IMPORTANT: Review all warnings on pages 32-33 before proceeding.

NOTE: If the unit is plugged in, but the bowl or cup and blade assembly is not properly installed, the timer will display –" and the motor will be disabled.

NOTE: Auto-iQ® programs have pauses and changes in speed throughout the cycle.

1. Plug in motor base and place on a clean, dry, level surface such as a worktop or table.

 


2. Add liquid then ingredients to the PowerNutri Bowl. DO NOT add liquid past the LIQUID FILL line or ingredients


past the MAX FILL line.



3. Place the Hybrid Edge Blades Assembly on the top of the bowl and turn clockwise to seal.

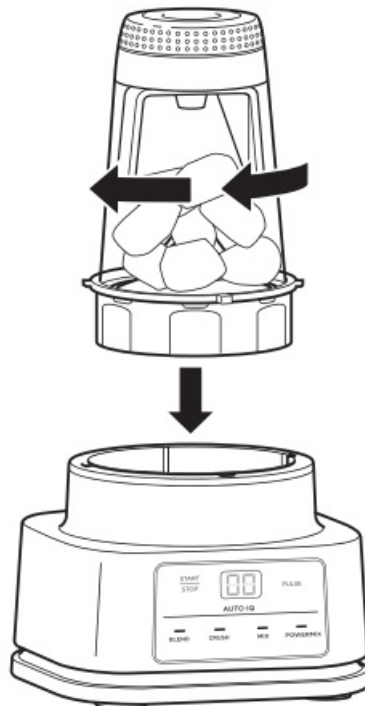


 4. Turn the bowl upside down and install on motor base by aligning the tabs on the bowl with the slots on the base. Then, rotate bowl clockwise until it clicks. Once locked in place, press the Power button o turn unit on. The available program buttons will illuminate and the unit will be ready for use.

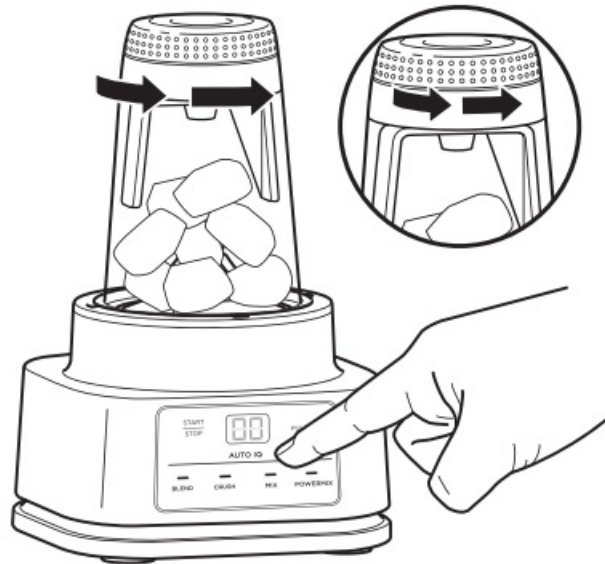

NOTE: While processing, twist the Power Paddle anti-clockwise continuously.

 5. 5a If using an Auto-iQ® program, select the program that best suits your desired output. During the blending process, twist the Power Paddle anti-clockwise continuously. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press the currently active program again.
- 5b If using START/STOP, once the ingredients have reached your desired consistency, press START/STOP again and wait for the unit to come to a complete stop. During the blending process, make sure to twist the Power Paddle anti-clockwise continuously.

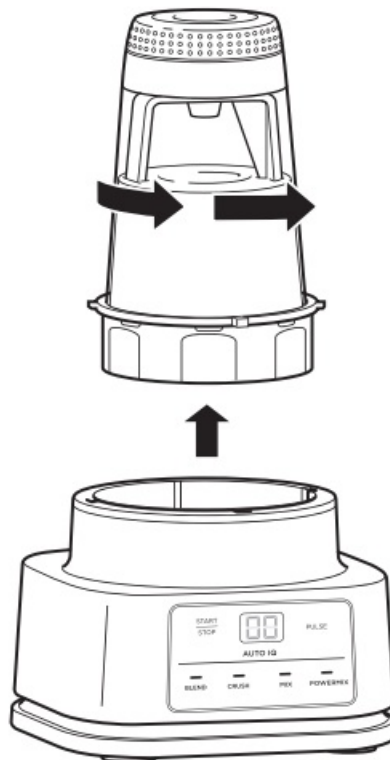


6. Remove the bowl from the motor base by turning it anti-clockwise and then lifting up.



7. Remove the blade assembly by twisting anti-clockwise. DO NOT store blended contents with the blade assembly attached. Only use the Spout Lid or Storage Lid to cover. Exercise care when handling the blade assembly, as the blades are sharp.



 8. To enjoy on the go, place the Spout Lid or Storage Lid onto the bowl and twist lid clockwise until firmly sealed.

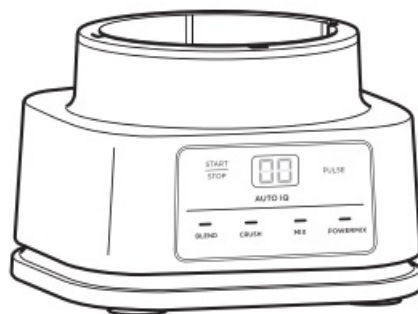

9. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.
- NOTE:** If the motor base is difficult to remove from the worktop or table, slide it across the surface, then lift. It shouldn't be forced as the suction cups will grip more tightly to the surface.

CARE & MAINTENANCE

 
CLEANING

Hand-Washing

Wash containers, lids and blade assembly in warm, soapy water. Use a dishwashing utensil with handle to avoid direct contact with the blades. Exercise care when handling the blade assembly as the blades are sharp. Thoroughly rinse and air-dry all parts.

NOTE: The Power Paddle in the Power Nutri™ Bowl is not removable.

STUCK-ON INGREDIENTS IN THE POWER NUTRI BOWL & CUP

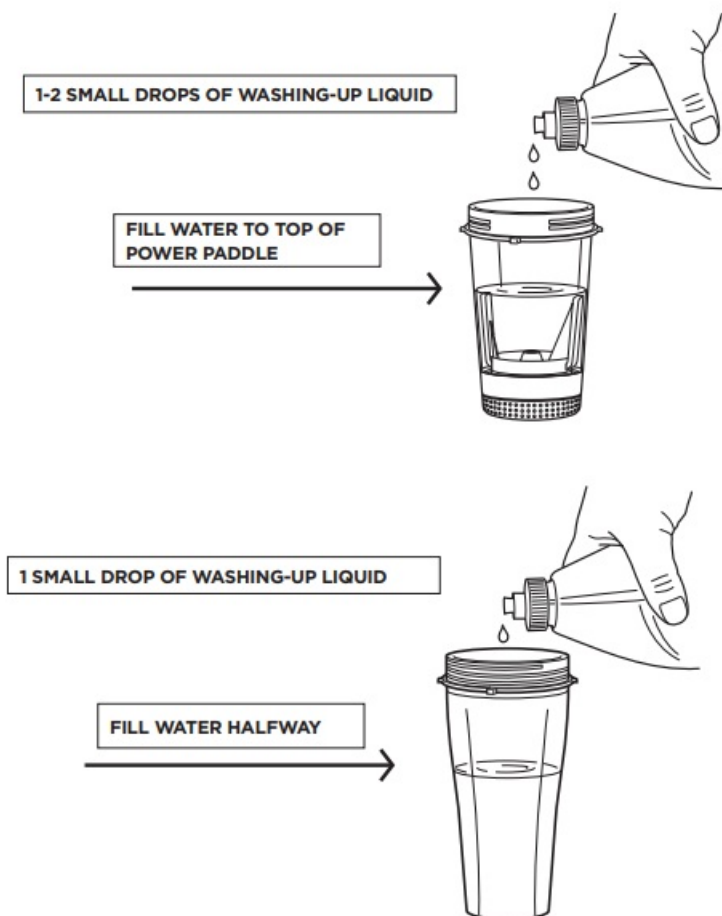

For stuck-on ingredients, such as nut utter, rinse the bowl and blade assembly under warm water. Next, fill the bowl or cup with warm water up to the top of the Power Paddle or halfway on the cup and add 1–2 small drops of washing-up liquid. Screw on the blade assembly and press MIX. Twist the Power Paddle anti-clockwise continuously while cleaning. Then, empty contents and rinse under warm water and wipe with a dishwashing utensil, if needed.

Dishwasher

Containers, lids and blade assembly are ONLY dishwasher safe on the top rack. Ensure the blade assembly and lid are removed from the container before placing in the dishwasher.

NOTE: For best results, use a dishwasher to remove stuck-on ingredients.

Motor Base

Unplug the unit before cleaning. Wipe motor base with a clean, damp cloth. DO NOT use abrasive cloths, pads or brushes to clean the base.

STORAGE

For cord storage, wrap cord with hookand-loop fastener near the back of the motor base. DO NOT wrap the cord around the bottom of the base for storage. DO NOT store blended or unblended ingredients in the cup or bowl with the blade assembly attached. Use only the spout lid or storage lid when storing blended or unblended ingredients in the containers. DO NOT stack items on top of the containers. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

RESETTING THE MOTOR THERMOSTAT

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload it. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

1. Unplug the unit from the electrical socket.
2. Allow the unit to cool for approximately 15 minutes.
3. Remove the blade assembly from the container. Empty the container and ensure no ingredients are jamming the blade assembly.

IMPORTANT: Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit ninjakitchen.eu

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

Control panel does not illuminate.

- Make sure unit is plugged in. If the unit is plugged in and no container is installed, the unit will display ‘- -’. The available programs will illuminate after placing a container on base and rotating it clockwise until it clicks into place.

Control panel doesn't turn off.

- Remove container from base by rotating it anti-clockwise and lifting it up. The display will flash ‘- -’. Unplug the power cord from the socket. If the unit remains plugged in, the display will time out after 3 minutes of inactivity. Press any button to wake the unit.

Doesn't mix well; ingredients get stuck.

- Using the Auto-iQ® programs is the easiest way to achieve great results. The pulses and pauses allow the ingredients to settle toward the blade assembly. If ingredients are routinely getting stuck, adding some liquid will usually help.
- When filling the cup, start with fresh fruit or vegetables, then leafy greens or herbs. Next add liquids or yogurt, then seeds, powders or nut butters. Finally, add ice or frozen ingredients.
- If using the Power Nutri Bowl, during the blending process twist the Power Paddle anticlockwise continuously to circulate ingredients.

Unit moves on counter while blending.

- Ensure the suction cup feet are clean and dry. Place the motor base on a smooth, clean and level surface. Do not place motor base on a rough or unlevel surface as the suction cup feet will not adhere properly. Lid or Hybrid Edge Blades Assembly is hard to install on the container.
- Set the container on a level surface. Carefully place the lid or blade assembly on the top of the container and align the threads so the lid/blade assembly sits flat. Twist clockwise until you have a tight seal.

Can't remove the Power Paddle from the Power Nutri Bowl.

- The Power Paddle in the Power Nutri Bowl is not removable. For cleaning instructions, refer to the Care & Maintenance section.

PRODUCT REGISTRATION

TWO (2) YEAR LIMITED GUARANTEE

When you buy a product in Europe as a consumer, you get the benefit of legal rights relating to the quality of the product (your "statutory rights"). You can enforce these statutory rights against your retailer. However, at Ninja we are so confident about the quality of our products (the "Products") that we give you a manufacturer's guarantee of two years. This guarantee only applies to the Product if it is bought in new and unused condition. These terms and conditions relate to our guarantees only – your statutory rights as a buyer are unaffected.

Please note that the 2 year guarantee is available in all EU countries.

The conditions below describe the prerequisites and scope of our guarantees which are issued by SharkNinja Germany GmbH, Kurt-Blaum-Platz 8, 63450 Hanau (Germany) ("us", "our" or "we"). They do not affect your statutory rights or the obligations of your retailer and your contract with them. The same applies if you have purchased the product directly from Ninja.

Ninja® Guarantees

A household kitchen appliance constitutes a sizeable investment. Your new machine needs to work properly for as long as possible. The guarantee it comes with is an important consideration – and reflects how much confidence the manufacturer has in its product and manufacturing quality.

Our customer service helpline (0800 000 9063) is open from 9.00am to 6.00pm Monday – Friday. It's free to call, and you'll be put straight through to a Ninja representative. You'll also find online support at www.ninjakitchen.eu.

How do I register my guarantee?

You can register your guarantee online within 28 days of purchase. To save time, you'll need the following information about your machine:

- Model no.
- Serial Number (only if available)
- Date of purchase of the Product (receipt or delivery note)

To register online, please visit www.ninjakitchen.eu

IMPORTANT

- The guarantee covers your Product for 2 years starting on the date of purchase.
- Please keep the receipt at all times. Should you need to use your guarantee we will need the receipt to verify the information supplied to us is correct. The inability to produce a valid receipt will invalidate your guarantee.

What are the benefits of registering my guarantee?

When you register your guarantee, you can choose to receive our newsletter containing tips, advice and competitions. Hear the latest news about new Ninja technology and launches. If you register your guarantee online, you'll get instant confirmation that we've received your details.

For details of our privacy policy please visit www.ninjakitchen.eu

How long are our Products guaranteed for?

Our confidence in our design and quality control means that your Product is guaranteed for two years.

What is covered by the guarantee?

Repair or replacement (at Ninja's discretion) of your Product, including all parts and labour in case of any defect in design, materials and workmanship (including transport and shipping costs). Our guarantee is in addition to your

What is not covered by the guarantee?

- ## What happens when my guarantee runs out?

Where can I buy genuine Ninja spares and accessories?

 
Please remember that using non-Ninja spares may invalidate your manufacturer's guarantee. However, your statutory rights are unaffected.



© 2022 SharkNinja Operating LLC.

ninjakitchen.eu

Documents / Resources

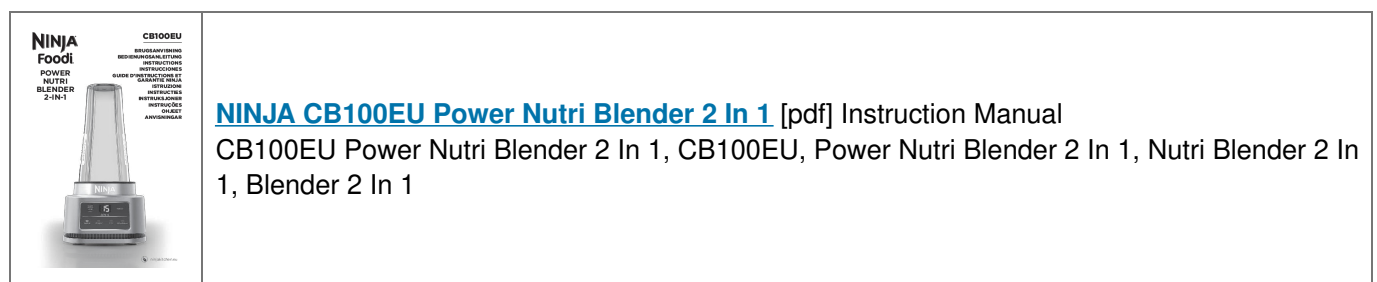

References

- NinjaKitchen

-  [Ninja United Kingdom](#)
-  [NinjaKitchen](#)

[Manuals+](#), [home](#) [privacy](#)