



NINJA Food Processor With Auto-iQ Instructions

[Home](#) » [Ninja](#) » NINJA Food Processor With Auto-iQ Instructions

Contents [[hide](#)]

- 1 NINJA Food Processor With Auto-iQ Instructions
 - 1.1 THANK YOU
 - 1.2 RECORD THIS INFORMATION
 - 1.3 TIP:
 - 1.4 GUARANTEE:
- 2 PRODUCT REGISTRATION
- 3 IMPORTANT SAFETY INSTRUCTIONS
 - 3.1 WARNING
- 4 PARTS
- 5 PARTS
- 6 BEFORE FIRST USE
- 7 FEATURES
 - 7.1 Auto-iQ® PROGRAMS
 - 7.2 MANUAL PROGRAMS
- 8 USING THE FOOD PROCESSOR BOWL
- 9 USING THE SLICING/GRATING DISC
- 10 CARE & MAINTENANCE
- 11 TROUBLESHOOTING GUIDE
- 12 Read More About This Manual & Download PDF:
- 13 Documents / Resources
- 14 Related Posts

NINJA Food Processor With Auto-iQ Instructions



THANK YOU

for purchasing the Ninja® Food Processor with Auto-iQ®

REGISTER YOUR PURCHASE



ninjakitchen.co.uk/register-guarantee



Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number:

Serial Number: _____

Date of Purchase: _____

(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage:

Power: 220-240V-, 50-60Hz 850 Watts

TIP:

You can find the model and serial numbers on the QR code label on the

back of the unit by the power cord.

GUARANTEE:

This product is unconditionally guaranteed for one year against all defects of workmanship and materials. This guarantee does not affect your statutory rights. If this product proves unsatisfactory please contact our customer service department.

PRODUCT REGISTRATION

Please visit ninjakitchen.co.uk to register your new Ninja® product within 28 days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address. The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.



IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY



WARNING

1. Read all instructions prior to using the appliance and its accessories.
2. Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
3. Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
4. Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
5. Blades are sharp. Handle carefully.
6. This product is provided with a Chopping Blade Assembly. ALWAYS exercise care when handling blade assembly. The blade assembly is sharp and is NOT locked in place in the container. The blade assembly is designed to be removable to facilitate cleaning and replacement if needed. ONLY grasp the blade assembly by the top of the shaft.
Failure to use care when handling the blade assembly will result in a risk of laceration.
7. Turn the appliance OFF, then unplug the appliance from the socket when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the socket. NEVER unplug by grasping and pulling the flexible cord.
8. Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
9. Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
10. DO NOT use this appliance outdoors. It is designed for indoor household use only.
11. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for

servicing.

12. This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact SharkNinja for service.
13. Extension cords should NOT be used with this appliance.
14. To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
15. DO NOT allow the cord to hang over the edges of tables or worktops. The cord may become snagged and pull the appliance off the work surface.
16. DO NOT allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
17. ALWAYS use the appliance on a dry and level surface.
18. DO NOT allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
19. This appliance is NOT intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. ONLY use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
21. NEVER place a blade assembly on the motor base without it first being attached to its corresponding container (bowl) and lid.
22. Keep hands, hair, and clothing out of the container when loading and operating.
23. During operation and handling of the appliance, avoid contact with moving parts.
24. DO NOT fill containers past the MAX FILL or MAX LIQUID lines.
25. DO NOT operate the appliance with an empty container.
26. DO NOT microwave any containers or accessories provided with the appliance.
27. NEVER leave the appliance unattended while in use.
28. DO NOT blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
29. DO NOT process dry ingredients with the Chopping Blade Assembly.
30. To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
31. DO NOT perform grinding operations with the Chopping Blade Assembly.
32. NEVER operate the appliance without lids and caps in place. DO NOT attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
33. Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
34. Keep hands and utensils out of containers while chopping to reduce the risk of severe personal injury or damage to the blender/food chopper. A scraper may be used ONLY when the processor is not running. When using the processor, always use food pusher to add food. NEVER add food by hand.
35. DO NOT attempt to remove the container or lid from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lids and containers.
36. If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 30 minutes before using again.

 
37. DO NOT expose the containers and accessories to extreme temperature changes. They may experience damage.
38. Upon completion of processing, ensure that the blade assembly is removed BEFORE emptying container's contents. Remove the blade assembly by carefully grasping the top of the shaft and lifting it from the container. Failure to remove the blade assembly before emptying the container results in a risk of laceration.
39. The maximum wattage rating for this appliance is based on the configuration of the Food Processor Bowl. Other configurations may draw less power or current. 40 DO NOT submerge the motor base or control panel in water or other liquids. DO NOT spray motor base or control panel with any liquid.
40. DO NOT attempt to sharpen blades. 42 Turn off the appliance and unplug the motor base before cleaning.

PARTS

There are a variety of accessories that are compatible with this food processor series.

NOTE: The top flap of your box shows the select accessories that are included with your model.
To purchase more accessories and find great recipes, visit ninjakitchen.co.uk.

PARTS

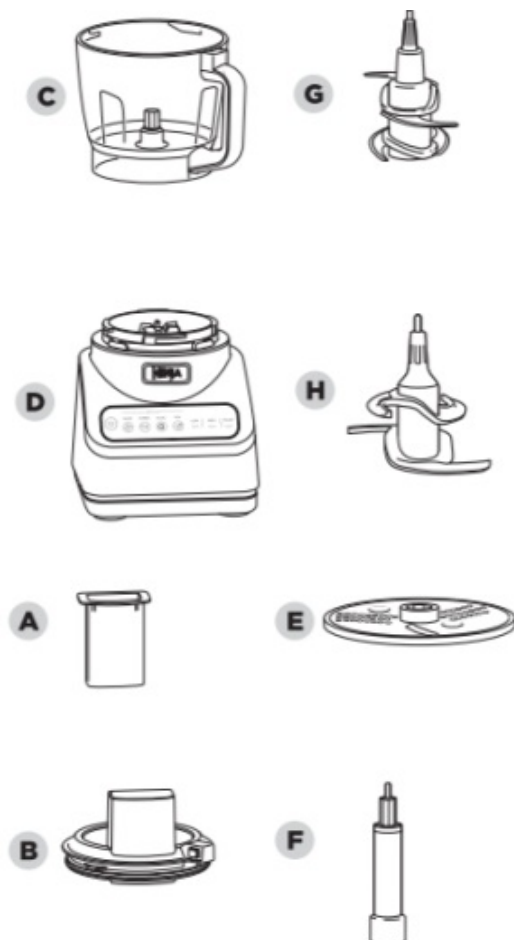

- A** Pusher for Feed Chute Lid
B Feed Chute Lid
C 2.L Food Processor Bowl
D Motor Base (attached power cord not shown)
E Reversible Slicing/Grating Disc
F Disc Adapter

G Chopping Blade Assembly
H Dough Blade Assembly.


BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-6 before proceeding.

NOTE: All attachments are BPA free and dishwasher safe. It is recommended that the bowl, lid, disc, and blade assemblies be placed on the top rack of the dishwasher. Exercise care when handling blade assemblies.

1. Remove all packaging materials from the appliance. Exercise care when unpacking blade assemblies. All blade assemblies are sharp.
2. The Chopping Blade Assembly is NOT locked in place in the bowl. Handle the Chopping Blade Assembly by grasping the top of the shaft.
3. Wash bowl, lid, disc, and blade assemblies in warm, soapy, water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assemblies, as the blades are sharp.
4. Thoroughly rinse and air-dry all parts.
5. Wipe control panel with a soft cloth. Allow it to dry completely before using.

FEATURES

 The Power button should be used to turn the unit on or off.

AUTO-IQ®

Intelligent preset programs combine unique processing and pausing patterns that do the work for you. Once an Auto-iQ® program is selected, it will start immediately and automatically stop when processing is complete. To stop processing before the end of a program, press the currently active button again.



Auto-iQ® PROGRAMS

CHOP

Timed pulses and pauses give you consistent chopping results. Run program once for a large chop, twice for a small chop and three times if you prefer it even finer.

PUREE

Create anything from silky-smooth sauces to the perfect hummus.

SLICE

Use with the reversible disc shaped blade to quickly slice or grate cheese and vegetables with minimal effort.

MIX

Quickly mix together doughs and batters for pizzas, bread, pastry and cakes.

MANUAL PROGRAMS

LOW and HIGH

When selected, each of these speeds runs continuously until turned off. They do not work in conjunction with any preset Auto-iQ® programs.

PULSE

Offers greater control of pulsing and processing. Operates only when PULSE is pressed. Use short presses for short pulses and long presses for long pulses.

USING THE FOOD PROCESSOR BOWL

IMPORTANT: As a safety feature, if the blade assembly is not fully seated, you will not be able to install and lock the lid in position.

NOTE: DO NOT add ingredients before completing installation of the blade assembly.

NOTE: Please follow the same instructions to install the Dough Blade Assembly

1. Place motor base on a clean, dry, level surface such as a worktop or table.



2. Lower the Food Processor Bowl onto the motor base and rotate clockwise until it clicks into place.



3. Exercising care, grasp the Chopping Blade Assembly by the top of the shaft and place it onto the drive gear inside the bowl. Note that the Chopping Blade Assembly will fit loosely on the drive gear.
4. Add ingredients to the bowl, making sure not to exceed the MAX FILL line.



5. Place the feed chute lid on the bowl and turn clockwise until you hear a click, indicating the lid is locked in place.



 
6. **6a** Plug in the unit, then press the Power button to turn it on. If using an Auto-iQ® program, first select the program that best suits your recipe. The preset feature will automatically stop the unit at the end of the program. To stop the unit at any time, press the currently active program again.
- 6b** If not using an Auto-iQ® program, select one of the manual programs. Once the ingredients have reached your desired consistency, press the active button again, and wait for the unit to come to a complete stop.



7. When finished, press the button on the feed chute lid near the handle to unlock, then turn the lid anti-clockwise. Lift the lid from the bowl. Always remove the Chopping Blade Assembly before emptying the ingredients from the bowl. To remove the Chopping Blade Assembly, carefully grasp it by the top of the shaft and lift it out of the bowl.



8. To remove the bowl from the motor base, turn the bowl anti-clockwise and then lift it.

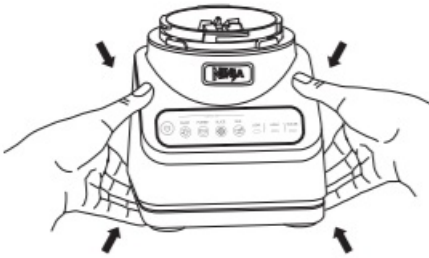

9. Press the Power button to turn the unit off, then unplug the unit. Refer to the Care & Maintenance section for cleaning and storage instructions.

USING THE SLICING/GRATING DISC

IMPORTANT: Review all warnings on pages 4-6 before proceeding.

IMPORTANT: Use the SLICE or LOW setting when using the Slicing/ Grating Disc .

NOTE: The feed chute lid features a pusher to guide food through the chute.

NOTE: The Slicing/Grating Disc is reversible. Use the side labeled “Slicer” for slicing. Carefully flip the disc over to the side labeled “Shredder” for grating.

1. Place motor base and place on a clean, dry, level surface such as a worktop or table.



2. Lower the Food Processor Bowl onto the motor base and rotate clockwise until it clicks into place.



3. Place the disc spindle onto the drive gear inside the bowl.



4. Use the finger holes to grasp the disc and place it over the spindle.



 
5. Place the feed chute lid on the bowl and turn clockwise until you hear a click, indicating the lid is locked in place.



6. Plug in the unit, then press the Power button to turn it on. Select LOW. The disc will begin spinning.



7. Add the ingredients you want to slice or grate through the feed chute on the lid. Use the food pusher to help guide the ingredients through the feed chute. The middle piece of the food pusher is removable to use for smaller ingredients.

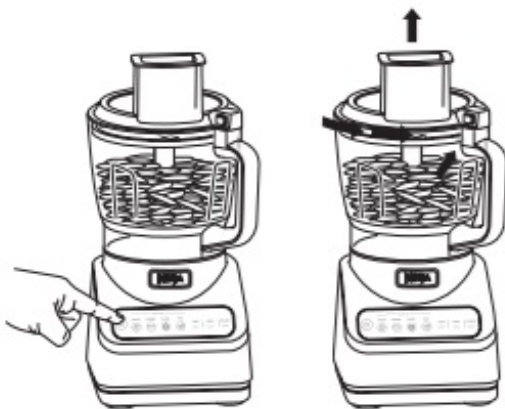


8. When finished, stop the unit by touching the Power button and wait for the disc to stop spinning. Press the button on the feed chute lid near the handle to unlock, then turn the lid anti-clockwise. Lift the lid from the bowl.



9. Using the finger holes, carefully lift the disc out of the bowl.
10. Grasp the spindle by the top of the shaft and lift it out of the bowl.



 11. To remove the bowl from the motor base, turn the bowl anti-clockwise and then lift it.

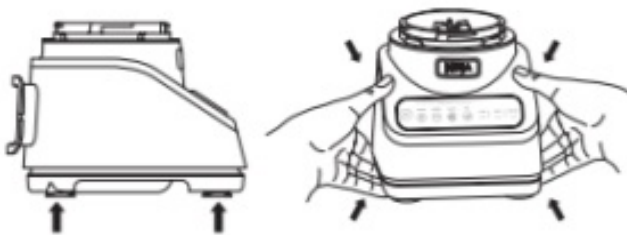

12. Press the Power button to turn the unit off, then unplug the unit. Refer to the Care & Maintenance section for cleaning and storage instructions.

CARE & MAINTENANCE

CLEANING

Separate all parts. Wash bowl in warm, soapy water with a soft cloth.

- **Hand-Washing**

Wash bowl, lid, disc, and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.

- **Dishwasher**

All attachments are dishwasher safe. It is recommended that the bowl, lid, disc, and blade assemblies be

placed on the top rack of the dishwasher ONLY. Ensure the blade assembly is removed from the bowl before placing in the dishwasher. Exercise care when handling blade assemblies.

- **Motor Base**

Turn off the unit and unplug the motor base before cleaning. Wipe motor base with a clean, damp cloth. DO NOT use abrasive cloths, pads, or brushes to clean the base.

STORING

Wrap the power cord around the cord wrap on the back of the motor base. Store the unit upright and store all blade assemblies inside or attached to the bowl with the lid locked in place.

DO NOT stack items on top of the containers. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

RESETTING THE MOTOR THERMOSTAT

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload the unit. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

1. Unplug the unit from the socket.
2. Allow the unit to cool for approximately
3. 0 minutes.
4. Remove the bowl's lid and blade assembly. Empty the bowl and ensure no ingredients are jamming the blade assembly.

IMPORTANT: Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit ninjakitchen.co.uk

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.

Unit doesn't turn off.

- Remove bowl from base by rotating it anti-clockwise and lifting it. Unplug the power cord from the socket.

Unit doesn't mix well; ingredients get stuck.

- Using the Auto-iQ® programs is the easiest way to achieve great results. The pulses and pauses allow the ingredients to settle toward the blade assembly. If ingredients are routinely getting stuck, adding some liquid will usually help.

Motor base won't stick to worktop or tabletop.

- Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces.
- Suction feet will not stick to some surfaces such as wood, tile, and non-polished finishes.
- **DO NOT** attempt to use unit when the motor base is stuck to a surface that is not secure (chopping board, platter, plates, etc.).

Unit is difficult to remove from worktop for storage.

- Place your hands underneath both sides of the motor base and gently pull the unit up and toward you.

Food is not evenly chopped.

- For best results when chopping, cut pieces of ingredients in a uniform size and don't overfill the bowl.

VISIT US ONLINE AT:

ninjakitchen.co.uk

Or follow us on any of our social media pages:



@ninjakitchenuk

NOTE: Save these instructions. Keep for future reference.



■ This marking indicates this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

Euro-Pro Europe Limited

3150 Century Way

Thorpe Park, Leeds

L5158ZB, UK

ninjakitchen.co.uk

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

AUTO-IQ and NINJA are registered trademarks of SharkNinja Operating LLC.

 
© 2020 SharkNinja Operating LLC

PRINTED IN CHINA

BN650UK_30_1B_MP_200320_MvI



Read More About This Manual & Download PDF:

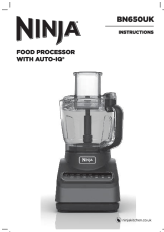	<p>NINJA Food Processor With Auto-IQ [pdf] Instructions Food Processor With Auto-IQ, BN650UK</p>
---	--