



NINJA HB150 Series Hot Blender with Precision Heating Element User Guide

[Home](#) » [Ninja](#) » NINJA HB150 Series Hot Blender with Precision Heating Element User Guide 

Contents

- [1 NINJA HB150 Series Hot Blender with Precision Heating Element](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 FEATURES](#)
- [6 BEFORE FIRST USE](#)
- [7 HANDLING THE BLENDER PITCHER](#)
- [8 MANUAL SETTINGS](#)
- [9 CARE & MAINTENANCE](#)
- [10 TROUBLESHOOTING GUIDE](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



NINJA HB150 Series Hot Blender with Precision Heating Element



Product Information

Specifications

- **Voltage:** 120V, 60Hz
- **Watts:** 1000W

Product Usage Instructions

Before First Use

Before using the Ninja Foodi Blender for the first time, please follow these steps:

1. Read all the instructions in the user manual to familiarize yourself with the product.
2. Check that you have all the parts required to operate the blender.
3. Wash all parts that may come into contact with food before using them. Refer to the washing instructions in the manual.

Handling the Blender Pitcher

Here are some important points to keep in mind when handling the blender pitcher:

- Be cautious when working with hot oil or other hot liquids in the blender. Take extreme care to avoid injury or accidents.
- The blades of the blender are sharp. Handle them carefully to prevent any accidental cuts or injuries.
- Always turn off and unplug the blender before assembling or disassembling any parts, as well as before

cleaning it. To unplug, firmly grasp the plug by its body and pull it out of the outlet. Do not pull on the flexible cord.

Display Screen & Error Messages

The Ninja Foodi Blender is equipped with a display screen that provides important information and error messages. Please refer to the user manual for a detailed explanation of the display screen and how to interpret any error messages that may appear.

Troubleshooting Guide

If you encounter any issues or problems while using the Ninja Foodi Blender, consult the troubleshooting guide in the user manual. It provides step-by-step instructions to help you resolve common issues.

FAQ (Frequently Asked Questions)

Can I use the blender outdoors?

No, the Ninja Foodi Blender is designed for indoor household use only. It should not be used outdoors.

What should I do if the power cord comes into contact with liquid?

To protect against the risk of electric shock, do not submerge the appliance or allow the power cord to come into contact with any form of liquid. If the power cord does get wet, unplug the blender immediately and contact SharkNinja for assistance.

Can I modify the plug of the appliance?

No, you should not modify the plug in any way. The appliance has a polarized plug, meaning one blade is wider than the other. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician.

What should I do if the appliance malfunctions or is damaged?

If the appliance malfunctions or is dropped or damaged in any manner, do not continue using it. Contact SharkNinja for servicing as it has no user-serviceable parts.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE. FOR HOUSEHOLD USE ONLY

WARNING: To reduce the risk of injury, fire, electrical shock, or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Do not use appliance for other than intended use.

1. Read all instructions before using the appliance and its accessories.
2. Carefully observe and practice all warnings and instructions. This unit contains electrical connections, moving parts, and heating elements that potentially present a risk to the user.
3. Take your time and exercise care during unpacking and appliance setup.
4. Take inventory of all contents to ensure you have all the parts needed to properly and safely operate your appliance.
5. Blades are sharp. Handle carefully.
6. Turn the appliance OFF, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull it from the outlet. NEVER unplug by grasping and pulling the flexible cord.
7. Wash all parts that may contact with food before use. Follow the washing instructions covered in this instruction

 
manual.

8. To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
9. DO NOT use this appliance outdoors. It is designed for indoor household use only.
10. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT modify the plug in any way.
11. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for servicing.
12. This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact SharkNinja for service.
13. Extension cords should not be used with this appliance.
14. DO NOT allow children to operate this appliance or use it as a toy. Close supervision is necessary when any appliance is used near children.
15. This appliance is not intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
16. Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
17. DO NOT attempt to sharpen blades.
18. DO NOT let the cord hang over the edge of the table or counter or touch hot surfaces.
19. DO NOT allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
20. DO NOT place on or near a hot gas or electric burner or in a heated oven.
21. ALWAYS use the appliance on a dry and level surface.
22. Keep hands, hair, and clothing out of the container when loading and operating.
23. ONLY use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
24. During operation and handling of the appliance, avoid contact with moving parts.
25. DO NOT operate the appliance with an empty container.
26. DO NOT fill containers past the max fill or max liquid lines.
27. DO NOT microwave any containers or accessories provided with the appliance.
28. Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
29. Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A rubber scraper or spatula may be used but must be used ONLY when the blender is not running.
30. NEVER operate the appliance without lids and caps in place. DO NOT attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
31. DO NOT expose the containers and accessories to extreme temperature changes. They may experience damage.
32. NEVER leave the appliance unattended while in use.

33. ALWAYS operate the blender with the cover in place.
34. Allow to cool before assembling or disassembling parts and before cleaning the appliance
35. DO NOT grasp the sides of the pitcher after hot blending or cooking. The surface of the pitcher is hot during and after the operation. Surfaces are hot during and after the operation. To prevent burns or personal injury, ALWAYS use protective hot pads or insulated oven mitts and use available handles and knobs.
36. If you find unmixed ingredients sticking to the sides of the pitcher, stop the appliance, remove the lid, and use a rubber scraper or spatula to dislodge the ingredients. NEVER insert your hands into the pitcher, as you may contact one of the blades and experience a laceration.
37. DO NOT attempt to remove the container and lid from the motor base while the motor is still spinning. Allow the appliance to come to a complete stop before removing the lid and pitcher.
38. If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 15 minutes before using it again.
39. The maximum wattage rating for this appliance is based on the configuration of the high-speed bottom blade and glass pitcher blender. Other configurations may draw less power or current.
40. Turn off the appliance and unplug the motor base before cleaning.
41. DO NOT perform grinding operations with Pro Extractor Blades® Assembly. NEVER operate the appliance without lids and caps in place. DO NOT attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.


SAVE THESE INSTRUCTIONS

PARTS

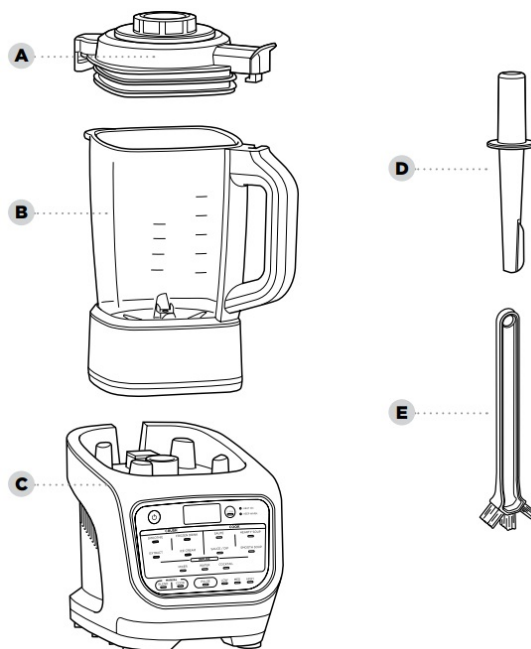

- A Pitcher Lid with a Removable Center Cap
- B 64 oz.* Glass Pitcher with Built-in Heating Element 56 oz. max cold liquid and 48 oz. max hot liquid capacity
- C Motor Base (attached power cord not shown)
- D Tamper
- E Cleaning Brush

 FEATURES

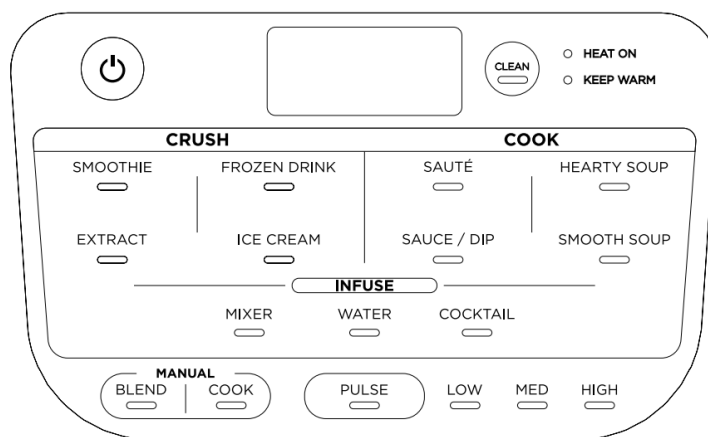

• AUTO-IQ® PROGRAMS:

Intelligent programs that combine unique pulsing, blending, pausing, and heating patterns that do the work for you.

• Smoothie (0:45)

Combine your favorite fresh or frozen ingredients, liquids, and powders to create smoothies and protein shakes.

• Extract (1:05)

Ideal for tough, leafy, or fibrous whole fruits and vegetables, including their skins, seeds, and stems.

• Frozen Drink (0:55)

Crush ice and frozen fruit into restaurant-style frozen drinks.

• Ice Cream (1:10)

Use your favorite frozen fruit and dairy to make sorbets and frozen treats.

• Sauté (5:21)

Unlock more flavor by quickly cooking onions, garlic, spices, and more before creating homemade soups, sauces, and dips.

• Sauce/Dip (30:30)

Create sweet or savory sauces and fondue.

• Hearty Soup (30:00)

Create homemade soup with more texture.

• Smooth Soup (30:00)

Cook and blend your favorite silky-smooth soups.

• Mixer (10:30)

Use sweet or savory ingredients to create bold-flavored concentrates.

• Water (10:30)

Create fruit water or wellness tonics and teas.

• Cocktail (10:30)

Quickly infuse liquor or create craft cocktails.

MANUAL SETTINGS:

Blend

- Select BLEND, then choose either LOW, MED, or HIGH blending speed. The setting will run for 60 seconds or until manually stopped.

Cook

- Select COOK, then choose either LOW, MED, or HIGH temperature. The setting will run for 60 minutes or until manually stopped Pulse
- Select either BLEND or COOK, then press PULSE to process ingredients to your desired texture and consistency.

OTHER FEATURES:

- **Power Button**

Use it to turn the unit on or off.

- **Clean (6:36)**

Combines heat and rapid pulses to remove stuck-on messes.

- **Heat On**

Light will turn on when you have selected a program or function that uses heat.

- **Keep Warm**

The light will turn on after cooking, and the unit will keep the contents warm for up to 60 minutes.

BEFORE FIRST USE

 
IMPORTANT: Review all warnings on pages 4–5 before proceeding.

1. Remove all packaging material and labels from the appliance. Separate all parts from each other.
2. Wash the pitcher, lid, and accessories with warm, soapy water. Use a dishwashing utensil with a handle to avoid contact with the blades.
 - **NOTE:** Follow the cleaning instructions on page 12 very carefully.
3. Thoroughly rinse and air-dry all parts.
 - **NOTE:** DO NOT submerge the pitcher when washing.

HANDLING THE BLENDER PITCHER


LIFTING AND POURING FROM THE PITCHER

- Firmly grasp the handle with one hand and carefully pour out the ingredients.

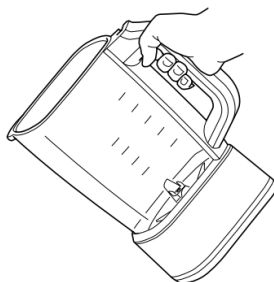


- **NOTE:** If the pitcher feels too heavy in one hand, use a protective mitt or glove and support the pitcher's

 
weight with your other hand.

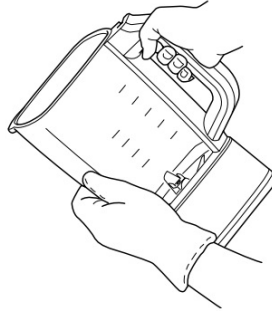

 - DO NOT grasp the pitcher after hot blending or cooking. Surfaces are hot during and after the operation. To prevent burns or personal injury, ALWAYS use protective hot pads or insulated oven mitts and use available handles and knobs.

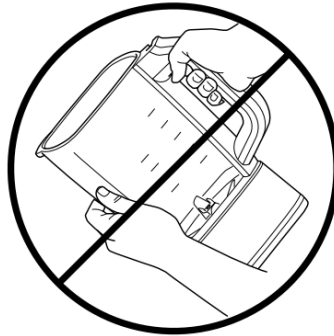

 - DO NOT grasp the pitcher after hot blending or cooking. Surfaces are hot during and after the operation. To prevent burns or personal injury, ALWAYS use protective hot pads or insulated oven mitts and use available handles and knobs.

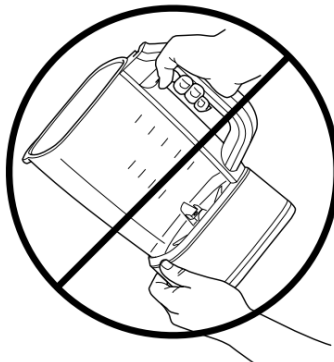


GETTING STARTED WITH YOUR BLENDER


IMPORTANT: Review all warnings on pages 4–5 before proceeding.

ASSEMBLING THE HEATED BLENDER

 
1. Plug in the motor base and place it on a clean, dry, level surface such as a countertop or table.
2. Lower the pitcher onto the motor base.

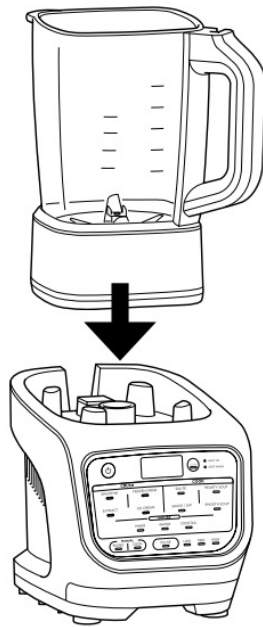

 
3. Add ingredients, making sure to not exceed the max fill lines on the side of the pitcher. In COOK or INFUSE modes, DO NOT exceed the level labeled “SOUP.” In BLEND mode, DO NOT exceed the level labeled “COLD.”

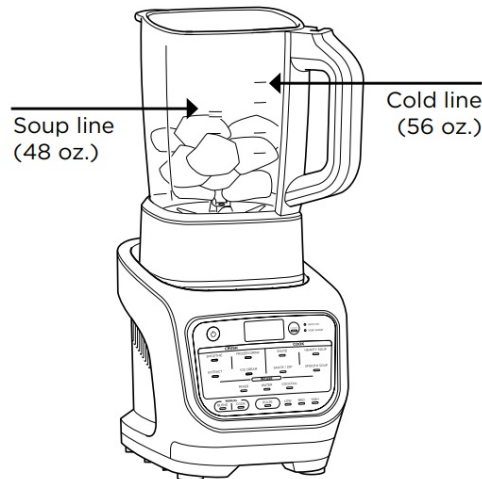

 4. To install the lid on the pitcher, place the lid tab to the right of the handle. Press the lid down until it is secure. Rotate the tab clockwise so the arrow on the lid tab aligns with the arrow on the pitcher handle.

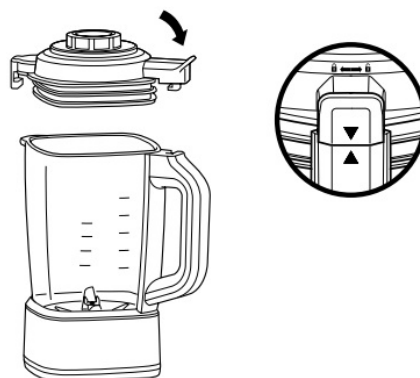

 
5. Secure the center cap by placing it down into the lid and twisting it clockwise until it clicks into place.

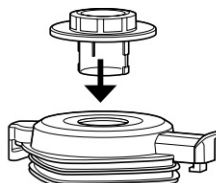

6. To remove the lid from the pitcher, rotate the lid counterclockwise out of the lock position and lift it up.

NOTE: After heated programs, steam may be released as the lid is removed. Keep hands on the outer tabs and lift directly up.

 AUTO-IQ® PROGRAMS

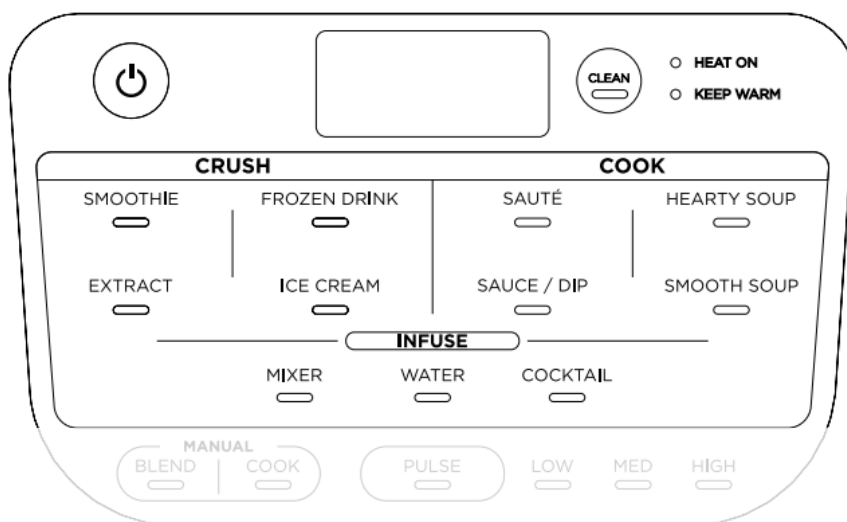


1. To begin, press the Power button.
2. Press the program of your choice from the CRUSH, COOK, or INFUSE sections.
3. The Heat On light will turn on if the selected program uses heat.

TIP: When making thicker recipes such as ice creams and dips, use the tamper to push ingredients toward the blades. The tamper should be used only when the lid is attached to the pitcher. Remove the center cap and replace it with a tamper.

NOTE: The unit will beep 3 times to alert you the program is going to stir ingredients. Make sure the center cap is secure during use.

 MANUAL SETTINGS

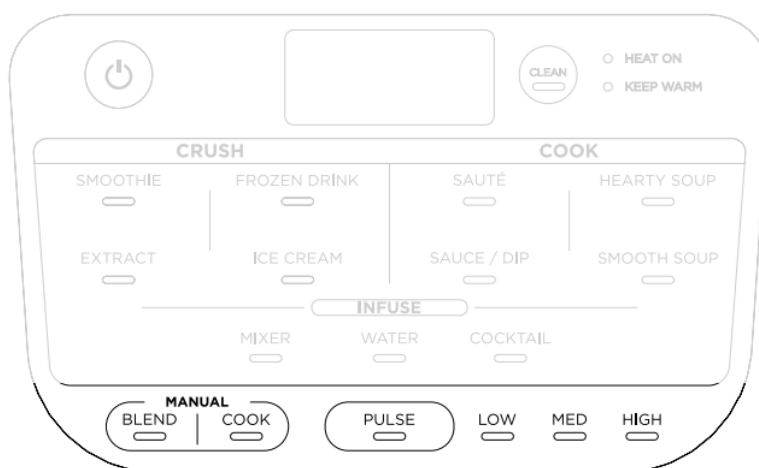

MANUAL BLEND

Manual Blend speeds give you ultimate control over your blend.

1. To begin, press the Power button.
2. Choose BLEND to unlock speed options.
3. Select LOW, MED, HIGH, or PULSE to begin blending.

NOTE: The Pulse setting will run only when the PULSE button is pressed.

MANUAL COOK

Manual Cook settings put the control in your hands.

1. To begin, press the Power button.
2. Choose COOK to unlock temperature options.
3. Select LOW, MED, or HIGH to begin cooking.
4. The timer will count up to 60 seconds or until manually stopped.

NOTE: You can press PULSE during Manual Cook mode to gently stir ingredients.

NOTE: For best results, quickly PULSE ingredients periodically during cooking to distribute heat and promote even cooking.

CARE & MAINTENANCE

IMPORTANT: Review all warnings on pages 4–5 before proceeding.

• CLEANING

Allow parts to cool before cleaning. Separate all parts before cleaning.

• Hand-Washing

Wash the pitcher, and lid, and tamper with warm, soapy water. Use the included cleaning brush to avoid direct contact with the blades.

- **NOTE:** DO NOT submerge the blender pitcher. Submerging will damage the integrated heating element.

• Dishwasher

The lid, center cap, and tamper are dishwasher safe.

- **NOTE:** DO NOT wash the blender pitcher in the dishwasher. Dishwashing will damage the integrated heating element.

• Motor Base

Press the power button to turn off the unit, then unplug the motor base. Wipe the motor base with a clean, damp cloth.

CLEAN

A combination of heat and rapid pulses easily removes residue from the nonstick coating in minutes.

1. Fill the pitcher with 24 oz. of water and 2 small drops of dish soap.
2. Place the lid on the pitcher and ensure it is properly closed.
3. Press CLEAN.
4. When the program is complete, discard the water and thoroughly rinse the pitcher.

TIPS FOR BEST CLEANING RESULTS:

- Give the pitcher a quick rinse before running CLEAN.
- Run CLEAN immediately after use.

STORING

Store the unit upright with the lid secured on the pitcher.

NOTE: DO NOT stack items on top of the unit. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

RESETTING THE MOTOR

This unit features a unique safety system that prevents damage to the motor by temporarily disabling the motor if it begins to overheat. Should this occur, follow the reset procedure below.

1. Unplug the unit from the electrical outlet.
2. Allow the unit to cool for approximately 15 minutes before using.

IMPORTANT: Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit ninjaaccessories.com.

DISPLAY SCREEN AND ERROR MESSAGES

DISPLAY SCREEN MESSAGES

- **“Lid”**

The lid is not assembled correctly. Be sure the lid is on the pitcher and locked in place before running a program.

- **“JAR”**

The pitcher is not properly attached to the base. Be sure the pitcher is secured in the base before selecting a program.

- **“—” Blinking**

You are attempting to run a program too many times in a row. For your safety, certain programs may be run only 2 consecutive times.

NOTE: DO NOT attempt to remove the pitcher while the blender is running. Wait for the blades to stop spinning before removing the pitcher.

ERROR MESSAGES

- **“E01” or “E02”**

Remove and reinstall the pitcher. If that does not solve the issue, contact Customer Service at 1-877-646-5288. So we may better assist you, please register your product online at registeryourninja.com and have the product on hand when you call.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn the power off and unplug the unit before troubleshooting

The unit doesn't turn on.

- Make sure the unit is plugged in.
- The display will light up with usable programs once connected to power. The pitcher and lid must be engaged to select a program.

The lid is stuck on the pitcher.

- Remove the lid by rotating the handle counterclockwise and then lift it up.

Cannot install the pitcher on the base.

- Make sure the Ninja® logo is facing forward before placing the pitcher directly onto the blender base. If the pitcher is still not fully seated, rotate the metal coupling under the pitcher to help align it to the base.

Cannot change time or temperature settings on Auto-iQ® programs.

- All programs were developed by culinary experts to deliver the perfect balance of heating, stirring, and blending patterns to give perfect results, so you do not have to set the time or temperature.
- To select a specific temperature, use the Manual COOK setting instead of an Auto-iQ program.

The program has been paused.

- If the lid is removed while running a program or while in Manual mode, the cooking or blending function will pause. Replace the lid and push the program button again to resume.

Why does the blender sometimes count up and other times count down?

- Auto-iQ programs are timed to finish on their own when they are complete, so the clock counts down until the program has finished. In Manual modes, the clock will count up from 0 until the auto-shutoff time is reached or the button for the currently running mode is selected again.

The pitcher still has residue after running the Clean program.

- Try running the CLEAN program a second time. You may also hand-wash the pitcher with the included cleaning brush, which is specifically designed to clean those hard-to-reach areas.

The control panel returns to standby mode.

- The control panel is designed to return to standby mode when left inactive for 3 minutes. If you have taken longer than 3 minutes to choose a function, or if the program has finished, the unit will return to standby mode.

Why does the unit beep during Auto-iQ programs?

- We've incorporated STIR ALERT within all Auto-iQ programs to let you know the unit is about to stir. The alert

is 3 beeps followed by a 2-second pause before each stir.

The unit shuts off before the function has finished.

- If the unit turns off while it is running, and no message is shown on the display, remove the pitcher to check for water on the base. If the bottom of the pitcher or the rubber pad on the base is wet, clean the area and set the blender base aside to dry before using it again.
- The rubber pad on the blender base is removable for easy cleaning.

ONE (1) YEAR LIMITED WARRANTY

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of SharkNinja Operating LLC. Warranty coverage applies to the original owner and the original product only and is not transferable. SharkNinja warrants that the unit shall be free from defects in material and workmanship for one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable components deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, removable pots, racks, pans, and blender bases, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at ninjaaccessories.com.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used, or operated outside North America.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit ninjakitchen.com/support for product care and maintenance self-help. Our Customer Service Specialists are also available at 1-877-646-5288 to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. So we may

better assist you, please register your product online at registeryourninja.com and have the product on hand when you call. SharkNinja will cover the cost for the customer to send the unit to us for repair or replacement. A fee of \$19.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

How to initiate a warranty claim

You must call 1-877-646-5288 to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at registeryourninja.com and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.

How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

SharkNinja Operating LLC US: Needham, MA 02494 1-877-646-5288 ninjakitchen.com

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. LAUTO-IQ and NINJA are registered trademarks of SharkNinja Operating LLC. FOODI is a trademark of SharkNinja Operating LLC. For SharkNinja U.S. patent information, visit sharkninja.com/uspateints.

© 2019 SharkNinja Operating LLC



REGISTER YOUR PURCHASE

registeryourninja.com

Scan the QR code using a mobile device

RECORD THIS INFORMATION

- Model Number: _____
- Serial Number: _____
- Date of Purchase (Keep receipt): _____
- Store of Purchase: _____

TECHNICAL SPECIFICATIONS

- **Voltage:** 120V, 60Hz
- **Watts:** 1000W


PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

These instructions are designed to help you get a complete understanding of your new Ninja Foodi Blender.

If you have any questions, please call our Customer Service line at 1-877-646-5288.

TIP: You can find the model and serial numbers on the QR code label on the back of the motor base.

Documents / Resources

 <p>NINJA HB150 Series 1 Series FOODI BLENDER MÉLANGEUR LICUADORA FOODI</p>	<p>NINJA HB150 Series Hot Blender with Precision Heating Element [pdf] User Guide HB150C, HB150, HB150 Series Hot Blender with Precision Heating Element, HB150 Series, H ot Blender with Precision Heating Element, Precision Heating Element, Heating Element, Element</p>
---	--

References

- [🌐 Sharkninja Progressive Web App](#)
- [N Blenders, Air Fryers, Indoor Grills, Cookware & More – Ninja](#)
- [N Sign In](#)
- [📄 sharkninja.com/uspatents](#)
- [User Manual](#)