



## NINJA MC1000WM E2GB Blender Replacement Motor Base Owner's Manual

[Home](#) » [Ninja](#) » NINJA MC1000WM E2GB Blender Replacement Motor Base Owner's Manual 

# NINJA®



**POSSIBLECOOKER™**  
**Owner's Guide**  
**"Recipe book not included"**

## Contents

### 1 IMPORTANT SAFEGUARDS

### 2 PARTS

### 3 BEFORE FIRST USE

### 4 GETTING TO KNOW THE NINJA® FOODI® POSSIBLECOOKER™

### 5 USING THE NINJA® FOODI® POSSIBLECOOKER™

### 6 CLEANING & MAINTENANCE

### 7 TROUBLESHOOTING GUIDE

### 8 HELPFUL HINTS





### 9 Documents / Resources

#### 9.1 References

## IMPORTANT SAFEGUARDS

### HOUSEHOLD ONLY • READ ALL INSTRUCTIONS BEFORE USE

814100150A

	Read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.



#### WARNING

**To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.**

1. To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
2. This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge if they have been given supervision and instruction concerning use of the appliance in a safe way and understand the hazards involved.
3. Keep the appliance and its cord out of reach of children. DO NOT allow children to play with or use the appliance. Close supervision is necessary when used near children.
4. A short-power supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
5. Spilled food can cause serious burns. DO NOT let cord hang over edges of tables or counters or place appliance on or near hot surfaces, on or near a gas or electric burner, or in a heated oven.
6. DO NOT operate multicooker in water or under running water.
7. To protect against risk of electrical shock, do not immerse the multicooker housing in water or any other liquid. If housing falls into liquid, unplug the cord from outlet immediately. DO NOT reach into the liquid.
8. DO NOT use the appliance without the Cooking Pot installed.

9. Before placing removable Cooking Pot in the cooker base, ensure pot and cooker base are clean and by wiping with a soft cloth.
10. When removable Cooking Pot is empty, DO NOT heat it for more than 10 minutes. Doing so may damage the cooking surface.
11. DO NOT use this appliance for deep-frying.
12. **CAUTION:** Sear/Sauté reaches high temperatures. If unmonitored, food may burn on this setting. Use care when touching hot surfaces and when removing food to avoid burns. Do not use the lid and do not leave your cooker unattended while using Sear/Sauté.
13. Avoid sudden temperature changes, such as adding refrigerated foods to a heated pot.
14. **CAUTION:** The Cooking Pot and Lid get very hot while using Braise. Use care when touching hot surfaces and when removing food to avoid burns
15. Caution should be used when searing meats and sautéing. Keep hands and face away from the removable Cooking Pot, especially when adding new ingredients, as hot oil may splatter.
16. This appliance is for household use only. DO NOT use this appliance for anything other than its intended use. DO NOT use in moving vehicle or boats. DO NOT use outdoors. Misuse may cause injury.
17. **CAUTION:** To reduce the risk of electric shock, cook only in the pot provided or in containers placed on the cooking rack in the provided pot.
18. Intended for countertop use only. Ensure the surface is level, clean, and dry. DO NOT place the appliance near the edge of a countertop during operation.
19. DO NOT use the appliance if there is damage to the power cord or plug. Regularly inspect the appliance and power cord. If the appliance malfunctions or has been damaged in any way, immediately stop use and contact a service center.
20. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to modify the plug in any way.
21. ALWAYS ensure the appliance is properly assembled before use.
22. DO NOT use accessory attachments not recommended or sold by SharkNinja. DO NOT place accessories in a microwave, toaster oven, convection oven, or conventional oven, or on a ceramic cooktop, electrical coil, gas burner range, or outdoor grill. The use of accessory attachments not recommended by SharkNinja may cause fire, electric shock, or injuries.
23. **CAUTION:** A heated pot may damage countertops or tables. When removing the hot pot from the multicooker, DO NOT place it directly on any unprotected surface. ALWAYS set the hot pot on a trivet or a rack.
24. When using this appliance, provide at least 6 inches (15.25 cm) of space above and on all sides for adequate air circulation.
25. DO NOT operate your appliance in a garage or under a wall cabinet. When storing in an appliance garage always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
26. ALWAYS follow the maximum and minimum quantities of liquid as stated in instructions and recipes.
27. To avoid possible steam damage, place the unit away from walls and cabinets during use.
28. NEVER use SLOW COOK setting without food and liquids in the removable Cooking Pot.
29. **CAUTION:** The Cooking Pot and Lid get very hot while using Braise. Use care when touching hot surfaces and when removing food to avoid burns.
30. The Cooking Pot and Lid get very hot while using Slow Cook. Use care when touching hot surfaces and when

removing food to avoid burns.

31. DO NOT move the appliance when in use.
32. Prevent food contact with heating elements. DO NOT overfill Cooking Pot. Overfilling may cause personal injury or property damage or affect safe use of the appliance.
33. DO NOT use this unit to cook instant rice.
34. Electrical outlet voltages can vary, affecting the performance and heat output of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.
35. Should the unit emit black smoke, unplug immediately and wait for smoking to stop before removing the Cooking Pot.
36. DO NOT touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, ALWAYS use protective hot pads or insulated oven mitts and use available handles and knobs.
37. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Improper use, including moving the cooker, may result in personal injury such as serious burns.
38. When unit is in operation, hot steam may be released into the air via the steam hole in the top of the lid. Place unit so steam hole is not directed toward, electrical outlets, cabinets or other appliances. Keep your hands and face at a safe distance from steam hole.
39. When using SLOW COOK setting, ALWAYS keep the lid closed.
40. The base unit, inner cooking pot and glass lid become extremely hot during the cooking process.  
Avoid hot steam and air while removing the inner cooking pot and glass lid from the base unit. ALWAYS place them on a heat-resistance surface after removing. DO NOT touch accessories during or immediately after cooking.
41. ONLY lift the lid from the handle on the front of the unit. DO NOT lift lid from side area as scalding steam will release.
42. Removable Inner Cooking Pot can be extremely heavy when full of ingredients. Care should be taken when lifting pot from cooker base.
43. DO NOT touch accessories, including the thermometer (not available on all models), during or immediately after cooking, as they become extremely hot during the cooking process. To prevent burns or personal injury, ALWAYS use care when handling the product. Use long-handed utensils and protective hot pads or insulated oven mitts.
44. Cleaning and user maintenance shall not be done by children.
45. Allow unit to cool before cleaning, disassembly, putting in or taking off parts and storage.
46. When not in use and before cleaning, turn the unit off and unplug from socket to disconnect.
47. DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
48. Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
49. DO NOT place appliance on hot surfaces, near hot gas or electric burner, in a heated oven, or on a stovetop.


## **SAVE THESE INSTRUCTIONS**

## **TECHNICAL SPECIFICATIONS**

**Voltage:** 120V~, 60Hz

**Power:** 1200 Watts

## **PARTS**

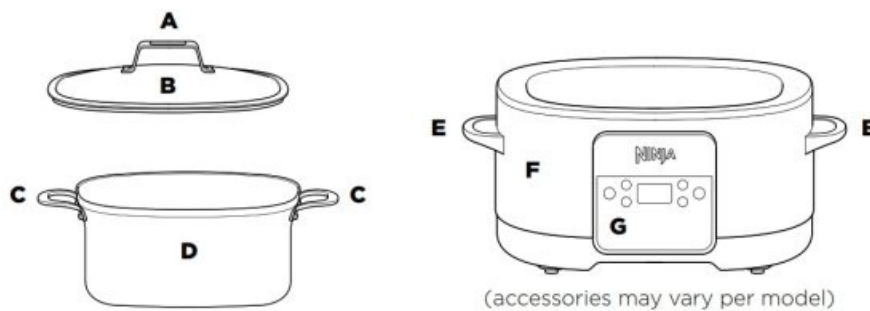

**A** Cooking Lid Handle/Spoon-Ladle Rest  
**B** Cooking Lid  
**C** Pot Side Handles  
**D** 8.5-Quart Cooking Pot

**E** Main Unit Handles  
**F** Main Unit  
**G** Control Panel


**Note:** The image shown here is for illustrative purposes only and may be subject to change. The actual number of accessories may vary depending on the model.

## BEFORE FIRST USE

1. Remove and discard any packaging material, stickers, and tape from the unit.
2. Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
3. Wash the Main Base Unit, Inner cooking pot and cooking pot lid with a damp, soapy cloth, then rinse with a clean damp cloth and dry thoroughly. NEVER submerge the main unit in water.
4. We recommend turning the unit on and running the unit for 10 minutes without adding food.

Make sure the area is well ventilated. This removes any packaging residue and odor traces that may be present. This is completely safe and not detrimental to the performance of the Possible Cooker.™

## GETTING TO KNOW THE NINJA® FOODI® POSSIBLECOOKER™

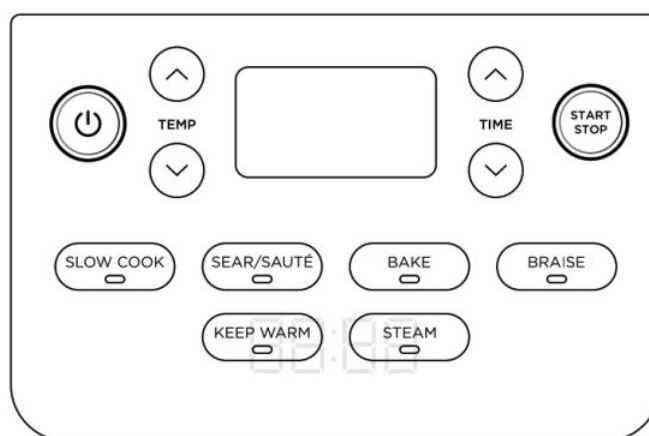

## COOKING FUNCTIONS

**SLOW COOK:** Cook your food at a lower temperature for a longer period of time.

**SEAR/SAUTE:** Use the unit as a cooktop for browning meats, sauteing veggies, simmering sauces, and more.

**BRAISE:** Transform tougher cuts of meat by first browning at high heat (with oil) and then simmering in liquid at low heat.


**STEAM:** Gently cook delicate foods at a high temperature.

**BAKE:** Use the unit like an oven for tender meats, baked treats, and more.

**KEEP WARM:** Reheat or keep cooked food warm for longer periods of time.

**NOTE:** If no cooking function is chosen, the unit will shut off after 10 minutes.

## OPERATING BUTTONS

 **(POWER):** The Power button shuts the unit off and stops all cooking modes.

**TEMPERATURE ARROWS:** Use the up/down arrows to the left of the display to adjust the cooking temperature.

**TIME ARROWS:** Use the up/down arrows to the right of the display to adjust the cooking time.

**START/STOP button:** Press START to begin cooking. Pressing START/STOP during a cook cycle will stop current.

**Function Buttons:** Use the function buttons to select the desired cooking function.

The image shown here is for illustrative purposes only and may be subject to change.

The actual descriptions of control panel and their locations may vary, depending on the model.

## USING THE NINJA® FOODI® POSSIBLECOOKER™

### COOKING FUNCTIONS

#### Slow Cook

1. Press the STEAM function button.
2. Press the +/- TEMP arrows to select HI or LO.
3. Select a time between 3 and 12 hours in 15-minute increments.

**NOTE:** SLOW COOK LO time may be adjusted between 6 and 12 hours. SLOW COOK HI may be adjusted between 3 and 12 hours.

4. Press START/STOP to begin cook time.
5. When cook time reaches zero, the unit will beep, automatically switch to KEEP WARM, and begin counting up.

**NOTE:** The unit will automatically shut off after 12 hours on KEEP WARM.

#### Sear/Saute

1. Press the SEAR/SAUTE function button.
2. Press the +/- TEMP buttons to choose HI or LO temperature.

**NOTE:** It is recommended to let the unit heat up for 5-minutes prior to adding ingredients.

3. Press START/STOP to begin cooking.
4. Press START/STOP to turn off the SEAR/SAUTE function.

**NOTE:** DO NOT use metal utensils, they will scratch the nonstick coating on the pot.

**NOTE:** You can use this function with or without the lid placed on the pot.

**NOTE:** In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.

For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir.

It is recommended to rinse the water reservoir with fresh water prior to its first use.

#### Steam

1. Press the STEAM function button.
2. Use the +/- TIME arrows to adjust cook time in 1-minute increments.
3. Press START/STOP to begin cooking.

4. The display will show PrE, indicating the unit is preheating to selected temperature.
5. When the unit reaches the appropriate steam level, the display will show the set temperature and the timer will begin to count down.
6. When cook time reaches zero, the unit will beep and display END.  
**NOTE:** Use one cup or more of liquid when steaming.

## **Keep Warm**

1. Press the KEEP WARM function button.  
**NOTE:** Use the +/- TIME arrows to adjust cook time in 1-minute increments up to 1-hour or 5-minute increments up to 6-hours.  
**NOTE:** To deglaze, pour 1 cup liquid into pot.  
Scrape brown bits from bottom of pot and mix into cooking liquid.  
**NOTE:** The unit will automatically switch to KEEP WARM at the end of each cook cycle.

## **Braise**

1. Sear ingredients in the pot using the Sear/Saute instructions.
2. Once complete, deglaze with wine or stock.
3. Add remaining cooking liquid and ingredients into the pot.
4. Press the BRAISE function button. The default temperature setting will display.
5. Use the +/- TIME arrows to set cook time in 15-minute increments.
6. Press START/STOP to begin cooking.

## **Bake**

1. Place ingredients and any recommended accessory into the pot.
2. Press the BAKE function button. The default temperature will display.
3. Use the +/- TEMP arrows to set temperature between 250°F and 425°F.
4. Use the +/- TIME arrows to adjust cook time in 1-minute increments up to 1-hour or 5-minute increments up to 6-hours.
5. Press START/STOP to begin cooking.
6. When cook time reaches zero, unit will beep, and display END for 5 minutes. If food requires more time, use +/- TIME arrows to add time.

## **CLEANING & MAINTENANCE**

### **Cleaning: Dishwasher & Hand-Washing**

The unit should be cleaned thoroughly after every use

1. Unplug the unit from the wall outlet before cleaning.
2. To clean the cooker base and the control panel, wipe them clean with a damp cloth.
3. The cooking pot, glass lid, and spoon–ladle can be washed in the dishwasher.
4. If food residue is stuck on the cooking pot, fill pot with water and allow to soak before cleansing. If food residue is stuck on glass lid or silicone spoon–ladle, use a non- abrasive cleanser. DO NOT use scouring pads. If

scrubbing is necessary, use a non-abrasive cleanser or liquid dish soap with a nylon pad or brush.

5. Air-dry all parts after each use.

**NOTE:** NEVER put the cooker base in the dishwasher or immerse it in water or any other liquid.

## **TROUBLESHOOTING GUIDE**

### **The unit won't turn on.**

- Make sure the power cord is securely plugged into the outlet.
- Try plugging the cord into a different outlet.
- Reset the circuit breaker if necessary.

### **“ADD POT” error message appears on display screen.**

- Cooking pot is not inside the cooker base. Cooking pot is required for all functions.

### **“ADD WATER” error message appears on display screen.**

- The water level is too low. Add more water to the unit to continue.

### **Why is the time counting down so slowly?**

- You may have set hours rather than minutes. When setting time, the display will show HH:MM and the time will increase/decrease in minute increments.

### **The unit is counting up rather than down.**

- The Slow Cook cycle is complete and the unit is in Keep Warm mode.

### **“E1”, “E2”**

- The unit is not functioning properly. Please contact

### **Why did my unit shut off?**

- If a cook function is not chosen within 10 minutes after turning on the unit, it will automatically shut off.

## **HELPFUL HINTS**

1. Inner cooking pot is oven safe up to 500°F.
2. Use the Keep Warm mode to keep food at a warm, food-safe temperature after cooking.
3. Refrain from removing the lid during a cook cycle.
4. The Cooking Pot is NOT stove top safe.
5. The glass lid can be cleaned in the dishwasher.




- 6. The Spoon–ladle can be cleaned in the dishwasher.
- 7. Preheat time will vary depending on quantity and temperature of ingredients.
- 8. ALWAYS use oven mitts when removing the cooking pot from the base unit.
- 9. Store extra food in sealed, freezer–friendly containers.

PRINTED IN MEXICO  
SC: 11-06-2023 Elbrd: A.M  
SHNMDL: MC1000WM\_E2GB  
OBPN:MC1000WMSeries\_IB\_MP\_Mv3\_221018  
8 1 4 1 0 0 1 5 0 A



Documents / Resources

	<p><a href="#">NINJA MC1000WM E2GB Blender Replacement Motor Base</a> [pdf] Owner's Manual MC1000WM_E2GB, MC1000WM E2GB Blender Replacement Motor Base, MC1000WM E2GB , Blender Replacement Motor Base, Replacement Motor Base, Motor Base, Base</p>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.