

# Nintendo KM701 N-Switch Wireless Pro Controller User Manual

Home » Nintendo » Nintendo KM701 N-Switch Wireless Pro Controller User Manual



Nintendo KM701 N-Switch Wireless Pro Controller




### **Contents**

- **1 Product Profile**
- **2 Product Diagram**
- **3 Controller Mode & Operation**
- **4 Nintendo Switch Mode**
- **5 After-sales Service**
- 6 Controller Sleep/Wake-up function
- **7 LED Light Effect Control**
- **8 Adjust Vibration Intensity**
- 9 Controller Shutdown function
- **10 Turbo/Auto Function**
- 11 Controller Parameter Reference
- 12 FCC Statement
- 13 Documents / Resources
- **14 Related Posts**

# **Product Profile**

The Switch Pro Controllers is compatible with Switch/ Lite/OLEO and PC. Support TURBO, wake-up function,
6-axis gyro, 3 level vibration, 800mAh battery and 7-color LED for ultimate control – perfect for Switch controllers enthusiasts.

# **Product Diagram**

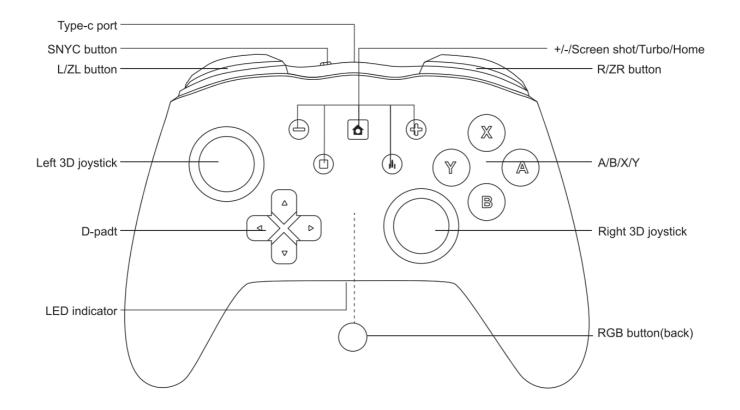


# **Controller Mode & Operation**

PLATFORM	NS Switch	Windows
CONNECTION	Bluetooth	Cable
RECONNECTION	HOME	

# **Nintendo Switch Mode**


# Step1:

Select "Controllers" on the HOME Menu.

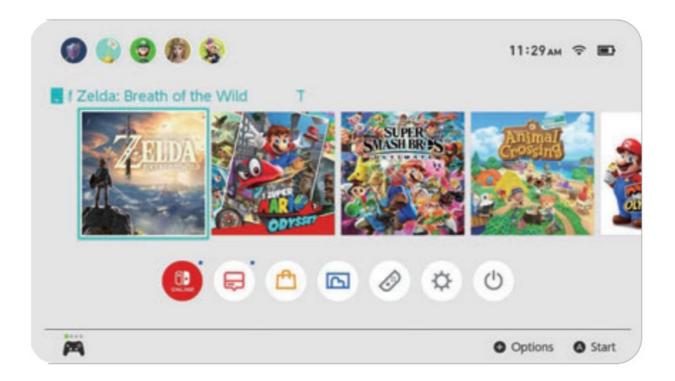


Step 2:

Select "Change Grip/Order".

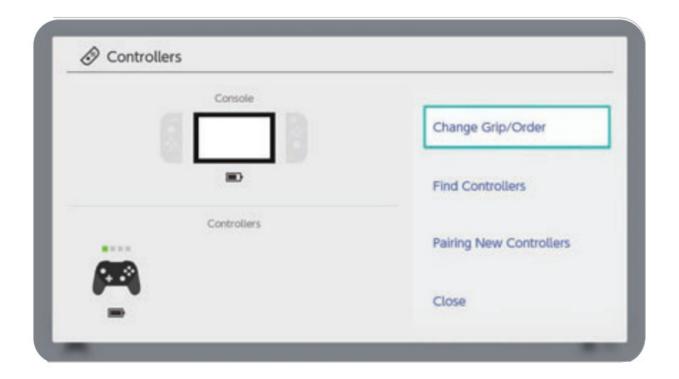

# Step 3:

Press the SYNC button, and the LED light will blink for 5-7s until the controller is connected to the Switch.

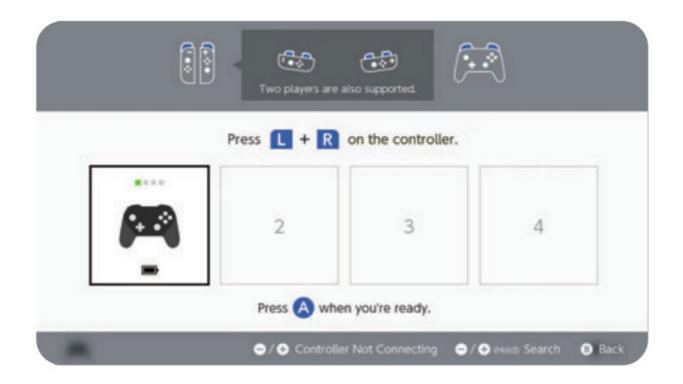

### **After-sales Service**

- If there are any problems with your product, please contact our service team.
- We hope you never have the need, but if you do, our service is friendly and hassle-free.

# Controller Sleep/Wake-up function

Sleep: The Controller will automatically enter sleep mode if there is no operation within 5 minutes.

**Wake-up:** Pressing HOME button the controller will power on and reconnect the device which connected last time.

# **LED Light Effect Control**

- 1. Single-click the RGB button to control the light to cycle through solid colors: red, orange, yellow, green, cyan, blue, purple, off.
- 2. Double-click the RGB button to control the light to cycle through dazzling colors: 7-color gradient, single-color gradient, rainbow flow gradient, off.
- 3. Press and hold the RGB button for 1 second to control the brightness of the light to cycle through: dim, medium, bright, super bright, off.

# **Adjust Vibration Intensity**

- 1. There are 3 levels vibration intensity can be set, and the default level up on first power-up is the moderate vibration:
- 2. Press and hold the L/ZL/R/ZR buttons for 3 seconds to cycle through the 3 levels of vibration intensity, namely "weakest-moderate-strongest".

#### **Controller Shutdown function**

Press and hold the HOME button for 5 seconds, and the controller will power off with all LED lights off.

#### **Turbo/Auto Function**

A/B/X/Y/L/ZL/R/ZR/L3/R3 button can be set with TURBO/AUTO function;

#### • Enable/Disable the TURBO/AUTO function:

- **1 Step:** Hold down the function key, then lightly press the TURBO key to set TURBO function.
- 2 Step: Press the function key + TURBO button again to activate the auto TURBO function.
- 3 Step: Press the function key + TURBO button 3 times to turn off the TURBO function.

### **Adjust TURBO speed**

- 1. Three speeds (8/15/25 times per second) can be set:
- 2. At first time use, the speed is 15 times per second. Press the down once to adjust turbo speed.
- 3. After the controller enters sleep mode or is shut down and restarted, the previously set TURBO function is automatically cleared, and it must be reset if TURBO function is to be used again.

#### **Controller Parameter Reference**

Product name	N-Switch Pro Controller
Model number	KM701
Charging current	≤ 500mA
Charging voltage	4.7~.5V
Product size	Approx. 154* 106*63mm
Power supply	built-in 800mAh polymer battery
Product weight	Approx.205g
Charging interface	Туре-с
Game time	About 8h
Charging time	About 2h
Package Contents	N-Switch Pro Controller, charging cable, user manual

#### **FCC Statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement.

### **Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### **Documents / Resources**



Nintendo KM701 N-Switch Wireless Pro Controller [pdf] User Manual KM701, 2BBMX-KM701, 2BBMXKM701, KM701 N-Switch Wireless Pro Controller, N-Switch Wireless Pro Controller, Wireless Pro Controller, Pro Controller, Controller

Manuals+,