

NT197B Switch Controller for Nintendo Switch/OLED



NT197B Switch Controller for Nintendo Switch/OLED Instructions

[Home](#) » [Nintendo](#) » NT197B Switch Controller for Nintendo Switch/OLED Instructions 

Contents


- [1 NT197B Switch Controller for Nintendo Switch/OLED](#)
- [2 Product Overview](#)
- [3 Connection Mode](#)
- [4 Functions](#)
- [5 Macro Programming](#)
- [6 Lighting Control Instructions](#)
- [7 Warranty](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



NT197B Switch Controller for Nintendo Switch/OLED



Product Overview

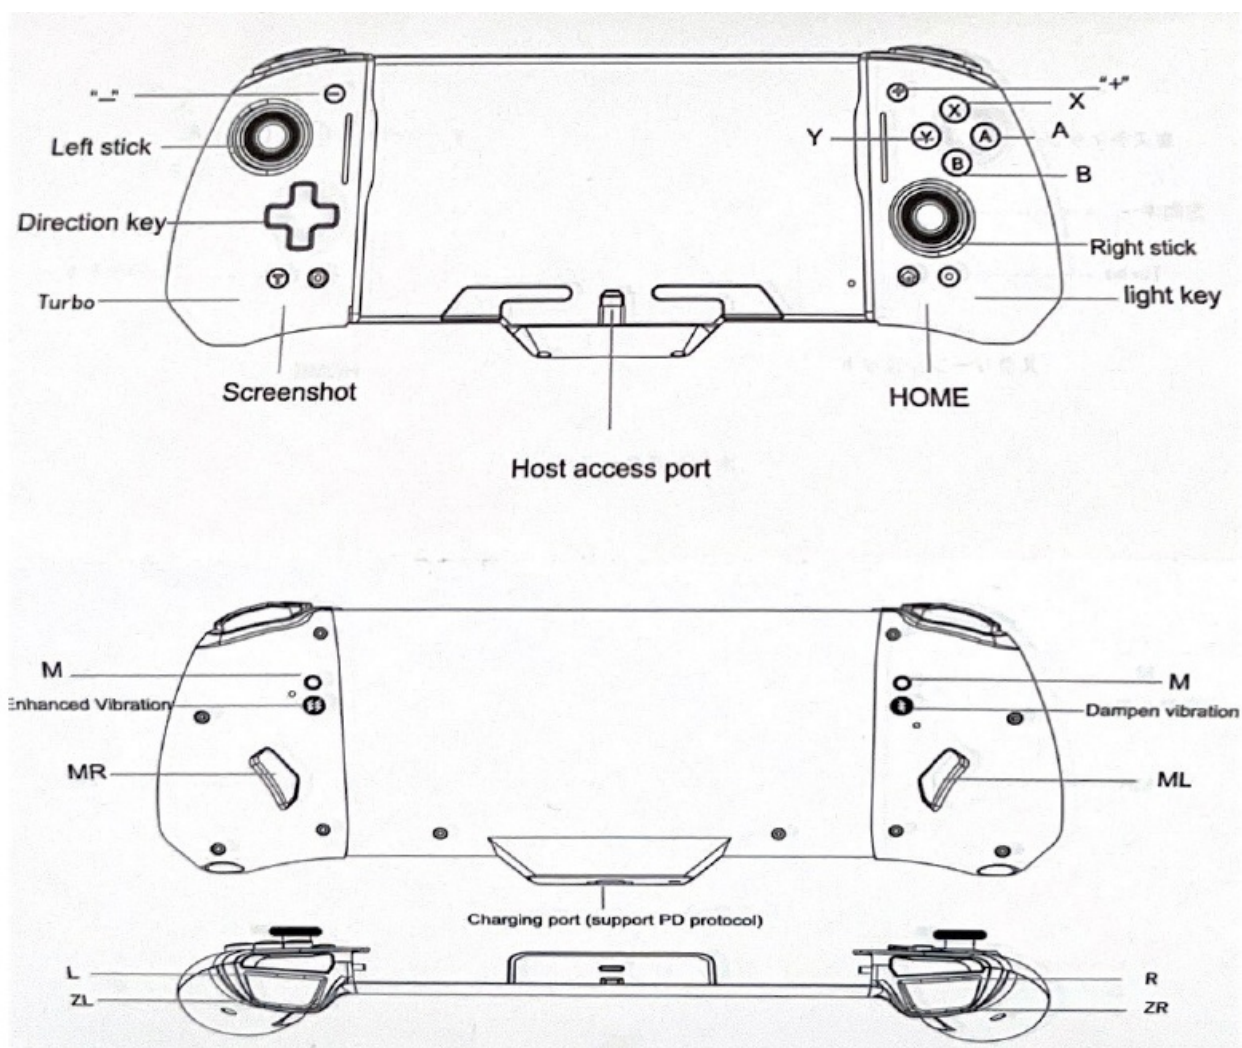



Connection Mode

Connection mode 

- Insert the switch host into the handle and connect it to the Type-C interface of the handle.

Motor vibration regulation

1. Enhance the vibration 
2. Reduce the vibration effect 
 - Motor vibration is divided into 5 gears: 100%, 75%, 50%, 30%, off. (The default is 30%), after the adjustment is successful, the motor will vibrate for 0.5 seconds. The previous setting will be memorized next time.
3. Set the cable function inside the host.

Functions

Back Key Function

1. **Single button setting:** 1 Press and hold the left M (setting key)+A (click) 2
 - Set the vibrating prompt for success 3 Set the MR back button to A
2. **Single button setting:** 1 Press and hold the right M (set key) + A (click) 2
 - Set the vibrating prompt for success 3 Set the ML back button to A

Turbo Continuous Function +

1. TURBO settings
 - Press (for the first time) A/B/X/Y/L1/L2/R1/R2/cross key and Turbo key to set the Turbo function;
 - Press the TURBO button again (the second time) without setting Turbo to realize the AUTO TURBO function;
 - Press the TURBO button again (for the third time) without setting Turbo to cancel the TURBO function:
 - Press and hold the Turbo button for 5 seconds to clear the Turbo function of all buttons, and there will be a vibration prompt when the clearing is successful;
2. TURBO speed adjustment
 - The speeds are: A. 5 consecutive shots per second (1st gear): B, 12 consecutive bursts per second (2nd gear); C, 20 consecutive bursts per second (3rd gear);
 - Adjustment method: Press the TURBO key and the “+” key to increase the speed by one step / press the TURBO key and the “-” key to reduce the speed by one step.

Macro Programming

Macro Programming

Macro programming can be programmed, 2 joysticks, L3, R3, cross keys, ABXY, L. R. ZL, ZR, + – keys with memory time.

Press and hold the setting key M key, then press the key you want to set (you can press one or more, you can press it at the same time or in sequence), after pressing the key you want to set, release the setting key to indicate that the setting is complete (there will be a vibrate alert). The programming key will store the previous operation. Press the programming key next time to trigger the stored operation, which can be used to set up combos in the game.

For example: press and hold the M key, 4 keys, and then press the B key in turn.

After 1 second, press the A key, after 3 seconds, press the X key, after the setting is completed, release the left M key to save and exit (vibration prompt). then press The function of the down XL key is B interval 1 second A interval 3 seconds X,) (completely copy the previous action, the joystick can also be set in).

Lighting Control Instructions



Lighting Control Instructions

1. Lightly press the light button on the right handle, the overall light color change, click to change a color, the sequence: red/yellow/blue/green/purple/orange/white/phantom color, cyclic change.
2. Double-click the light button to breathe
 - **The first time:** double-click RGB seven-color breathing;
 - **The second time:** double-click the monochromatic LED magic breath;
 - **Third time:** Double tap to turn off the light.
3. Press and hold the light key + direction key to adjust the brightness; press and hold the light key and the direction key up: the light will brighten; press and hold the light key and the direction key down: the light will dim; a total of

 
Warranty

Warranty period: 3 months from the date of purchase.

Please check the product as soon as it arrives. If you have any questions, please feel free to contact us at the email below.

Email address: jpsupt@yahoo.co.jp

Documents / Resources



[NINTENDO NT197B Switch Controller for Nintendo Switch/OLED](#) [pdf] Instructions
NT197B Switch Controller for Nintendo Switch OLED, NT197B, Switch Controller for Nintendo Switch OLED, Controller for Nintendo Switch OLED, Nintendo Switch OLED, Switch OLED, OLED

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.