



Nintendo SHVC-005 Entertainment System Controller Instruction Manual

August 7,
2025



Contents [[hide](#)]

1 Super Nintendo Entertainment System™

1.1 Controller

1.1.1 Health and Safety Information

1.1.1.1 CAREFUL USAGE

1.1.2 How to Use

1.1.3 Component Names and Functions

1.1.4 Removing the Battery

1.1.5 Nintendo Customer Support

1.1.6 Disposal of this Product

1.1.6.1 Technical Specifications

1.1.6.2 DECLARATION OF CONFORMITY

2 Documents / Resources

2.1 References

Super Nintendo Entertainment System™

Controller

[0525]

FXA-HAC-A-LRKSP-EUR-WWW5

Nintendo may change product specifications and update this information from time to time. The latest version of this document is available at

<https://www.nintendo.com/eu/docs> (This service may not be available in some countries.)

Health and Safety Information

Please read and observe the health and safety information. Failure to do so could result in injury or damage. Adults should supervise the use of this product by children.

WARNING - Battery

- Stop using this product if the battery is leaking. If battery fluid comes into contact with your eyes, immediately rinse your eyes with plenty of water and consult a doctor. If any fluid leaks on your hands, wash them thoroughly with water. Carefully wipe the fluid from the exterior of this product with a cloth.

WARNING - Electrical Safety

- The controller can be charged using the included USB charging cable (HAC-010) or a compatible AC adapter supporting 5V, 1.5A (7.5W), such as the Nintendo Switch AC adapter (HAC-002) provided with the Nintendo Switch console or sold separately. Make sure you use an AC adapter that is approved for use in your country.
- If you hear a strange noise, see smoke or smell something strange, stop using this product and contact Nintendo Customer Support.
- Do not expose device to fire, microwaves, direct sunlight, high or extremely low temperatures.
- Do not let this product come into contact with liquid and do not use it with wet or oily hands. If liquid gets inside, stop using this product and contact Nintendo Customer Support.

- Do not expose this product or the built-in battery to excessive force. Do not pull on the cable and do not twist it too tightly.
- Do not touch this product while charging during a thunderstorm.

WARNING - General

- Keep this product and packaging materials away from young children. Packaging items may be swallowed. The cable can coil around the neck.
- Do not use the controller within 15 centimetres of a cardiac pacemaker while using wireless communication. If you have a pacemaker or other implanted medical device, first consult a doctor.
- Wireless communication may not be allowed in certain places such as aeroplanes or hospitals. Please follow respective regulations.
- Do not disassemble or try to repair this product or the built-in battery. If either are damaged, stop using the product and contact Nintendo Customer Support. Do not touch damaged areas. Avoid contact with any leaking fluid.

CAREFUL USAGE

- If this product becomes dirty, wipe it with a soft, dry cloth. Avoid using thinner or other solvents.
- Make sure to charge the battery at least once every six months. If the battery is not used for an extended period of time, it may become impossible to charge it.


How to Use

Charge and pair the controller before using it for the first time.

How to Charge

Option 1: Connect the USB charging cable as shown in the diagram.

Option 2: Connect the controller directly to the AC adapter.

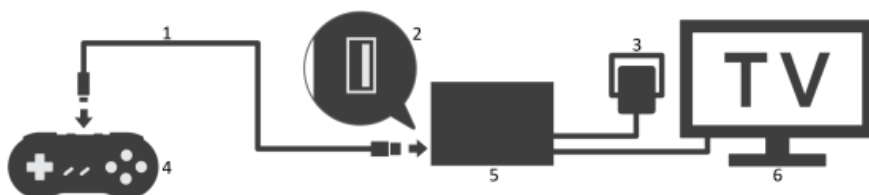


1. USB charging cable
2. USB port
3. AC adapter
4. Super Nintendo Entertainment System controller
5. Nintendo Switch console in TV mode
6. TV

How to Pair

If you connect the controller following option 1 and turn the console on, the controller will pair with the console automatically. You can also manually pair the controller by doing the following:

1. Open CONTROLLERS on the HOME Menu.
2. Select CHANGE GRIP/ORDER.
3. Hold the SYNC Button on the controller.
4. When the controller is paired, the LED will change to solid.

Component Names and Functions

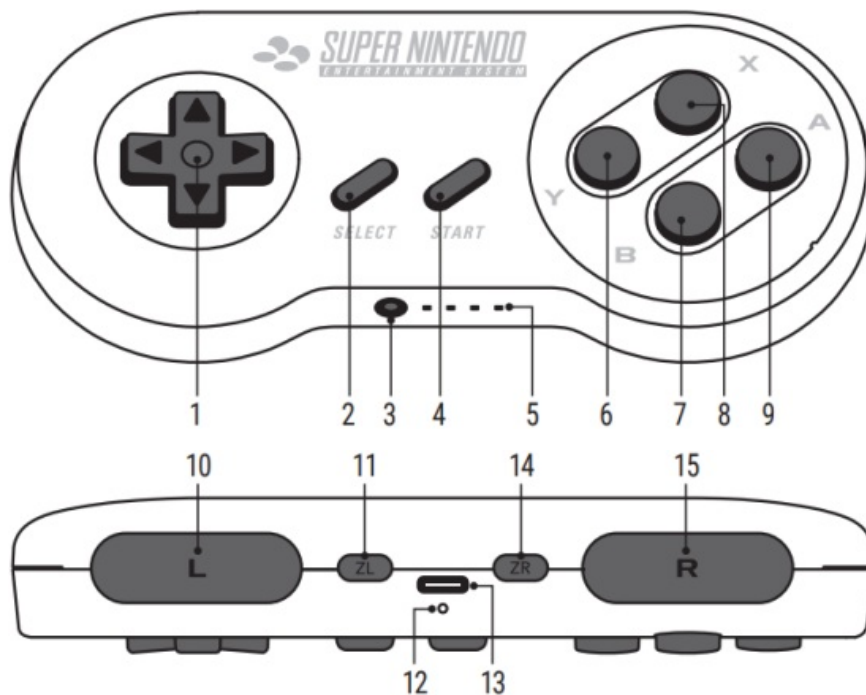

1. +Control Pad
2. SELECT Button
3. SYNC Button

4. START Button
5. Player LED
6. Y Button
7. B Button
8. X Button
9. A Button
10. L Button
11. ZL Button

Functions as the Capture Button when using Super NES - Nintendo Classics software.

12. Recharge LED
13. USB Type-C™ connector
14. ZR Button Functions as the HOME Button when using Super NES Nintendo Classics software.

Pressing ZR and ZL together opens the Suspend Menu when using Super NES - Nintendo Classics software.

15. R Button

Removing the Battery

The product contains a rechargeable lithium-ion battery. The battery should be removed by a qualified professional. Visit <https://www.nintendo.com/eu/battery> for more information.

Nintendo Customer Support

<https://support.nintendo.com>

Disposal of this Product

Do not dispose of this product or the built-in battery in household waste. For details see <https://www.nintendo.com/eu/docs>

Technical Specifications

SNES controller	Operating frequency band(s)	Maximum radio-frequency power
Bluetooth®	2402-2480MHz	4dBm

Product Ecodesign Information: Information concerning this product's energy efficiency and resource efficiency is available at <https://nintendo.com/eu/switch-ecodesign>.

For explanation of the symbols and markings used on this product, see <https://www.nintendo.com/eu/docs>

DECLARATION OF CONFORMITY

For UK: Hereby, Nintendo declares that the radio equipment type (Super Nintendo Entertainment System controller) is in compliance with the relevant statutory requirements. The full text of the declaration of conformity is available at the following internet address: <https://www.nintendo.com/eu/docs>

Hereby, Nintendo declares that the radio equipment type (Super Nintendo Entertainment System controller) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.nintendo.com/eu/docs>



Manufacturer: Nintendo Co., Ltd., Kyoto 601-8501, Japan

Importer in the EU: Nintendo of Europe SE, Goldsteinstrasse

235, 60528 Frankfurt, Germany

Importer in Australia: Nintendo Australia Pty. Ltd., 804 Stud Road, Scoresby, Victoria 3179, Australia

UK economic operator: Nintendo UK, Quadrant, 55-57 High Street, Windsor SL4 1LP, UK

MODEL NO.·MODÈLE N° : HAC-042, HAC-010

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Nintendo is under license. Other trademarks and trade names are those of their respective owners.

USB Type-C™ and USB-C™ are trademarks of the USB Implementers Forum.

© Nintendo

Trademarks are property of their respective owners. Nintendo Switch, Super Nintendo Entertainment System and Super NES are trademarks of Nintendo.



Documents / Resources

	<p>Nintendo SHVC-005 Entertainment System Controller [pdf] Instruction Manual</p> <p>FXA-HAC-A-LRKSP-EUR-WWW5, SHVC-005 Entertainment System Controller, SHVC-005, Entertainment System Controller, System Controller, Controller</p>
--	---

References

- [User Manual](#)

■ Nintendo

◆ controller, Entertainment System Controller, FXA-HAC-A-LRKSP-EUR-WWW5, Nintendo, SHVC-005, SHVC-005 Entertainment System Controller, System Controller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.