



Nintendo Switch Pro Controller Instructions

[Home](#) » [Nintendo](#) » Nintendo Switch Pro Controller Instructions 

Nintendo®

Control Sticks Are Not Responding Correctly
on Nintendo Switch Pro Controller



Contents

- [1 Description:](#)
- [2 Important:](#)
- [3 What to Do:](#)
- [4 Situation Not Resolved:](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

Description:

The control sticks on the Nintendo Switch Pro Controller do not respond or respond incorrectly.

Important:

- Prior to troubleshooting a controller, we strongly recommend you [calibrate the control sticks](#).

What to Do:

1. Ensure your Nintendo Switch console has the latest [system version](#).
2. Verify that the Nintendo Switch Pro Controller has power and that it is paired to the console.
 - o While on the [HOME Menu](#), press any button on the Pro Controller.
 - ◆ If one or more of the [player LEDs](#) on the controller blinks and remains lit, the controller is already paired to the console.
 - ◆ If the [player LEDs](#) momentarily light up in a sequence and then shut off, the Pro Controller will need to be [paired](#) to the console.
 - ◆ If none of the [player LEDs](#) light up, the Pro Controller is out of power and will need to be [recharged](#).
3. Once it is paired to the console, [calibrate the control sticks on the Pro Controller](#).
 - o If the control sticks do not respond correctly or if the calibration fails, reset the Pro Controller by pressing the [SYNC Button](#) once. Then press any other button to power on the controller again.
4. If the calibration was successful but the control sticks are not responding with a particular game or application, it is possible that the Pro Controller is not compatible with that software.

Check the software manual or game packaging.

 - o If the software is compatible with the Pro Controller, but the control sticks are not responding or are responding incorrectly, try the following:
 - ◆ Decrease the distance between the Pro Controller and the console.
 - ◆ To minimise wireless interference, ensure that the console is not placed behind a TV, under a metal object, or within 1 to 1.5 metres (three to four feet) of other wireless devices, such as wireless speakers, cordless phones, etc.
 - o If the issue persists, try testing the Pro Controller using a different compatible game or software.

Situation Not Resolved:

If the control sticks are not responding with a different compatible software, or if another compatible software is unavailable, the Nintendo Switch Pro Controller will need to be repaired.
Please [click here](#) to book a repair.

The Nintendo logo, featuring the word "Nintendo" in a bold, red, sans-serif font, with a registered trademark symbol (®) to the upper right of the letter "o".

