

# NITSIN LED Floor Lamp Adjustable Standing Lamp with **Remote Control Instructions**

Home » NITSIN » NITSIN LED Floor Lamp Adjustable Standing Lamp with Remote Control Instructions



#### **Contents**

- 1 NITSIN LED Floor Lamp Adjustable Standing Lamp with Remote Control
- **2 Product Information**
- **3 Introduction of Remote Control & Touch Control**
- 4 The Specification of Remote
- **5 Documents / Resources**
- **6 Related Posts**



NITSIN LED Floor Lamp Adjustable Standing Lamp with Remote Control



#### **Product Information**

The Remote Control & Touch Control Floor Lamp is a modern and convenient lighting solution. It allows you to control the lampthrough either the remote control or touch control panel. The remote control and floor lamp need to be paired before use. The lamp has three modes of lighting – white light, warm light, and natural light, and it can also be set to turn off automatically after 0.5 or 1 hour of use.

## **How to Use the Remote Control**

- 1. Ensure that the floor lamp adapter is powered on for 20 seconds to complete pairing.
- 2. Long press the switch button of the remote control.
- 3. When the indicator light flashes, the floor lamp is successfully paired with the remote control.
- 4. To turn on the light, short press the ON/OFF button of the remote control. Press it again to turn off.
- 5. To get white light (80% brightness, 4000K color temperature), short press the Read mode button.
- 6. To set the timer for automatic turn off, short press the 0.5Hr or 1Hr button. The floor lamp will blink three times to indicate that the timer is set.

## **How to Use the Touch Control**

- 1. Remove the protective film covering the top of the control panel before use.
- 2. To turn on the lamp, short press the ON/OFF button on the touch control panel. Press it again to turn off.
- 3. To adjust the color temperature, short press the Color Temperature M button.
- 4. To adjust the brightness, long press the Brightness M button.
- 5. To set the timer for automatic turn off, short press the Timing button. You can choose between 0.5h or 1 hour timing mode, or turn it off at any time.

If you have any questions, help or support, please contact Customer Service email and we will send you more information about this solution.


## **Introduction of Remote Control & Touch Control**

## **How to Use the Remote Control**

Before you use the remote control to operate, please complete the pairing of the remote control and the floor lamp

- 1. Please ensure the floor lamp adapter is powered on for 20 seconds to complete pairing
- 2. Long press the switch button of the remote control
- 3. When the indicator light flashes, the floor lamp is successfully paired with the remote control

## The Specification of Remote

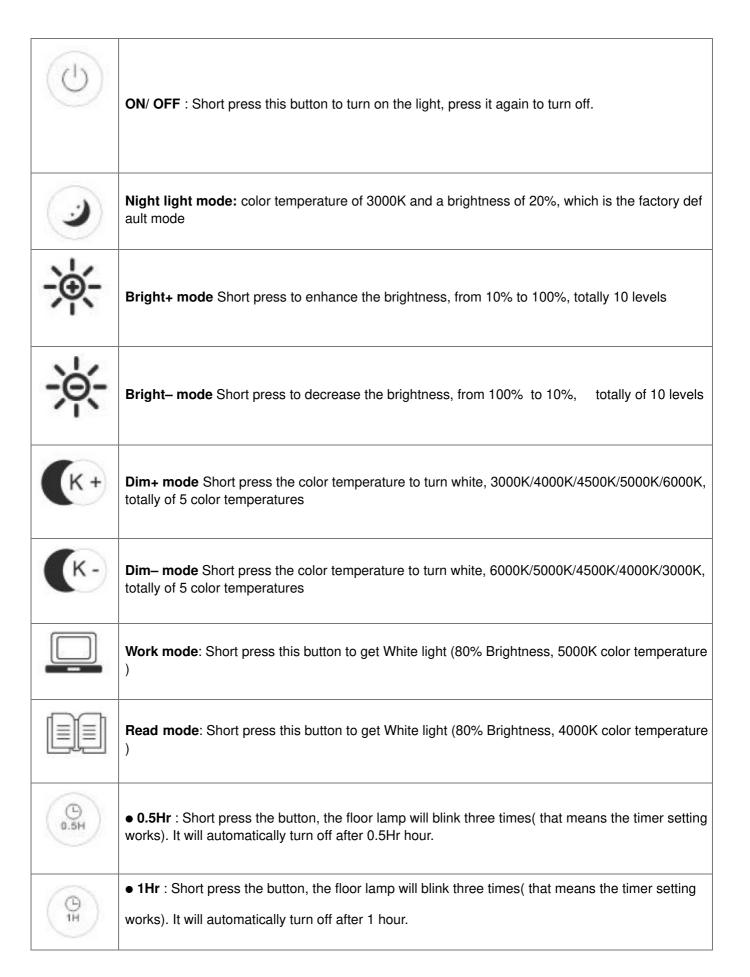

### **How to Use the Touch Control**

Before you use the touch control, please remove the protective film covering the top of the control panel

#### The Specification of Control Panel

	(1)	ON/OFF
	M	Adjust Color Temperature/Brightness
	0.5H 1H	0.5H/1H Timing

- "ON/ OFF" Button: Short press this button to turn it on, and Press it again to turn it off.
- "Color Temperature M" Button: Short press this button to set the color temperature
- "Brightness M": Long press this button to set the brightness
- "Timing" Button: You can choose between 0.5h or 1-hour timing mode, or you can turn it off at any time

If you have any questions, help, or support, please contact Customer Service email and we will send you more information about this solution.

#### **Documents / Resources**



NITSIN LED Floor Lamp Adjustable Standing Lamp with Remote Control [pdf] Instructions LED Floor Lamp Adjustable Standing Lamp with Remote Control, Adjustable Standing Lamp with Remote Control, Standing Lamp with Remote Control, Lamp with Remote Control, Remote Control

Manuals+,