

NOCO[®]
GBX45 Lithium
Jump Starter



NOCO GBX45 Lithium Jump Starter User Guide

[Home](#) » [NOCO](#) » NOCO GBX45 Lithium Jump Starter User Guide 

Contents

- 1 NOCO GBX45 Lithium Jump Starter
- 2 Product Information
- 3 FAQ
- 4 Important Safety Warnings
- 5 Personal Precaution
- 6 Accessories
- 7 Battery Charging
- 8 FCC STATEMENT
- 9 How To Use
- 10 Interface
- 11 Troubleshooting
- 12 Technical Specifications
- 13 Warranty
- 14 CONTACT
- 15 Documents / Resources
 - 15.1 References

NOCO[®]

NOCO GBX45 Lithium Jump Starter





Product Information

- The GBX45 is a versatile power pack designed for various charging needs.
- It features fast charging technology with a maximum rate of up to 60W, requiring a compatible charger that supports 60W USB-C Power Delivery 3.0 for optimal performance.
- Ensure the power pack is in a well-ventilated area when charging.
- Use a compatible charger to enable fast charging functionality.
- For auto charging, use the NOCO Auto Charger with the vehicle On/Running.
- Power on the GBX45 unit before connecting USB devices to avoid power drain.





FAQ

- **Q: Can I charge the GBX45 with any USB-C charger?**
 - **A:** To utilize fast charging, a compatible charger that supports 60W USB-C Power Delivery 3.0 is required for optimal performance.
- **Q: What should I do if the LED indicator shows a solid red light?**
 - **A:** This indicates reverse polarity detected. Reverse the battery connections to resolve this issue.

DANGER

-  **READ AND UNDERSTAND ALL SAFETY INFORMATION BEFORE USING THIS PRODUCT.** Failure to follow these safety instructions may result in ELECTRICAL SHOCK, EXPLOSION, and FIRE, which may result in a SERIOUS INJURY, DEATH, or PROPERTY DAMAGE.
-  **Electrical Shock.** The product is an electrical device that can shock and cause serious injury. Do not

cut power cords. Do not submerge in water or get wet.

-  **Explosion.** Unmonitored, incompatible, or damaged batteries can explode if used with the product. Do not leave the product unattended while in use. Do not attempt to jump-start a damaged or frozen battery. Use products only with batteries of recommended voltage. Operate products in well-ventilated areas.
-  **Fire.** The product is an electrical device that emits heat and is capable of causing burns. Do not cover the product. Do not smoke or use any source of electrical spark or fire when operating the product. Keep product away from combustible materials.
-  **Eye Injury.** Wear eye protection when operating product. Batteries can explode and cause flying debris. Battery acid can cause eye and skin irritation. In the case of contamination of eyes or skin, flush the affected area with running clean water and contact poison control immediately.
-  **Explosive Gases.** Working in the vicinity of a lead-acid is dangerous. Batteries generate explosive gases during normal battery operation. To reduce the risk of battery explosion, follow all safety information instructions and those published by the battery manufacturer and manufacturer of any equipment intended to be used in the vicinity of the battery. Review precautionary markings on these products and on the engine.

Important Safety Warnings

CAUTION

Manual Override Mode disables all safety measures. When used improperly and/or against our recommended use, it may result in injury or death and will void your warranty. Risk of fire, explosion, and burns. Do not disassemble, crush, heat above 60°C (140°F) or incinerate. This device is intended for temporary use outdoors and reasonable care should be exercised when using this device in wet conditions.

WARNING

Do not overcharge the internal battery. See Instruction Manual. Do not smoke, strike a match, or cause a spark in the vicinity of the power pack. Only charge the internal battery in a well-ventilated area when not in use.

CAUTION

Risk of Injury To Persons. Do not use this product if the power cord or the battery cables are damaged in any way. This device is not intended for use in a commercial repair facility. This device is intended to be stored indoors when not in use. This device shall not be stored or left outdoors when not in use.

Proposition 65. WARNING

- This product can expose you to chemicals including lead and exhaust fumes, which are known to the State of California to cause cancer and birth defects or other reproductive harm.
- For more information go to www.P65Warnings.ca.gov.

Personal Precaution

- Only use the product as intended.
- Someone should be within range of your voice or close enough to come to your aid in case of emergency.
- Have a supply of clean water and soap nearby in the case of battery acid contamination.
- Wear complete eye protection and protective clothing while working near a battery.
- Always wash your hands after handling batteries and related materials.

- Do not handle or wear any metal objects when working with batteries including; tools, watches, or jewelry.
- If metal is dropped onto the battery, it may spark or create a short circuit resulting in electrical shock, fire, and explosion which may result in injury, death or property damage.

Minors

- If the product is intended by «the Purchaser» to be used by a minor, the purchasing adult agrees to provide detailed instructions and warnings to any minor prior to use.
- Failure to do so is the sole responsibility of the «Purchaser,» who agrees to indemnify NOCO for any unintended use or misuse by a minor.

Choking Hazard

- Accessories may present a choking hazard to children.
- Do not leave children unattended with a product or any accessory. The product is not a toy.

Handling

- Handle product with care. The product can become damaged if impacted.
- Do not use a damaged product, including, but not limited to, cracks to the casing or damaged cables.
- Do not use the product with a damaged power cord. Humidity and liquids may damage the product.
- Do not handle the product or any electrical components near any liquid. Store and operate products in dry locations.
- Do not operate the product if it becomes wet.
- If a product is already operating and becomes wet, disconnect it from the battery and discontinue use immediately.
- Do not disconnect the product by pulling on the cables.
- **Caution:** Hot surface, Wait for the unit to cool down before handling.

Modifications

- Do not attempt to alter, modify or repair any part of the product.
- Disassembling a product may cause injury, death or property damage.
- If the product becomes damaged, malfunctions or comes in contact with any liquid, discontinue use, and contact NOCO.
- Any modifications to the product will void your warranty.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Accessories

- This product is only approved for use with NOCO accessories.
- NOCO is not responsible for user safety or damage when using accessories not approved by NOCO.

Location

- Prevent battery acid from coming in contact with the product.
- Do not operate the product in a closed-in area or an area with restricted ventilation.
- Do not set a battery on top of the product.
- Position cable leads to avoiding accidental damage by moving vehicle parts (including hoods and doors), moving engine parts (including fan blades, belts, and pulleys), or what could become a hazard that may cause injury or death.

Operating Temperature

- This product is designed to work in ambient temperatures between -20° C to 50° C.
- Do not operate outside of temperature ranges.
- Do not jump-start a frozen battery.
- Discontinue the use of product immediately if the battery becomes excessively warm.

Storage

- Do not use or store your product in areas with high concentrations of dust or airborne materials.
- Store your product on flat; secure surfaces so it's not prone to falling.
- Store your product in a dry location. The storage temperature is -20°C to +50°C (0°C ~ +25°C daily average). Never exceed 80°C under any condition.

Compatibility

- The product is only compatible with 12-volt lead-acid batteries only.
- Do not attempt to use the product with any other type of battery. Jump-starting other battery chemistries may result in injury, death or property damage.
- Contact the battery manufacturer before attempting to jump-start the battery.
- Do not jump-start a battery if you are unsure of the battery's specific chemistry or voltage.

The Battery

- The built-in lithium-ion battery in the product should be replaced only by NOCO and must be recycled or disposed of separately from household waste.
- Do not attempt to replace the battery yourself and do not handle a damaged or leaking lithium-ion battery.
- Never dispose of batteries in household trash.
- Disposal of batteries in household trash is unlawful under state and federal environmental laws and regulations.
- Always take used batteries to your local battery recycling center.
- If the product battery is excessively hot, emitting an odor, deformed, cut, or is experiencing or demonstrating an abnormal occurrence, immediately stop all use and contact NOCO.

Battery Charging

- Charge the product with the included USB-C charging cable. NOCO is not responsible for damage, injury, and/or death while using non-approved, third-party charging products.
- Be cautious of using low-quality power adaptors, as they may present a serious electrical risk that can result in injury and/or death to a person, device, and property.
- Using damaged cables or chargers, or charging when moisture is present, can result in electric shock. Using a generic or third-party power adapter may shorten the life of your product and cause the product to malfunction.
- NOCO is not responsible for the user's safety when using accessories or supplies that are not approved by NOCO. When using a USB power adapter to charge the product, make sure that the AC plug is fully inserted into the adapter before you plug it into a power outlet.
- Power adapters may become warm during normal use, and prolonged skin contact may cause bodily injury.
- Always allow adequate ventilation around power adapters when using them. To ensure maximum battery life, avoid charging your product for more than a week at a time, as overcharging may shorten battery life.
- Over time, an unused product will discharge and must be recharged before use. Disconnect the product from power sources when not in use. Use the product only for their intended purposes.

Medical Devices

- The product may emit electromagnetic fields.
- The product contains magnetic components that may interfere with pacemakers, defibrillators, or other medical devices.
- These electromagnetic fields may interfere with pacemakers or other medical devices.
- Consult with your physician before use if you have any medical devices including pacemakers.
- If you suspect the product is interfering with a medical device, stop using the product immediately and consult your physician.

Medical Conditions

- If you have any medical condition that you believe could be affected by the product, including but not limited to; seizures, blackouts, eyestrain or headaches, consult your physician prior to use of the product.
- The use of an integrated high-powered flashlight contains a light sensitivity hazard.
- Use of the light in Strobe Mode may cause seizures in persons with photosensitive epilepsy, which may result in serious injury or death.

Light

- Staring directly into the light beam or shine of the flashlight may result in permanent eye injury.
- The product is equipped with a high-output LED pre-focused lamp that emits a powerful beam at the highest setting.

Cleaning

- Power off the product before attempting any maintenance or cleaning.
- Clean and dry the product immediately if it comes in contact with liquid or any type of contaminant.
- Use a soft, lint-free (microfiber) cloth. Avoid getting moisture in openings.

Explosive Atmospheres

- Obey all signs and instructions. Do not operate products in any area with a potentially explosive atmosphere, including fueling areas or areas that contain chemicals or particles such as grain, dust or metal powders.

High-Consequence Activities

- This product is not intended for use where the failure of the product could lead to injury, death or severe environmental damage.

Frequency Interference

- The product is designed, tested, and manufactured to comply with regulations governing radio frequency emissions.
- Such emissions from the product can negatively affect the operation of other electronic equipment, causing them to malfunction.

FCC STATEMENT

Model Number: GBX45

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, according to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

How To Use

Step 1: Charge the GBX45

The GBX45 comes partially charged out of the box and needs to be fully charged before use. Connect the GBX45 using the included USB-C Charge Cable to the USB-C IN/OUT port. It can be recharged from any powered USB port, like an AC adapter, car charger, laptop and more. The USB-C IN/OUT port utilizes Power Delivery 3.0 technology capable of receiving/delivering up to 60W. The time to recharge a GBX45 will differ based on the discharge level and the power source used. Actual results may vary due to battery conditions.

Recharge Time:	Charger Rating:
16h	2.5W
8h	5W
4h	10W

When recharging, the charge level of the internal battery is indicated by the charge LEDs. The LEDs will slowly pulse 'on' and 'off' and become solid until all four charge LEDs are on. When the battery is fully charged, the green 100% LED will be solid, and the 25%, 50% and 75% charge LEDs will turn «off». From time to time, the green 100% LED will pulse indicating maintenance charging is occurring.

Internal Battery Level



Fast Charge

- The GBX45 is equipped with fast charging technology that allows it to be recharged at a rate of up to 60W.
- A compatible charger, capable of 60W USB-C Power Delivery 3.0, is required to fully utilize this feature.
- The fast charge LED will illuminate when rate of charge exceeds 15W, indicating USB Power Delivery 3.0 is active.

Fast Charge:	
Recharge Time:	Charger Rating:
0.8h	60W

Auto Charger

- The most effective way to charge GBX45 is by using The NOCO Auto Charger (not included).
- **NOTE:** The vehicle must be On / Running for the Auto Charger to Fast Charge the unit.

Auto Charger:	
Recharge Time:	Charger Rating:
0.8h	60W

Power Source

- When charging USB devices, it is important to power on the GBX45 unit first and then plug in the USB device being charged.
- **NOTE:** If the GBX45 unit is not powered on first, it will drain power from the USB device, if it is DRP compatible. To charge GBX45 with a DRP-compatible device (e.g phone, laptop, power bank) ensure GBX45 is powered OFF before making a cable connection between GBX45 and the DRP device.

Step 2: Connect to the Battery

Carefully read and understand the vehicle owner's manual on specific precautions and recommended methods for jump starting the vehicle. Make sure to determine the voltage and chemistry of the battery by referring to your battery owner's manual prior to using this product. The GBX45 is for jump-starting 12-volt lead-acid batteries only. Before connecting to the battery, verify that you have a 12-volt lead-acid battery. The GBX45 is not suitable for any other type of battery.

Identify the correct polarity of the battery terminals on the battery. The positive battery terminal is typically marked by these letters or symbols (POS, P,+). The negative battery terminal is typically marked by these letters or symbols (NEG, N,-). Do not make any connections to the carburetor, fuel lines, or thin, sheet metal parts. The below instructions are for a negative ground system (most common). If your vehicle is a positive ground system (very uncommon), follow the below instructions in reverse order.

1. Connect the battery clamps to the GBX45 by connecting to the 12V OUT port.
2. Connect the positive (red) battery clamp to the positive (POS, P,+) battery terminal and the negative (black) battery clamp to the negative (NEG, N,-) battery terminal or vehicle chassis.

Step 3: Jump Starting

1. Make sure all of the vehicle's power loads (headlights, radio, air conditioning, etc.) are turned off before attempting to jump-start the vehicle.
2. Press the power button to begin jump-starting, and all LEDs will flash once. If you are properly connected to the battery, the white boost LED will illuminate and the battery charge LEDs will chase. A 60-second timeout countdown will begin as soon as a battery is detected.
3. Try starting the vehicle. Most vehicles will immediately start. If the vehicle does not start right away, wait 20-30 seconds and try again. After the 60-second timeout is complete, the unit must be powered off, then back on, to initiate a new jump-start sequence. Do not attempt more than five (5) consecutive jump starts within a fifteen (15) minute period. Allow the GBX45 to rest for fifteen (15) minutes before attempting to jump-start the vehicle again.
4. Once you have started your vehicle, power off the unit, disconnect the battery clamps, and remove the GBX45.

60-Second Timeout

A 60-second countdown will be initiated as soon as a battery is detected. After 60 seconds have elapsed, the jump-starting function will be disabled. The boost LED will turn off and the internal battery charge LEDs will indicate the current charge level of the unit. To reset the jump-starting function, press the power button to power off the unit. Press the power button again to power on the unit and restart the jump-starting function.

CAUTION

- 60-SECOND TIMEOUT IS DISABLED WHILE USING MANUAL OVERRIDE MODE. POWER WILL CONTINUE TO BE SUPPLIED WHILE MANUAL OVERRIDE IS ACTIVE.

- TO MAXIMIZE THE NUMBER OF JUMP-STARTS, IT IS RECOMMENDED TO TURN OFF THE BOOST UNIT AS SOON AS THE VEHICLE HAS STARTED.

Low Voltage Batteries & Manual Override

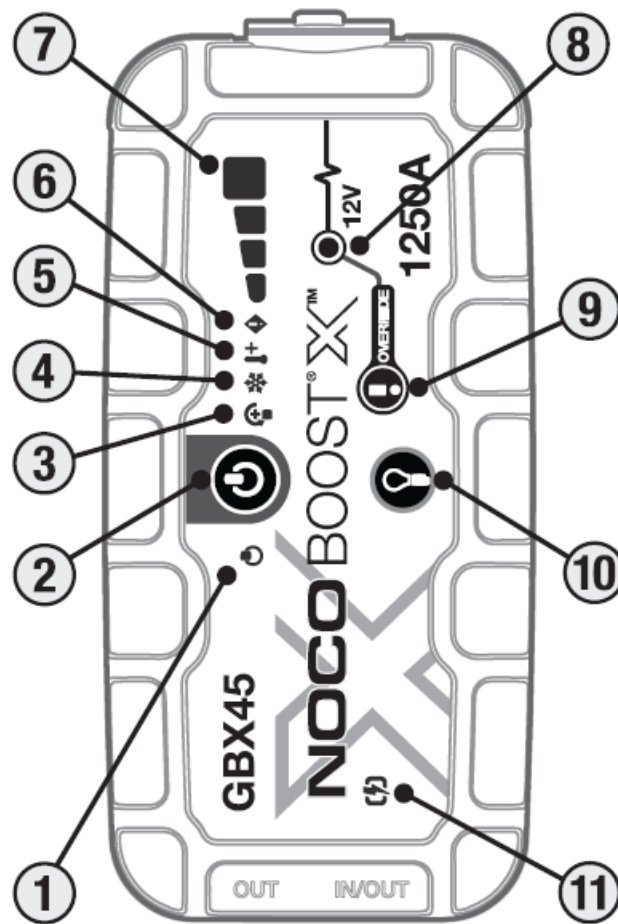
The GBX45 is designed to jump-start 12-volt lead-acid batteries down to 3 volts. If your battery is below 3-volts, the Boost LED will be «off». This is an indication that the GBX45 can not detect a battery. If you need to jump-start a battery below 3-volts there is a manual override feature, which allows you to force «on» the jump start function.

CAUTION






USE THIS MODE WITH EXTREME CARE. THIS MODE IS FOR 12-VOLT LEAD-ACID BATTERIES ONLY. BOTH THE SPARK-PROOF AND REVERSE POLARITY PROTECTION FEATURES ARE DISABLED. PAY VERY CLOSE ATTENTION TO THE POLARITY OF THE BATTERY BEFORE USING THIS MODE. DO NOT ALLOW THE POSITIVE AND NEGATIVE BATTERY CLAMPS TO TOUCH OR CONNECT AS THE PRODUCT WILL GENERATE SPARKS. THIS MODE USES VERY HIGH CURRENT (UP TO 1250 AMPS) THAT CAN CAUSE SPARKS AND HIGH HEAT IF NOT USED PROPERLY. IF YOU ARE UNSURE ABOUT USING THIS MODE, DO NOT ATTEMPT AND SEEK PROFESSIONAL HELP.

Interface

1. Power LED	Illuminates White when the unit is “On”. Will illuminate orange after the 60-second timeout countdown until the clamps are removed from the Car Battery or the GBX45 is power cycled ‘off’ and back ‘on’ again.
2. Power Button	Push to turn unit “on” & “off” or restart boost after a 60-second timeout.
3. Reverse Polarity Error LED	Illuminates red if reverse polarity is detected.
4. Cold LED	Illuminates solid or flashes blue when the internal temperature is too low.
5. Hot LED	Illuminates solid or flashes red when the internal temperature is too high.
6. Error LED	Blinks “on” and “off” in various sequences (from 1 to 6 blinks) to convey error conditions.
7. Internal Battery Level	Indicates the charge level of the internal battery.
8. Boost LED	Illuminates white when boost is active. If the unit is connected properly to a battery, the GBX45 will automatically detect a battery and go into boost mode (LED flashes white when the manual override feature is active).
9. Manual Override Button	To enable, push, and hold for three (3) seconds. WARNING: Disables safety protection and manually forces Boost «On». Only for use when a battery voltage is too low to be detected.
10. Light Mode Button	Toggles the ultra-bright LED light through 7 light modes: 100% > 50% > 10% > SOS > Blink > Strobe > Off
11. Fast Charge LED	Illuminates white when a fast charge is active. Fast charge LED turns red (solid/blinking) when there is an error.



Troubleshooting

Error		Reason/Solution
	Solid Red	Reverse polarity detected. / Reverse the battery connections.
	Single (1) Flash	Short circuit detected on battery clamps. / Remove all loads, reconnect clamps to battery.
	Double (2) Flash	The high voltage detected at clamps (the GBX45 is connected to a voltage system greater than 12V, such as 24V).
	Triple (3) Flash	Bad battery cell detected. / When an internal battery cell has failed during charging.
	Quadruple (4) Flash	Charge timeout error (i.e. the GBX45 has been in bulk charge for too long).
	Sextuple (6) Flash	Back-Charge detected into the GBX45 through the clamps while in a Boost Mode (i.e. the GBX45 is in Manual Override and then connected to a system greater than 12V, such as 24V).
	Hot LED: Solid	Unit is fully operational, but approaching the upper-temperature limit. / Allow the unit to cool.
	Hot LED: Flashing	Unit is too hot to jump-start, only the flashlight is available in this state. / Allow the unit to cool.
	Cold LED: Solid	Unit is fully operational, but approaching a lower temperature limit. / Allow the unit to warm up.
	Cold LED: Flashing	Unit is too cold to jump start, only the flashlight is available in this state / Allow the unit to warm up.
	Flashing Red	If charging the unit, check the cable or charger for damage / If charging a USB-C device, check the cable or device for damage / If the problem persists, contact NOCO support.
	Solid Red	Connected Charger is Incompatible. / Unplug the USB Cable, Turn Off/On the Unit, and Use a Different Charger.

Technical Specifications

Internal Battery: 31Wh Lithium Ion	USB-C (Out): 5V 3A/9V 3A/12V 3A/15V 3A/20V 3A
Peak Current Rating: 1250A	USB (Output): 5VDC 2.1A Max / 10W Max
Operating Temperature: -20°C to +50°C	Housing Protection: IP65 (w/Ports Closed)
Charging Temperature: 0°C to +40°C	Cooling: Natural Convection
Storage Temperature: -20°C to +50°C (avg Temp.)	Dimensions (L x W x H): 6.8 x 3.3 x 2.1 Inches
USB-C (In): 5V 1.5A/9V 3A/12V 3A/15V 3A/20V 3A	Weight: 1.3 Pounds

Warranty

NOCO One (1) Year Limited Warranty

IMPORTANT: BY USING THIS PRODUCT, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THE

NOCO ONE (1) YEAR LIMITED WARRANTY («WARRANTY») AS SET OUT BELOW. DO NOT USE THE PRODUCT UNTIL YOU HAVE READ THE TERMS OF THE WARRANTY. IF YOU DO NOT AGREE TO THE TERMS OF THE WARRANTY, DO NOT USE THE PRODUCT AND RETURN IT.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE, COUNTRY, OR PROVINCE. OTHER THAN AS PERMITTED BY LAW, NOCO DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE, INCLUDING THOSE THAT MAY ARISE FROM THE NONCONFORMITY OF A SALES CONTRACT. FOR A FULL UNDERSTANDING OF YOUR RIGHTS, YOU SHOULD CONSULT THE LAWS OF YOUR STATE, COUNTRY, OR PROVINCE.

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ARE EXCLUSIVE AND INSTEAD OF ALL OTHER WARRANTIES, REMEDIES, AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS, OR IMPLIED. NOCO DISCLAIMS ALL STATUTORY AND IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS, TO THE EXTENT PERMITTED BY LAW. IN SO FAR AS SUCH WARRANTIES CANNOT BE DISCLAIMED, NOCO LIMITS THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS WARRANTY AND, AT NOCO'S OPTION, THE REPAIR OR REPLACEMENT OF PRODUCTS DESCRIBED BELOW. SOME STATES, COUNTRIES, AND PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY – OR CONDITION – MAY LAST, SO THE LIMITATION DESCRIBED ABOVE MAY NOT APPLY TO YOU.

NOCO warrants the NOCO-branded Products contained in the original packaging («NOCO Product») against defects in materials and workmanship when used normally per NOCO's published guidelines for a period of ONE (1) YEAR from the date of original retail purchase or delivery date by the end-user purchaser («Warranty Period»). NOCO's published guidelines include but are not limited to, the information contained in this Warranty, technical specifications, and user manuals. For end-user purchasers in the European Union (EU), the European Free Trade Area (EFTA), Northern Ireland, or the United Kingdom, the Warranty Period may extend to a minimum of TWO (2) YEARS. IN SOME STATES, COUNTRIES, OR PROVINCES, NATIONAL LAW MAY PROVIDE MORE EXTENDED WARRANTY PERIODS. As such, the benefits of the Limited Warranty are intended to supplement, and not replace, the rights provided by consumer protection laws.

NOCO'S LIABILITY IS LIMITED TO REPLACEMENT OR REPAIR. NOCO SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION OR UNDER ANY OTHER LEGAL THEORY, INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, LOST REVENUE, LOST BUSINESS, PROPERTY DAMAGE, PERSONAL INJURY, OR ANY INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGE HOWSOEVER.

This Warranty is non-transferable and does not cover return packaging and transportation costs. This Warranty does not apply: (a) to damage caused by accident, abuse, misuse, fire, liquid contact, or other external cause, (b) mishandling, improper installation, modifications, disassembly, or attempted unauthorized repair, (c) cosmetic damage – such as dents or scratches – that doesn't affect the functionality of the Product, (d) to damage caused by operating the Product outside NOCO's published guidelines, (e) to defects caused by normal wear and tear or otherwise due to the normal aging of the Product, or (f) if any serial number has been removed or defaced from the Product.

If, during the Warranty Period, you submit a claim, NOCO will, at its option: (a) repair the Product that has been tested and passed our functional requirements, (b) replace the Product with a replacement product of the same model (or with your consent a product that has the same or substantially similar features as the original Product – e.g., a different model with the same features), that is new or like-new and has been tested and passed our functional requirements, or (c) exchange the Product for a refund of your purchase price. We require certain information, including proof of purchase, to process Limited Warranty claims. To claim under the Limited Warranty, please get in touch with NOCO Support at:

CONTACT

- (Web) <https://no.co/support>
- (Email) support@no.co
- (US/CA/MX) +1.800.456.6626
- (UK) +44 20 4520 7738
- (EU) +31 20 214 0047
- (AU) +61 2 4062 0068

- (JP) +81 3 6893 3017

For more information and support visit: www.no.co/support

Documents / Resources

	NOCO GBX45 Lithium Jump Starter [pdf] User Guide GBX45 Lithium Jump Starter, GBX45, Lithium Jump Starter, Jump Starter, Starter
---	--

References

-  [NOCO](#)
-  P65Warnings.ca.gov
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.