

noise SPO2 Color Fit Canvas Bluetooth Calling Smart Watch **User Guide**

Home » Noise » noise SPO2 Color Fit Canvas Bluetooth Calling Smart Watch User Guide The Canvas Bluetooth Calling Smart Watch User Guide





Ploase teter to this manual before using tra product User Manual for Colorkt Canvas

Contents

- 1 WATCH OVERVIEW
- **2 CHARGE COLORFIT CANVAS**
- **3 WAKING UP THE WATCH**
- **4 WATCH NAVIGATION**
- **5 BUTTON NAVIGATION**
- **6 HOME SCREEN NAVIGATION**
- 7 SETUP
- **8 PAIR THE WATCH**
- 9 BT CALL CONNECTIVITY
- 10 Watch Features
- 11 DEVICE INFORMATION AND **TIPS**
- 12 REGULATORY INFORMATION
- 13 MAINTENANCE INSTRUCTIONS
- 14 SAFETY INSTRUCTIONS
- 15 CUSTOMER SUPPORT
- 16 Documents / Resources
 - 16.1 References

- · Noise Health
- Sports
- Messages
- Noise Buzz
- Weather
- Camera
- Music
- Clock
- Breathe
- Al voice
- Games
- Settings
- Calculator
- Stress

PACKAGE CONTAINS



ColorFit Canvas Smartwatch x 1



Charging Cable x 1

CHARGING COLORFIT CANVASSMARTWATCH

Before using your ColorFit Canvas for the first time, charge the battery to its full capacity. Use the charging cable provided with the watch to charge.


On a single charge, ColorFit Canvas can last up to 7 days of use, 2 days with calling.

Note: The battery life and time to fully charge your device may vary as per usage and other factors.

CHARGE COLORFIT CANVAS

- Plug the USB cable into a power adaptor.
- Plug the power adaptor into an electrical socket. (Power adaptor not included)

- Place the magnetic charger on the magnetic charging points of the watch.
- While your watch is charging, the screen will show its progress.
- Once the battery is fully charged, remove the charger.

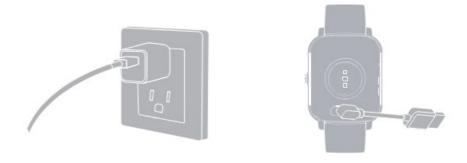

POWER ON

• Press and hold the side button for a few seconds to turn on the watch.

POWER OFF

- Press and hold the side button for a few seconds.
- Select 'Power off' and confirm to power off.

WAKING UP THE WATCH

To preserve the battery, the watch screen turns off when not in use. To turn the screen back on, you can wake up the watch by:

- · ressing the side button
- · Turning on the wrist sense



WATCH NAVIGATION

The ColorFit Canvas smartwatch has a TFT touch screen.

Navigate the watch by tapping on the screen, swiping side to side, up and down and pressing the side button.

BUTTON NAVIGATION

- Press the side button to turn on the watch display.
- Press the side button to exit a feature.

HOME SCREEN NAVIGATION

The home screen is the watch face. From the home screen:

- Swipe right to check your Activity data.
- Swipe left to enter the main menu.
- · Swipe up to go to quick settings.
- Swipe down to check message notifications.



SETUP

Before pairing, make sure that your smartphone and smartwatch are next to each other.

- Turn on BT and the location on your mobile device.
- In your smartphone, download the NoiseFit app from the Play store or the App store and install it.
- The app will ask for personal information such as gender, birthday, height, weight and step length to calculate your stride length, distance covered and calorie burn rate.

Note: Ensure that your smartphone is running on Android 8.0 + or iOS 10.0 + and is connected to mobile data or a Wi-Fi network.

PAIR THE WATCH

- Open the NoiseFit app and allow the BT and GPS positioning to be turned on.
- Feed-in your personal information and health goals in the app.
- Go to 'Device' page and select 'add device' in the app, select the watch name and MAC address and link the watch. You can also scan the QR code on the ColorFit Canvas from the NoiseFit app.

BT CALL CONNECTIVITY

To establish Bluetooth calling connectivity, follow these steps.

AUTOMATIC CONNECTION

• After pairing the watch with the NoiseFit app, the watch's calling Bluetooth would be activated. Now connect it with your phone's Bluetooth to use the calling feature conveniently.

MANUAL CONNECTION

In case the Bluetooth calling connectivity has not been established earlier, you'll have to do the steps manually.

- · Go to Settings.
- Search for device and pair your smartphone to attend your calls from the watch.


BT CALL CONNECTIVITY REMOVAL

- In Android devices, to remove the BT connection, you can unpair from the app and the phones BT settings: Go to phone's BT settings and forget ColorFit Canvas.
- In iOS devices, to remove the BT connection, you can unpair from the app and the phones BT settings: Go to phone's BT settings and forget ColorFit Canvas and ColorFit Canvas Calling.

Watch Features

NOISE HEALTH

Noise health comes with a collection of wellness features so that you can take better care of yourself. You can check your activity, heart rate, blood oxygen and sleep data by tapping on Noise Health.

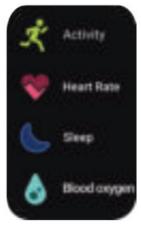


ACTIVITY

Tap on Activity to get a detailed daily activity report on calories burned, steps taken, standing minutes, distance covered and active time. You can set or edit your daily activity goals on the NoiseFit app while setting up the watch.

HEART RATE

Select the heart rate feature to start measuring. Ensure that there is no gap between the back panel of the watch and the wrist. Hold still while it measures your heart rate.

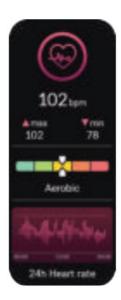

SLEEP

Tap Sleep to view your previous sleep duration. You can view your most recent sleep records and sleep quality in various sleep stages on the NoiseFit app.



SPO02

The smartwatch supports viewing of the highest and lowest values of blood oxygen level of the day. Ensure that there is no gap between the back panel of the watch and the wrist. Hold still while it measures your Blood Oxygen level.



SPORTS

Select Sports & proceed to track your performance to the routine of your choice.

MESSAGES

Tap on Messages to check and manage your notifications.



NOISE BUZZ

Tap on Noise Buzz to access the dial pad, view your contacts and check call history.



WEATHER

ColorFit Canvas supports 7-day weather viewing in a location of your choice as long it is synced with the NoiseFit app. You can view today's current weather and for the next 6 days as well.

Go to the NoiseFit app, select 'Devices' click on 'weather settings' to enable the feature.



CAMERA

Select Camera to click a picture from your smartphone remotely.



MUSIC

You can control your favourite songs and podcasts that play from your phone, right on your wrist as long as the watch is connected with the NoiseFit app in your phone. You can play/pause music, go to the next/previous track and increase/decrease volume.



CLOCK

Tap on Clock to access the stopwatch, alarm & timer.



STOPWATCH

A stopwatch can be set on the watch. You can also set lap times in the stopwatch.



ALARM

You can turn on or off the alarm in the watch after it has been set in the watch.



TIMER

You can set a countdown with a pre-set duration on the watch or set your own time and it will remind you when the time is up.



BREATHE

The breathe feature lets you adjust your breathing rhythm as per your convenience. Choose the duration and start.



AL VOICE

Tap on Al voice to access your smartphone's voice assistant.



GAMES

Tap on Games to try out some in-built games.



CALCULATOR

Manage daily calculations by tapping on Calculator.



STRESS

ColorFit Canvas supports 24-hour stress level measurement and viewing of all-day measurement data. To measure the stress levels in real-time, go to the 'Stress' feature and wait for it to measure.




Note: Make sure your arms and wrists are still and there is no space between your watch and the wrist.

SETTINGS

WATCH FACES

Long press the home screen to access your saved watch faces. Swipe left/right to navigate. You can customise your watch face on the NoiseFit app.

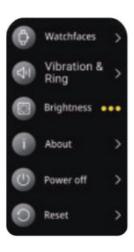

VIBRATION & RING

You can set the ring and vibration as per your preference. You can also choose to put the device on mute.

BRIGHTNESS

You can set the brightness as per your preference.

ABOUT

Tap on About to view the device information.

POWER OFF

You can select this option to power-off the watch.

RESET

You can select Reset to choose to reset.

Note: If you choose to reset, all your data and settings will be erased.

RESTART

You can choose this option to restart the watch.



FIND PHONE

Select Find phone to find your device.

Note: This feature can only work as long as the watch & phone are connected and within Bluetooth range.

QUICK SETTINGS

You can swipe up from the watch's home screen to gain quick settings access.



DND
BRIGHTNESS
FIND PHONE
SETTINGS
FLASHLIGHT
VIBRATION & RING

DEVICE INFORMATION AND TIPS

DEVICE INFORMATION

The ColorFit Canvas smartwatch contains the following:

- 1.96" TFT display (320 x 386 px) \
- Bluetooth calling (built-in microphone & speakers, recent calls, dial pad, contacts);
- 100+ cloud-based & customisable watch faces I

- Health tracking with NoiseFit app (Activity tracking, SpO2, sleep tracker, 24*7 Heart; Rate Monitor, Breathe, Stress)
- 230mAh battery (up to 7 days of use, 2 days with calling & 25 days on standby);
- Utility/productivity features (Stopwatch, alarm, timer, reminder, DND, weather, I camera/music controls, breathe,)
- 3 colour options Jet black, Space blue & Silver grey
- IP67 Water Resistance;

TIPS How do lupdate my ColorFit Canvas?

• ou can update your ColorFit Canvas via the NoiseFit app. Go to My Device and select Check for updates.

How do I find my watch's current firmware version?

You can find the watch's current firmware on the watch.

Go to "My Device" on the NoiseFit app. Select "Upgrade", choose Check for ; updates and update if any update is available. |

How do I save battery?

Follow these simple steps to save ColorFit Canvas battery.

- Minimise the screen brightness
- Limit the notification you receive from the NoiseFit app. How does the watch estimate how many calories have been burned?
 - ColorFit Canvas estimates how many calories you've burned based on thephysical data you entered when you set up your account.
- How do I change my activity goals? You can do it through the NoiseFit app. Go to "My Profile" and select "Goal".
 Change your goals and confirm.
- How do I log my weight?

You can log in your weight the first time you setup your NoiseFit app. However, you can update the weight later via NoiseFit app. Go to My Profile and change or update your weight. You can update birthday, height, weight, and step length.

DISPOSAL AND RECYCLING INFORMATION

Electrical and electronic devices may not be disposed of with domestic waste.

Consumers are obliged by law to return the electrical and electronic device at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. By recycling, reusing the materials or other forms of utilising old devices, you are making an important contribution to protecting our environment.

REGULATORY INFORMATION

USA: Federal Communications Commission (FCC) Statement This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

This device may cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the Max's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference

in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this 76 equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the Max is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The ColorFit Canvas watch is not a toy. The watch contains small components that could be a choking hazard and are not intended for use by small children or pets. Unless otherwise specified, devices and services are not a medical device and are not intended to diagnose, treat, cure or prevent any disease. We develop products and services to track daily activity and wellness information as accurately as possible. The accuracy of devices is not intended to be equivalent to medical devices or scientific measurement devices.

In some cases, prolonged use of products may cause skin irritation. Prolonged contact may contribute to skin irritation or allergies. To reduce the possibility of irritation, keep the watch and watch band clean and dry. Don't wear it too tight and give your wrist a rest by removing the watch after an extended period of wear. If you feel soreness, tingling, numbness, burning or stiffness in your hands or wrists while or after wearing the watch, please immediately discontinue use.

MAINTENANCE INSTRUCTIONS

- Keep the device dry and clean regularly and especially after prolonged use as moisture and dirt can build up underneath the band and can cause skin irritation.
- Do not wear the device too tight but make sure that the bottom sensor is lightly in contact with your skin and there is a gap of about one finger's width between the wrist strap and your wrist.
- Do not use household cleaners to clean the device. Use soap-free cleaners instead.
- For stains that are difficult to remove, it is recommended to scrub with alcohol.
- The device is not suitable for diving, swimming in the sea or sauna; it is suitable for swimming pool, shower (cold water) and swimming in shallows.
- Keep it away direct sunlight, high temperatures or humid conditions as it may damage the band over time.

SAFETY INSTRUCTIONS

- Do not disassemble the battery on your own.
- Do not expose ColorFit Canvas to extremely high or low temperatures.
 The excessive temperature during charging could cause heat, smoke, fire or deformation of the battery or even explosion.
- Charge the battery in a cool, ventilated room.
- Do not open, crush, bend, deform, puncture or shred secondary cells or batteries. In the event of a battery break or leak, prevent battery liquid contact with skin or eyes. If this happens, immediately flush the areas with water (DO NOT RUB THE EYE) or seek medical help.
- Do not short-circuit. Short-circuiting may damage the battery. Short-circuiting can occur when a metallic object, such as coins, causes the direct connection of positive and negative terminals of the battery.
- Keep the batteries out of children's reach and in a safe place to prevent danger.
- Do not place the batteries in the water.

- Do not use your product in a sauna or steam room.
- Do not dispose of batteries in the fire as that may cause an explosion. Dispose of used batteries in accordance with your local regulations. Do not dispose it as household waste.
- Use only the charging cable supplied to charge the battery. Do not charge for more than 24 hours.
- Do not attempt to repair or maintain the watch yourself, service and maintenance should be performed by authorised technicians only. Any device failure should referred to our after-sales service personnel.
- To prevent device damage, accessory damage and device failure, always protect the device against strong impact or shock.

CUSTOMER SUPPORT

If you experience any problem with the watch, it may be fixed by restarting your watch. For any assistance, please reach out to us at link: https://support.gonoise.com/support/home



Documents / Resources

noise SPO2 Color Fit Canvas Bluetooth Calling Smart Watch [pdf] User Guide SPO2 Color Fit Canvas Bluetooth Calling Smart Watch, SPO2, Color Fit Canvas Bluetooth Calling Smart Watch, Canvas Bluetooth Calling Smart Watch, Canvas Bluetooth Calling Smart Watch, Bluetooth Calling Smart Watch, Smart Watch

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.