



---

# NOKIA 110 Feature Phone with Player User Guide

September 17,  
2025

## Contents [ [hide](#) ]

- 1 110 Feature Phone with Player
- 2 Specifications:
- 3 Product Information:
- 4 Product Usage Instructions:
  - 4.1 1. Get Started:
  - 4.2 2. Calls, Contacts, and Messages:
  - 4.3 3. Personalize Your Phone:
  - 4.4 4. Camera:
  - 4.5 5. Clock, Calendar, and Calculator:
  - 4.6 6. Empty Your Phone:
  - 4.7 7. Product and Safety Information:
- 5 Frequently Asked Questions (FAQ):
  - 5.1 Documents / Resources
    - 5.1.1 References

## 110 Feature Phone with Player

“

---

## Specifications:

- Model: Nokia 110
  - Issue Date: 2025-08-18
  - Language: English (USA)
- 

## **Product Information:**

The Nokia 110 is a user-friendly mobile phone designed for essential communication and entertainment needs. With features like calling, messaging, camera, clock, and calculator, it offers a simple yet functional experience for users.

---

## **Product Usage Instructions:**

### **1. Get Started:**

**Keys and Parts:** Familiarize yourself with the keys and parts of the phone for easy navigation.

**Set up and Switch On:** Follow the instructions to set up and switch on your phone for the first time.

**Charge Your Phone:** Ensure your phone is charged by connecting it to a power source using the provided charger.

**Keypad:** Learn how to use the keypad for dialing numbers and text input.

### **2. Calls, Contacts, and Messages:**

**Calls:** Make and receive calls using the phone's calling feature.

**Contacts:** Manage your contacts list for easy access to important numbers.

Send Messages: Learn how to compose and send text messages to your contacts.

### **3. Personalize Your Phone:**

Change Tones: Customize the ringtone and message tones according to your preferences.

Change Home Screen Look: Modify the appearance of your home screen with different themes.

Profiles: Set up different profiles for various environments such as silent, loud, etc.

Add Shortcuts: Create shortcuts for quick access to frequently used features.

### **4. Camera:**

Photos and Videos: Capture photos and videos using the phone's camera functionality.

### **5. Clock, Calendar, and Calculator:**

Alarm Clock: Set alarms for reminders and wake-up calls.

Calendar: Keep track of important dates and events using the phone's calendar feature.

Calculator: Use the built-in calculator for basic arithmetic calculations.

### **6. Empty Your Phone:**

Restore Factory Settings: Reset your phone to its original settings if needed.

## 7. Product and Safety Information:

For Your Safety: Read through the safety guidelines provided in the manual.

Emergency Calls: Understand how to make emergency calls using the phone.

Take Care of Your Device: Follow maintenance tips to ensure your device's longevity.

---

## Frequently Asked Questions (FAQ):

### 1. How do I change the ringtone?

You can change the ringtone by navigating to the settings menu, selecting 'Tones,' and then choosing a new ringtone from the available options.

### 2. Can I add more contacts to my phonebook?

Yes, you can add new contacts by accessing the Contacts app and selecting the option to add a new contact. Enter the contact details and save them to your phonebook.

### 3. How do I delete messages from my inbox?

To delete messages from your inbox, open the Messages app, select the message you want to delete, and choose the delete option from the menu.

“

[View Fullscreen](#)

Nokia 110  
User Guide  
Issue 2025-08-18 en-USA

Nokia 110 User Guide

Table of Contents

1 About this user guide

4

2 Get started

Keys and parts . . . . . 5

Set up and switch on your phone . . . . . 6

Charge your phone . . . . . 8

Keypad . . . . . 9

### 3 Calls, contacts, and messages

10

Calls . . . . . 10

Contacts . . . . . 10

Send messages . . . . . 11

### 4 Personalize your phone

12

Change tones . . . . . 12

Change the look of your home screen . . . . . 12

Profiles . . . . . 12

Add shortcuts . . . . . 13

### 5 Camera

14

Photos and videos . . . . . 14

6 Clock, calendar, and calculator

15

Alarm clock . . . . . 15

Calendar . . . . . 15

Calculator . . . . . 15

7 Empty your phone

16

Restore factory settings . . . . . 16

TM and © 2025 HMD Global. All rights reserved.

2

Nokia 110 User Guide

8 Product and safety information

17

For your safety . . . . . 17

Emergency calls . . . . . 19

Take care of your device . . . . . 19

Recycle . . . . . 20

Crossed-out wheellie bin symbol . . . . . 21

Battery and charger information . . . . . 21

Small children . . . . . 23

Medical devices . . . . . 23

Implanted medical devices . . . . . 23

Hearing . . . . . 23

Protect your device from harmful content . . . . . 23

Vehicles . . . . . 24

Potentially explosive environments . . . . . 24

Certification information . . . . . 24

About Digital Rights Management . . . . . 27

Copyrights and other notices . . . . . 27

TM and © 2025 HMD Global. All rights reserved.

Nokia 110 User Guide

1 About this user guide

Important: For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

TM and © 2025 HMD Global. All rights reserved.

Nokia 110 User Guide

2 Get started



## KEYS AND PARTS

Your phone

This user guide applies to the following models: TA-1567, TA-1568, TA-1565.

1. Microphone 2. Call key 3. Left selection key 4. Scroll key 5. Earpiece/Loudspeaker 6. Flashlight

7. Right selection key 8. Power/End key 9. Camera 10. Headset connector 11. USB connector

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

TM and © 2025 HMD Global. All rights reserved.

5

## Nokia 110 User Guide

Note: You can set the phone to ask for a security code to protect your privacy and personal data. The pre-set code is 12345. To change the code, select Menu > > Security settings > Change access codes > Change security code . Enter the pre-set security code 12345 and select OK . Make up a code with 5-8 digits, and select OK . Note, however, that you need to remember the code, as HMD Global is not able to open or bypass it.

### Parts and connectors, magnetism

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels. Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

## SET UP AND SWITCH ON YOUR PHONE

### Mini SIM

Important: This device is designed to be used with a mini SIM card only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

TM and © 2025 HMD Global. All rights reserved.

6

#### Nokia 110 User Guide Open the back cover

1. Put your fingernail in the small slot on the side of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.

#### Insert the SIM cards

1. Slide the SIM card in the SIM card slot with the contact area face down.
2. If you have a second SIM, slide it in the SIM2 slot. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.

TM and © 2025 HMD Global. All rights reserved.

7

#### Nokia 110 User Guide Insert the memory card

1. Slide the memory card holder to the right and lift it up.
2. Place the memory card in the memory card slot.
3. Close down the holder, and slide it to the left to lock it in place.
4. Put back the battery.
5. Put back the back cover.

Use only compatible memory cards approved for use with this device. Incompatible

cards may damage the card and the device and corrupt data stored on the card.

Tip: Use a fast, up to 32 GB microSD memory card from a well-known manufacturer.

Switch on your phone Press and hold .

## CHARGE YOUR PHONE

Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.

### Charge the battery

1. Plug the charger into a wall outlet. 2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet.

TM and © 2025 HMD Global. All rights reserved.

8

## Nokia 110 User Guide

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

Tip: You can use USB charging when a wall outlet is not available. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning.

## KEYPAD

### Use the phone keys

- To see the apps and features of your phone, on the home screen, select Menu .
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.
- To go back to the home screen, press the end key.

- To change the volume of your phone during a call or when listening to the radio, scroll left or right.
- To switch on the flashlight, on the home screen, press the scroll key up twice. To switch it off, scroll up once. Do not shine the light in anyone's eyes.

## Lock the keypad

To avoid accidentally pressing the keys, lock the keypad: select Go to > Lock keypad .

To unlock the keypad, press the end key and select Unlock .

## Write with the keypad

Press a key repeatedly until the letter is shown. To type in a space press the 0 key. To type in a special character or punctuation mark, press the asterisk key, or if you are using predictive text, press and hold the # key. To switch between character cases, press the # key repeatedly. To type in a number, press and hold a number key.

TM and © 2025 HMD Global. All rights reserved.

## Nokia 110 User Guide

### 3 Calls, contacts, and messages

#### CALLS

Make a call Learn how to make a call with your new phone.

1. Type in the phone number. To type in the + character, used for international calls, press \* twice.
2. Press the call key. If asked, select which SIM to use.
3. To end the call, press the end key.

Answer a call Press .

#### CONTACTS

Add a contact 1. Select Menu > > Add contact . 2. Select where to save the contact. 3. Write the name, and type in the number. 4. Select OK .

Save a contact from call log 1. Select Menu > > Missed calls , Received calls , or Dialed numbers , depending on from

where you want to save the contact. 2. Scroll to the number you want to save, select Opt. > Save , and select where you want to

save the contact. 3. Add the contact's name, check that the phone number is correct, and select OK .

TM and © 2025 HMD Global. All rights reserved.

10

## Nokia 110 User Guide

Call a contact You can call a contact directly from the contacts list.

1. Select Menu > . 2. Select Names and scroll to the contact you want to call. 3. Press the call key.

## SEND MESSAGES

Write and send messages

1. Select Menu > > Create message . 2. Write your message. 3. Select Opt. > Send .  
4. Type in a phone number, or select Search and a recipient from your contacts list.  
5. Select OK .

If you have a dual-SIM phone, you may need to select the SIM card you want to use for sending the message.

You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message.

TM and © 2025 HMD Global. All rights reserved.

11

## Nokia 110 User Guide

4 Personalize your phone

### CHANGE TONES

Set new tones 1. Select Menu > > Tone settings . 2. Select which tone you want to change and select for which SIM card you want to change it, if asked. 3. Scroll to the tone that you want and select OK .

## CHANGE THE LOOK OF YOUR HOME SCREEN

Choose a new wallpaper You can change the background of your home screen.

1. Select Menu > > Display settings > Wallpaper . 2. Select the wallpaper you want. 3. Select how you want to position the wallpaper on the home screen.

## Show date and time

You can select to see date and time on the home screen of your phone. Select Menu > > Time settings > Display of time and date > Show clock . If you want your phone to update the time automatically, set Auto-update of date and time on. You may need to restart your phone for this setting to work.

Tip: You can also set your phone to show the time even in the idle mode. Select Menu > > Display settings > Standby screen > On .

## PROFILES

### Personalize profiles

There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and a loud profile for noisy environments. You can personalize profiles further.

TM and © 2025 HMD Global. All rights reserved.

## Nokia 110 User Guide

1. Select Menu > > Profiles . 2. Select a profile and Personalise .

For each profile you can set a specific ringtone, ringtone volume, message sounds and so on.

## ADD SHORTCUTS

Edit Go to settings On the bottom left of your home screen is Go to , which contains shortcuts to various apps and settings. Select the shortcuts that are the handiest for you.

1. Select Menu > > Go to settings . 2. Select Select options . 3. Scroll to each shortcut

you want to have on the Go to list and select Mark . 4. Select Done > Yes to save the changes.

You can also reorganize your Go to list.

1. Select Organise . 2. Scroll to the item you want to move, select Move and where you want to move it. 3. Select Back > OK to save the changes.

TM and © 2025 HMD Global. All rights reserved.

13

Nokia 110 User Guide

5 Camera

PHOTOS AND VIDEOS

Take a photo 1. Select Menu > . 2. To zoom in or out, scroll up or down. 3. To take a photo, select Capture .

To see the photo you just took, on the home screen, select Menu > > Captured photo .

Record a video 1. To switch the video camera on, select Menu > and scroll to . 2. To start recording, select . 3. To stop recording, select .

If the phone runs out of memory when recording videos, insert a memory card (sold separately). To see the video you just recorded, on the home screen, select Menu > > Recorded videos .

TM and © 2025 HMD Global. All rights reserved.

14

Nokia 110 User Guide

6 Clock, calendar, and calculator

ALARM CLOCK

Set an alarm 1. Select Menu > > Set alarms . 2. Select an alarm and use the scroll key to set the time. 3. Select OK .

If you want the alarm to repeat on certain days, select the alarm, then select Repeat alarm > Repeat alarm , scroll to each day you want the alarm to sound on, and select Mark . Then select Done > Yes .

CALENDAR

Add a calendar event 1. Select Menu > . 2. Scroll to a date, and select Opt. > Add reminder . 3. Enter the event name, and select OK . 4. Select whether to add an alarm to the event, and select OK .

## CALCULATOR

Learn how to add, subtract, multiply and divide with your phone calculator.

How to calculate 1. Select Menu > . 2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor. 3. Select Equals to get the result of the calculation. Select Clear to empty the number fields.

TM and © 2025 HMD Global. All rights reserved.

15

## Nokia 110 User Guide

### 7 Empty your phone

#### RESTORE FACTORY SETTINGS

##### Reset your phone

You can restore the original factory settings, but be careful, since this reset removes all data you have saved in the phone memory and all your personalization. If you are disposing your phone, note that you are responsible of removing all private content. To reset your phone to its original settings and to remove all your data, on the home screen, type in \*#7370#. If asked, enter your security code.

TM and © 2025 HMD Global. All rights reserved.

16

## Nokia 110 User Guide

### 8 Product and safety information

#### FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further info, read the complete user guide.

#### SWITCH OFF IN RESTRICTED AREAS



Switch the device off when mobile device use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.

## ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

## INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.

TM and © 2025 HMD Global. All rights reserved.

17

## Nokia 110 User Guide AUTHORIZED SERVICE

Only authorized personnel may install or repair this product. BATTERIES, CHARGERS, AND OTHER ACCESSORIES

Use only batteries, chargers, and other accessories approved by HMD Global Oy for use with this device. Do not connect incompatible products.

## KEEP YOUR DEVICE DRY

If your device is water-resistant, see its IP rating in the device's technical specifications for more detailed guidance.

TM and © 2025 HMD Global. All rights reserved.

18

## Nokia 110 User Guide PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

## EMERGENCY CALLS

Important: Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

Before making the call:

- Switch the phone on.
- If the phone screen and keys are locked, unlock them.
- Move to a place with adequate signal strength.

1. Press the end key repeatedly, until the home screen is shown. 2. Type in the official emergency number for your present location. Emergency call numbers vary by location. 3. Press the call key. 4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone.
- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.

## TAKE CARE OF YOUR DEVICE

Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

TM and © 2025 HMD Global. All rights reserved.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.

- Do not open the device other than as instructed in the user guide.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- Keep the device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

During extended operation, the device may feel warm. In most cases, this is normal. To avoid getting too warm, the device may automatically slow down, close apps, switch off charging, and if necessary, switch itself off. If the device is not working properly, take it to the nearest authorized service facility.

## RECYCLE

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy.

TM and © 2025 HMD Global. All rights reserved.

The crossed-out wheelie-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to

separate collection at the end of their working life. Remember to remove personal data from the device first. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or read about HMD's take-back program and its availability in your country at [www.hmd.com/phones/support/topics/recycle](http://www.hmd.com/phones/support/topics/recycle).

## BATTERY AND CHARGER INFORMATION

### Battery and charger info

To check if your phone has a removable or non-removable battery, see the printed guide.

**Devices with a removable battery** Use your device only with an original rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

**Devices with a non-removable battery** Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, to replace the battery, take the device to the nearest authorized service facility. Charge your device with a compatible charger. Charger plug type may vary. Charging time can vary depending on device capability.

### Battery and charger safety info

Once charging of your device is complete, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Extreme temperatures reduce the capacity and lifetime of the battery. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. A device with a

TM and © 2025 HMD Global. All rights reserved.

cold temperatures and lose enough power to switch off the phone within minutes. When you are outdoors in cold temperatures, keep your phone warm.

Obey local regulations. Recycle when possible. Do not dispose as household waste. Do not expose the battery to extremely low air pressure or leave it to extremely high temperature, for example dispose it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm. When charger is not included in the sales pack, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury.

Third-party chargers that comply with the applicable CTIA requirements and bear the USB-IF logo, and can connect to your device USB connector, may also be compatible. Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

The device recognizes the battery via the battery model name on the battery label.

Avoid dropping the device or battery. If the device or battery is dropped, especially on a

hard surface, and the user suspects damage, take it to a service center for inspection.

Improper battery use may result in a fire, explosion or other hazard.

To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

- Always switch the device off and unplug the charger before removing any covers or the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

TM and © 2025 HMD Global. All rights reserved.

22

Nokia 110 User Guide

## SMALL CHILDREN

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

## MEDICAL DEVICES

Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

## IMPLANTED MEDICAL DEVICES

To avoid potential interference, manufacturers of implanted medical devices (such as cardiac pacemakers, insulin pumps, and neurostimulators) recommend a minimum separation of 15.3 centimeters (6 inches) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear

opposite the medical device.

- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

## HEARING

Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

## PROTECT YOUR DEVICE FROM HARMFUL CONTENT

Your device may be exposed to viruses and other harmful content. Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device.

TM and © 2025 HMD Global. All rights reserved.

## VEHICLES

Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment. Only authorized personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area.

## POTENTIALLY EXPLOSIVE ENVIRONMENTS

Switch your device off in potentially explosive environments, such as near gasoline pumps. Sparks may cause an explosion or fire resulting in injury or death. Note

restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

## CERTIFICATION INFORMATION

### FCC RF Exposure Information

This mobile device meets guidelines for exposure to radio waves as set forth by the Federal Communications Commission (FCC). Refer to the following.

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this handset model with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at [www.fcc.gov/general/radio-frequency-safety-0](http://www.fcc.gov/general/radio-frequency-safety-0). To send data or messages, a good connection to the network is needed. Sending may be delayed until such a connection is available. Follow the separation distance instructions until

TM and © 2025 HMD Global. All rights reserved.



## Nokia 110 User Guide

the sending is finished. During general use, the SAR values are usually well below the values stated above. This is because, for purposes of system efficiency and to minimise interference on the network, the operating power of your mobile is automatically decreased when full power is not needed for the call. The lower the power output, the lower the SAR value. Device models may have different versions and more than one value. Component and design changes may occur over time and some changes could affect SAR values. For more info, go to [www.sartick.com](http://www.sartick.com). Note that mobile devices may be transmitting even if you are not making a voice call. Your mobile device is also designed to meet the United States Federal Communications Commission (FCC) guidelines. FCC ratings for your device and more information on SAR can be found at <http://transition.fcc.gov/oet/rfsafety/sar.html>. The World Health Organization (WHO) has stated that current scientific information does not indicate the need for any special precautions when using mobile devices. If you are interested in reducing your exposure, they recommend you limit your usage or use a hands-free kit to keep the device away from your head and body. For more information and explanations and discussions on RF exposure, go to the WHO website at [https://www.who.int/health-topics/electromagnetic-fields#tab=tab\\_1](https://www.who.int/health-topics/electromagnetic-fields#tab=tab_1).

## FCC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more info, go to [www.fcc.gov/engineering-technology/electromagnetic-compatibilitydivision/radio-frequency-safety/faq/rf-safety](http://www.fcc.gov/engineering-technology/electromagnetic-compatibilitydivision/radio-frequency-safety/faq/rf-safety). Any changes or modifications not expressly approved by HMD Global could void the user's authority to operate this equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields), recommended by international guidelines from the independent scientific organization ICNIRP. These guidelines

TM and © 2025 HMD Global. All rights reserved.

25

## Nokia 110 User Guide

incorporate substantial safety margins that are intended to assure the protection of all persons regardless of age and health. The exposure guidelines are based on the Specific Absorption Rate (SAR), which is an expression of the amount of radio frequency (RF) power deposited in the head or body when the device is transmitting. The ICNIRP SAR limit for mobile devices is 2.0 W/kg averaged over 10 grams of tissue. SAR tests are carried out with the device in standard operating positions, transmitting at its highest certified power level, in all its frequency bands.

This device meets RF exposure guidelines when used against the head or when positioned at least 5/8 inch (1.5 centimetres) away from the body. When a carry case, belt clip or other form of device holder is used for body-worn operation, it should not contain metal and should provide at least the above stated separation distance from the body.

To send data or messages, a good connection to the network is needed. Sending may be delayed until such a connection is available. Follow the separation distance instructions until the sending is finished.

During general use, the SAR values are usually well below the values stated above.

This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output, the lower the SAR value. Device models may have different versions and more than one value. Component and design changes may occur over time and some changes could affect SAR values. For more info, go to [www.sar-tick.com](http://www.sar-tick.com). Note that mobile devices may be transmitting even if you are not making a voice call.

The World Health Organization (WHO) has stated that current scientific information does not indicate the need for any special precautions when using mobile devices. If you are interested in reducing your exposure, they recommend you limit your usage or use a handsfree kit to keep the device away from your head and body. For more information and explanations and discussions on RF exposure, go to the WHO website at [www.who.int/healthtopics/electromagnetic-fields#tab=tab\\_1](http://www.who.int/healthtopics/electromagnetic-fields#tab=tab_1).

Please refer to [www.hmd.com/sar](http://www.hmd.com/sar) for the maximum SAR value of the device.

#### HAC notice

Your phone is compliant with the FCC Hearing Aid Compatibility requirements. The FCC has adopted HAC rules for digital wireless phones. These rules require certain phone to be tested and rated under the American National Standard Institute (ANSI) C63.19-2011 hearing aid compatibility standards. The ANSI standard for hearing aid compatibility contains two types of ratings: M-Ratings: Rating for less radio frequency interference to enable acoustic coupling with hearing aids. T-Ratings: Rating for inductive coupling with hearing aids in telecoil mode. Not all phones have been rated, a phone is considered hearing aid compatible under FCC rules if it is rated M3 or M4 for acoustic coupling and T3 or T4 for inductive coupling. These ratings are given on a scale from one to four, where four is the most compatible. Your phone meets the M4/T4 level rating. However, hearing aid compatibility ratings don't guarantee

TM and © 2025 HMD Global. All rights reserved.

that interference to your hearing aids won't happen. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your

hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs. This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer. Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

## ABOUT DIGITAL RIGHTS MANAGEMENT

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content.

## COPYRIGHTS AND OTHER NOTICES

### Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any

form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

TM and © 2025 HMD Global. All rights reserved.

27

## Nokia 110 User Guide

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

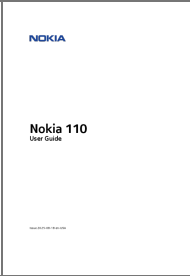
HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

This product includes open source software. For applicable copyright and other notices, permissions, and acknowledgements, select \*#6774# on the home screen.

TM and © 2025 HMD Global. All rights reserved.

28

## Documents / Resources

	<h2><a href="#">NOKIA 110 Feature Phone with Player</a> [pdf] User Guide</h2> <p>110 Feature Phone with Player, 110, Feature Phone with Player, Phone with Player, with Player, with Player</p>
--	---

## References

- [User Manual](#)

📄 110, 110 Feature Phone with Player, Feature Phone with Player, Nokia, Phone with Player, with  
📁 Nokia   Player

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

## Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.