

Contents [[hide](#)]

- [1 NOKIA 210 Dual SIM Mobile](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Get started](#)
- [5 FAQs](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

NOKIA

NOKIA 210 Dual SIM Mobile



Product Specifications

- Model: Nokia 210 Dual SIM
- Version: 2025-06-28

- Language: Italian (it-IT)

Product Information

The Nokia 210 Dual SIM is a user-friendly mobile phone designed for basic communication and entertainment needs. With features like a keypad for easy typing, a camera for capturing photos and videos, and internet connectivity, this phone offers essential functions in a compact device.

Product Usage Instructions

• Set Up and Power On

To set up your Nokia 210 Dual SIM, insert the SIM cards into their respective slots and power on the device by pressing and holding the power button.

• Keypad and Text Input

Use the keypad to navigate through menus and input text. Press the keys to type messages or dial numbers efficiently.

• Making Calls and Sending Messages

Make calls by accessing the phone app and dialing the desired number. Send messages by selecting the messaging app and composing a new message.

• Customizing Your Phone

Personalize your Nokia 210 Dual SIM by changing ringtones, customizing the home screen appearance, and adding shortcuts for quick access to your favorite features.

• Using the Camera

Capture photos and videos using the built-in camera functionality. Access the camera app to take pictures or record videos.

• Internet and Connectivity

Browse the web using the internet browser on your Nokia 210 Dual SIM. Stay connected and access online content with ease.

• Listening to Music

Enjoy music on your phone by using the music player feature. You can also listen to the radio for entertainment on the go.

• Clock, Calendar, and Calculator

Set the time and date manually, use the alarm clock feature, manage your schedule with the calendar, and perform calculations with the calculator app.

• Resetting Your Phone

If needed, you can reset your Nokia 210 Dual SIM to restore it to its factory settings. This can help troubleshoot issues or clear personal data from the device.

 
About this user guide

Important: For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

Get started

KEYS AND PARTS

Your phone

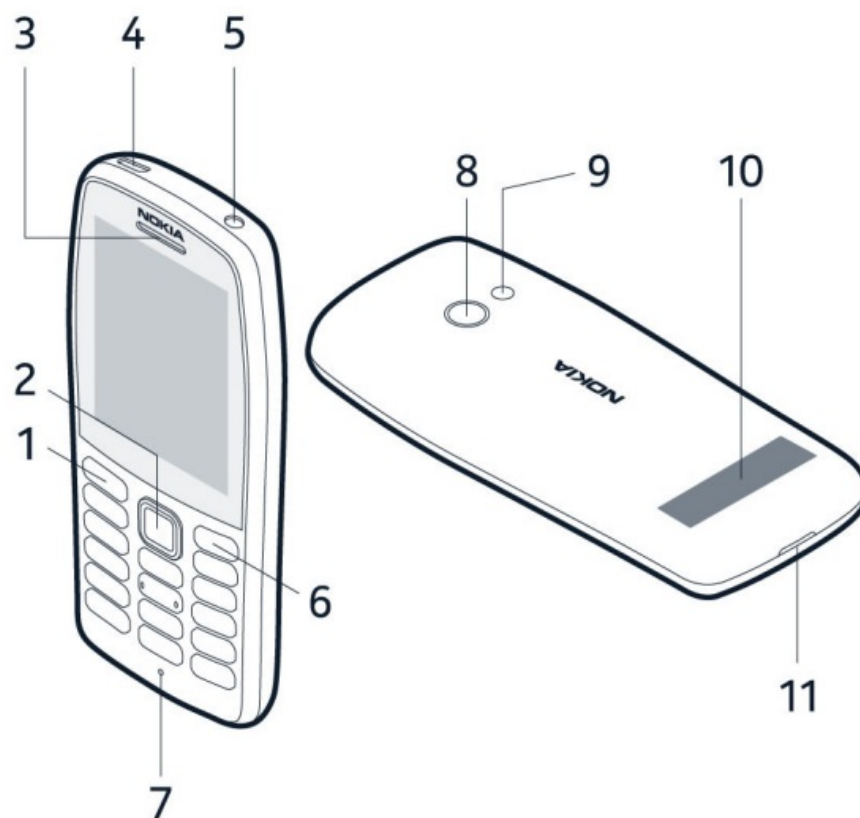

This user guide applies to the following model: TA-1139

The keys and parts of your phone are:

1. Left selection key
2. Scroll key. Press to access your apps and select items.
3. Earpiece/Loudspeaker

4. USB connector
5. Headset connector
6. Right selection key
7. Microphone
8. Camera
9. Flash
10. Antenna area
11. Back cover opening slot

TM and © 2025 HMD Global. All rights reserved.

Nokia 210 Dual SIM User Guide

- Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to a higher power level during operation.
- Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels. Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because info stored on them may be erased.
- Some of the accessories mentioned in this user guide, such as a charger, headset, or data cable, may be sold separately.

Note: You can set the phone to ask for a security code. The pre-set code is 12345. Change it to protect your privacy and personal data. Note, however, that when you change the code, you need to remember the new code, as HMD Global is not able to open or bypass it.

SET UP AND SWITCH ON YOUR PHONE

- Learn how to insert the SIM card, memory card, and battery, and how to switch on your phone.

 
Mini SIM



Important: This device is designed to be used with a mini SIM card only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.


Set up your phone

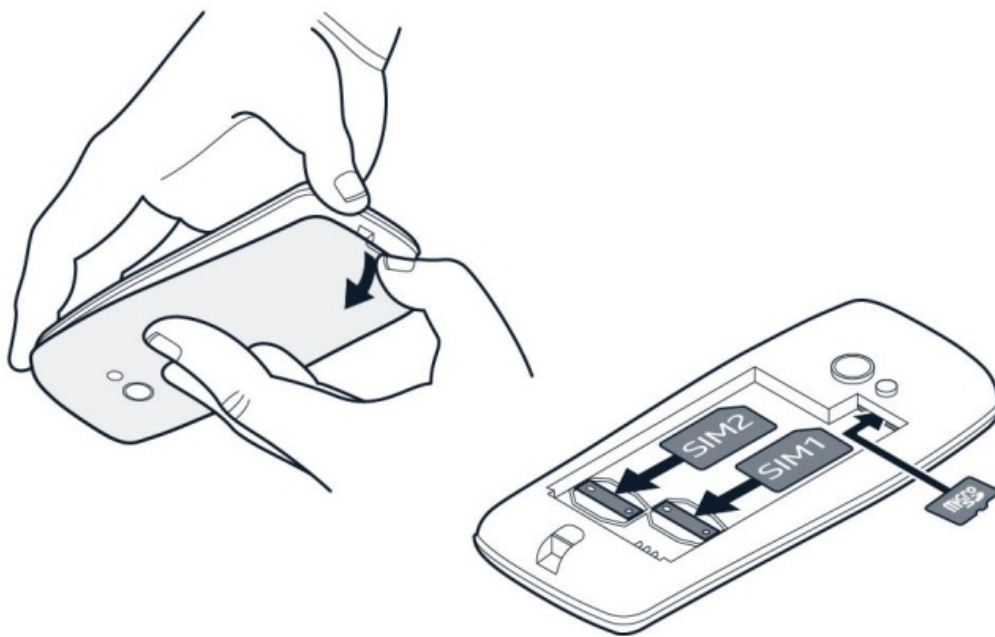

1. Put your fingernail in the small slot at the bottom of the phone, lift, and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the SIM card into the SIM1 slot. If you have a second SIM, slide it into the SIM2 slot. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.
4. If you have a memory card, slide it into the memory card slot.

5. Put back the battery.
6. Put back the cover.

Switch on your phone..

- Press and hold 

CHARGE YOUR PHONE

Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.

Charge the battery

 
1. Plug the charger into a wall outlet.
2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

Tip: You can use USB charging when a wall outlet is not available. Data can be transferred while charging the device. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and for the device to start functioning. Make sure your computer is switched on.

KEYPAD

Use the phone keys

- To see the apps and features of your phone, on the home screen, select Menu.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.
- To go back to the home screen, press the end key .
- To change the volume of your phone, scroll left or right.
- To switch on the flashlight, on the home screen, press the scroll key up twice. To

switch it off, scroll up once. Do not shine the light in anyone's eyes.

Lock the keypad

To avoid accidentally pressing the keys, lock the keypad: select Go to > Lock keypad. To unlock the keypad, press the end key and select Unlock.

WRITE TEXT

- Write using the keypad
- Writing with the keypad is easy and fun.
- Press a key repeatedly until the letter is shown.

To type in a space, press.

- To type in a special character or punctuation mark, press *.
- To switch between character cases, press # repeatedly. To type in a number, press and hold a number key.
- TM and © 2025 HMD Global. All rights reserved.

Calls, contacts, and messages

CALLS

Make a call

Learn how to make a call with your new phone.

1. Type in the phone number. To type in the + character, used for international calls, press * twice.
2. Press the call key. If asked, select which SIM to use.
3. To end the call, press the end key.

Answer a call

- Press 


Tip: If you are in a situation where you cannot answer the phone and you need to

silence it quickly, select Silence

CONTACTS


Add a contact

Save and organize your friends' phone numbers.


1. Select Menu >  Add .
2. Write the name, and type in the number.
3. Select Save

To add more contacts, select Options > Add new contact .

Save a contact from cthe all log.


1. Select Menu >  Misse, Received, or Dialled, depending on where you want to save the contact.
2. Scroll to the number you want to save, select Options > Save, and select where you want to save the contact.
3. Add the contact's name, check that the phone number is correct, and select Save .

Call a contact

- You can call a contact directly from the contacts list.
- Select Menu >  , scroll to the contact you want to call, and press the call key.

SEND MESSAGES


Write and send messages

1. Select Menu >  Create message .
2. In the To field, enter the number of the recipient, or select Add > Contacts to add recipients from your contacts list.
3. Write the message in the message field.
4. To insert images into the message or to use predictive text, select Options. To insert smileys or symbols, select Options > Insert options.

5. Select Sen.

Personalize your phone


Set new tones


1. Select Menu >  Tones .
2. Select which tone you want to change and select for which SIM card you want to change it, if asked.
3. Scroll to the tone that you want and select OK

CHANGE THE LOOK OF YOUR HOME SCREEN

Choose a new wallpaper

You can change the background of your home screen.

1. Select Menu >  Display settings > Wallpaper .
2. Select Default, scroll to the wallpaper you want, and select View .
3. You like the wallpaper, select Choose, and then select how you want to position the wallpaper on the home screen.


Tip: You can also use a photo you've taken or received as wallpaper. Select Menu >  > Display settings > Wallpaper > Photos .

Shw date and time

You can select to see the date and time on the home screen of your phone.

Select Menu >  > Date and time > Show date and time > On.

If you want your phone to update the time automatically, set Auto-update time to on.

Tip: You can also set your phone to show the time even in idle mode. Select Menu >  > Display settings > Glance screen > On

PROFILES


Your phone has different profiles for different situations. You can edit the profiles to your

liking.

Personalize profiles

There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and an outdoor profile with loud tones.

You can personalize profiles further.

1. Select Menu >  > Profiles .
2. Select a profile and Personalise.


For each profile, you can set a specific ringtone, ringtone volume, message sounds, and so on.

ADD SHORTCUTS

You can add shortcuts to different apps and settings on your home screen.

Edit Go to settings

On the bottom left of your home screen is Go to, which contains shortcuts to various apps and settings. Select the shortcuts that are the handiest for you.

1. Select Menu >  > Go to settings .
2. Select Choose options.
3. Scroll to each shortcut you want to have on the Go to list and select Mark.
4. Select Done > Yes to save the changes.


You can also reorganize your Go to list.

1. Select Organise
2. Scroll to the item you want to move, select Move, and where you want to move it.
3. Select Back > Yes to save the changes.

GET THE MOST OUT OF THE TWO SIM CARDS

- Your phone can have two SIM cards, and you can use them for different purposes.

Select which SIM card to use

Select Menu >  > Connectivity > Dual SIM.



- To choose which SIM to use for calls, select Default SIM for calls, and select Always ask or SIM1 or SIM2.
- To choose which SIM to use for messages, select Default SIM for msgs, and select Always ask or SIM1 or SIM2.


Camera

PHOTOS AND VIDEOS



- You don't need a separate camera when your phone has all you need for capturing memories.

Take a photo




1. Select Menu > 
2. To zoom in or out, scroll up or down.
3. To take a photo, select 

To see the photo you just took, select  Photos.

Options for the camera

- Select Menu >  > , and select the option you want, such as Brightness or Image effects.

Record a video


1. Select Menu > 
2. Scroll left and select 
3. To stop the video, select 

To see the video you just recorded, select  Videos .

Internet and connections

BROWSE THE WEB


Connect to the internet

1. Select Menu >  .
2. Write a web address, and select Go.
3. Use the scroll key to move in the browser.

BLUETOOTH®

- Connect your phone to other devices with Bluetooth.

Switch on Bluetooth


1. Select Menu >  >Connectivity > Bluetooth .
2. Switch Bluetooth to On
3. Select Active to find a new device or Paired to find a device you have paired your phone with previously.

Music

MUSIC PLAYER

- You can listen to your MP3 music files with the music player.

Listen to music

1. Select Menu >  .
2. Select whether you want to view your songs, artists, albums, or playlists.
3. Scroll to a song, and select Play .


To adjust the volume, scroll up or down.

Tip: To set a song as an arpeggion, select Options > Use as tone.


LISTEN TO THE RADIO

Connect a compatible headset to your phone. It acts as an antenna.

Search for radio stations

1. Select Menu > .
2. To search for all available stations, select Options > Auto tuning.
3. To switch to a saved station, scroll left or right.

Listen to your favorite radio stations on your phone


- Select Menu > . To change the volume, scroll up or down. To close the radio, select Options > Switch off

Clock, calendar, and calculator

SET THE TIME AND DATE MANUALLY

- You can set your phone clock manually.

Change the time and date.e

1. Select Menu >  Date and time .
2. Switch Auto-update time to Off .
3. To set the time, select Time. Use the scroll key to set the time and select. OK
4. To set the date, select Date. Use the scroll key to set the date, and select OK .

ARM CLOCK

Learn how to use the alarm clock to wake up and get to places on time.

Set an alarm

No clock around? Use your phone as an alarm clock.


1. Select Menu > 

2. Select a pre-spresetm.
3. To set the alarm on, select On, or o set a new time, select Edit and use the keypad to enter the time.
4. Select Save

CALENDAR

- Need to remember an event? Add it to your calendar.


Add a calendar event

1. Select Menu > .
2. Scroll to a date, and select Options > Add event.
3. Enter the event details, and select Save

CALCULATOR

- Learn how to add, subtract, multiply, and divide with your phone calculator.

How to calculate

1. Select Menu > .
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Select Equals to get the result of the calculation.

Select Clear to empty the number fields.

Empty your phone

RESTORE FACTORY SETTINGS

Reset your phone

- You can restore the original factory settings, but be careful, since this reset removes all data you have saved in the phone memory and all your personalization.

- If you are disposing of your phone, note that you are responsible for removing all private content.
- To reset your phone to its original settings and to remove all your data, on the home screen, type in *#7370#. If asked, enter your security code.

Product and safety information

FOR YOUR SAFETY

- Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further info, read the complete user guide.

SWITCH OFF IN RESTRICTED AREAS



Switch the device off when mobile device use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals, or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.

ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

AUTHORIZED SERVICE



Only authorized personnel may install or repair this product.

BATTERIES, CHARGERS, AND OTHER ACCESSORIES



Use only batteries, chargers, and other accessories approved by HMD Global Oy for use with this device. Do not connect incompatible products.

KEEP YOUR DEVICE DRY



If your device is water-resistant, see its IP rating in the device's technical specifications for more detailed guidance.

PROTECT YOUR HEARING



To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker

is in use.

SAR



This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 centimetres (5/8 inch) away from the body. The specific maximum SAR values can be found in the Certification Information (SAR) section of this user guide. For more information, see the Certification Information (SAR) section of this user guide or go to www.sar-tick.com.

EMERGENCY CALLS

Important: Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

Before making the call:

- Switch the phone on.
 - If the phone screen and keys are locked, unlock them.
 - Move to a place with adequate signal strength.
1. Press the end key repeatedly until the home screen is shown.
 2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
 3. Press the call key.
 4. Give the necessary info as accurately as possible. Do not end the call until permitted to do so.

You may also need to do the following:

- Put a SIM card in the phone.

- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.

TAKE CARE OF YOUR DEVICE

Handle your device, battery, charger, and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device other than as instructed in the user guide.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- Keep the device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

During extended operation, the device may feel warm. In most cases, this is normal. To avoid getting too warm, the device may automatically slow down, close apps, switch off charging, and if necessary, switch itself off. If the device is not working properly, take it to the nearest authorized service facility.

RECYCLE



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way, you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy.

CROSSED-OUT WHEELIE BIN SYMBOL

Crossed-out wheelie bin symbol



The crossed-out wheelie-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Remember to remove personal data from the device first. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or read about HMD's take-back program and its availability in your country at www.hmd.com/phones/support/topics/recycle.

BATTERY AND CHARGER INFORMATION

Battery and charger safety info

- To unplug a charger or an accessory, hold and pull the plug, not the cord.
- When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.
- Always keep the battery between 59°F and 77°F (15°C and 25°C) for optimal

performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

- Do not dispose of batteries in a fire, as they may explode. Obey local regulations. Recycle when possible. Do not dispose of s household waste.
- Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way.
- If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.
- Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers, may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty.
- If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.

SMALL CHILDREN

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

MEDICAL DEVICES

Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

IMPLANTED MEDICAL DEVICES

To avoid potential interference, manufacturers of implanted medical devices (such as cardiac pacemakers, insulin pumps, and neurostimulators) recommend a minimum separation of 15.3 centimeters (6 inches) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device. Do not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer's directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

HEARING

Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

PROTECT YOUR DEVICE FROM HARMFUL CONTENT

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.
- Only install and use services and software from sources that you trust and that offer adequate security and protection.
- Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect the performance and operation of the device and/or computer.
- If you access preinstalled bookmarks and links to third-party internet sites, take the appropriate precautions. HMD Global does not endorse or assume liability for such sites.

VEHICLES

Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment. Only authorized personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area.

POTENTIALLY EXPLOSIVE ENVIRONMENTS

Switch your device off in potentially explosive environments, such as near gasoline pumps. Sparks may cause an explosion or fire, resulting in injury or death. Note restrictions in areas with fuel, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

CERTIFICATION INFORMATION

This mobile device meets guidelines for exposure to radio waves.

- Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields), recommended by international guidelines from the independent scientific organization ICNIRP. These guidelines incorporate substantial safety margins that are intended to assure the protection of all persons regardless of age and health. The exposure guidelines are based on the Specific Absorption Rate (SAR), which is an expression of the amount of radio frequency (RF) power deposited in the head or body when the device is transmitting. The ICNIRP SAR limit for mobile devices is 2.0 W/kg averaged over 10 grams of tissue.

SAR tests are carried out with the device in standard operating positions, transmitting at its highest certified power level, in all its frequency bands.

- This device meets RF exposure guidelines when used against the head or when positioned at least 5/8 inch (1.5 centimetres) away from the body. When a carry case, belt clip, or other form of device holder is used for body-worn operation, it should not contain metal and should provide at least the above-stated separation distance from the body.
- To send data or messages, a good connection to the network is needed. Sending may be delayed until such a connection is available. Follow the separation distance instructions until the sending is finished.
- During general use, the SAR values are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output, the lower the SAR value.
- Device models may have different versions and more than one value. Component and design changes may occur over time, and some changes could affect SAR values.
- For more info, go to www.sar-tick.com. Note that mobile devices may be transmitting even if you are not making a voice call.
- The World Health Organization (WHO) has stated that current scientific information does not indicate the need for any special precautions when using mobile devices. If you are interested in reducing your exposure, they recommend you limit your usage or use a hands-free kit to keep the device away from your head and body. For more information and explanations, and discussions on RF exposure, go to the WHO website at www.who.int/health-topics/electromagnetic-fields#tab=tab_1.
- Please refer to www.hmd.com/sar for the maximum SAR value of the device.
- ABOUT DIGITAL RIGHTS MANAGEMENT
- When using this device, obey all laws and respect local customs, privacy, and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content.

COPYRIGHTS AND OTHER NOTICES

Copyrights

- The availability of products, features, ap, ps, and services may vary by region. For

more info, contact your dealer or your service provider. This device may contain commodities, technology, or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

- The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.
- To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.
- Reproduction, transfer, or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.
- HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Downloading of maps, games, music, and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services, and features may vary by region. Please check with your local dealer for further details and availability of language options.
- Certain features, functionality, and product specifications may be network-dependent, subject to additional terms, conditions, and charges.
- All specifications, features, and other product information provided are subject to change without notice.
- HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.
- HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.
- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc., and any

use of such marks by HMD Global is under license.

FAQs

 
Q: How do I charge my Nokia 210 Dual SIM?

A: To charge your phone, connect the provided charging cable to the phone's charging port and plug it into a power source.

Q: Can I use two SIM cards simultaneously on the Nokia 210 Dual SIM?

A: Yes, this phone supports dual SIM functionality, allowing you to use two SIM cards at the same time for calls and messages.

Documents / Resources

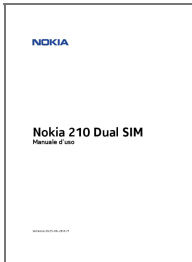	NOKIA 210 Dual SIM Mobile [pdf] User Manual TA-1139, 210 Dual SIM Mobile, 210, Dual SIM Mobile, SIM Mobile, Mobile
---	---

References

- [User Manual](#)

📎 210, 210 Dual SIM Mobile, Dual SIM Mobile, Mobile, Nokia, SIM Mobile, TA-

📁 Nokia 1139

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.