

## nomad A6 X2-C Removable Battery User Guide

 
[Home](#) » [NOMAD](#) » nomad A6 X2-C Removable Battery User Guide 

### Contents

- 1 [nomad A6 X2-C Removable Battery](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [Specifications](#)
- 5 [Important information](#)
- 6 [Activate your Supernote](#)
- 7 [Check product certifications](#)
- 8 [FCC Statement](#)
- 9 [FAQ's](#)
- 10 [Documents / Resources](#)
  - 10.1 [References](#)
- 11 [Related Posts](#)

## NOMAD

### nomad A6 X2-C Removable Battery

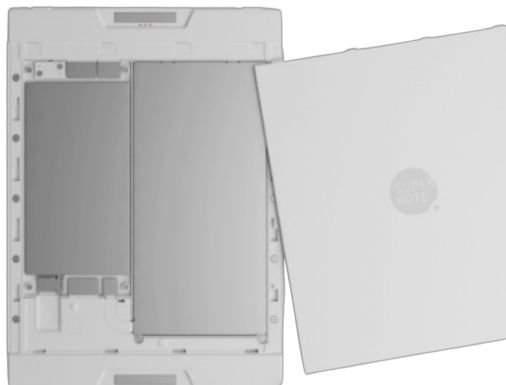

### Product Information

## Specifications

- **Model:** SUPERNOTE A6 X2-C
- **Battery capacity:** input: 5.0 V 2.0 A
- **IC:** 24370-A6X2
- **HVIN:** A6-X2 YU10674-23006 R-R-QNY-A6X2-W
- **FCC ID:** 2AQZ9-A6-X2 Made in China
- **5 GHz band (W52):** Indoor use only

## Product Usage Instructions

### Safety Guidelines

- Do not expose the device to water or moisture.
- Avoid using the device in extreme temperatures.
- Keep the device away from direct sunlight.
- Do not disassemble the device or attempt any repairs by yourself.

### Charging the Device

1. Connect the provided charging cable to the device's charging port.
2. Plug the other end of the cable into a power source with an output of 5.0 V and 2.0 A.
3. The device will start charging. The charging indicator will light up or display a charging animation.
4. Once fully charged, disconnect the charging cable from the device and the power source.

### Turning On/Off the Device

- To turn on the device, press and hold the power button until the device vibrates or the screen turns on.
- To turn off the device, press and hold the power button until the power options menu appears, then select "Power off" or "Shutdown".

### Connecting to Wi-Fi

1. Swipe down from the top of the screen to open the notification panel.
2. Tap on the Wi-Fi icon to turn on Wi-Fi.
3. Select a Wi-Fi network from the available list.
4. If prompted, enter the password for the selected network.
5. Wait for the device to connect to the Wi-Fi network.

## Specifications

### Display

7.8 inch monochrome digital-paper display 1872 x 1404 resolution (300 DPI) E Ink Carta Display

### Size & Weight

191mm (L) x 139mm (W) x6.9mm (H) 265g

## **Operation System**

- **Chauvet:** Handwriting OS based on Android

## **Work Environment**

- C – 40°C
- 32°F – 104°F

## **Battery**

- Model: U2366130PHV
- 2700mAh 5v,2A
- Rechargeable (USB type-CJ)

## **Memory Storage**

- 4GB RAM
- 32GB FLASH memory (Expandable)

This product does not include a power adaptor, please use one that meets the industrial standard.

## **Important information**

- **Screen Safety**

The screen is delicate – please protect it from bumps, drops, scratches, or anything that could apply damaging force.

- **Magnetism and Static Hazard**

Keep clear of powerful magnets and static electricity buildup which can harm internal components.

- **Operating Conditions**

Please avoid exposing the device to extreme or hazardous environments that could cause damage, including high or low temperatures, excessive dryness or humidity, smoke, and heavy dust.

 
- **Liquid Exposure Caution**

This device is not waterproof. Please avoid contact with any liquids, including water, which could cause damage to components.

- **Warranty Coverage for Internal Repairs**

The product warranty only remains valid if internal components are accessed by following official instructions solely for sanctioned replacement purposes. Unauthorised disassembly voids the warranty.

## **Activate your Supernote**

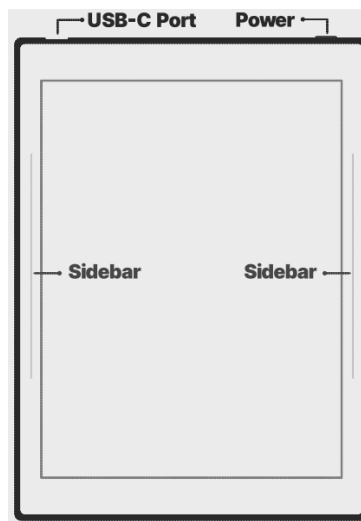

- **Power on**

Long press the power button to power on your Supernote device.

- **Setup**

Follow the on-screen instructions to start your first note.

To view the complete User Guide, visit: [support.supernote.com](https://support.supernote.com) Other items included: USB cable, screw driver

## Check product certifications

 
## Settings



My device



Product Certification

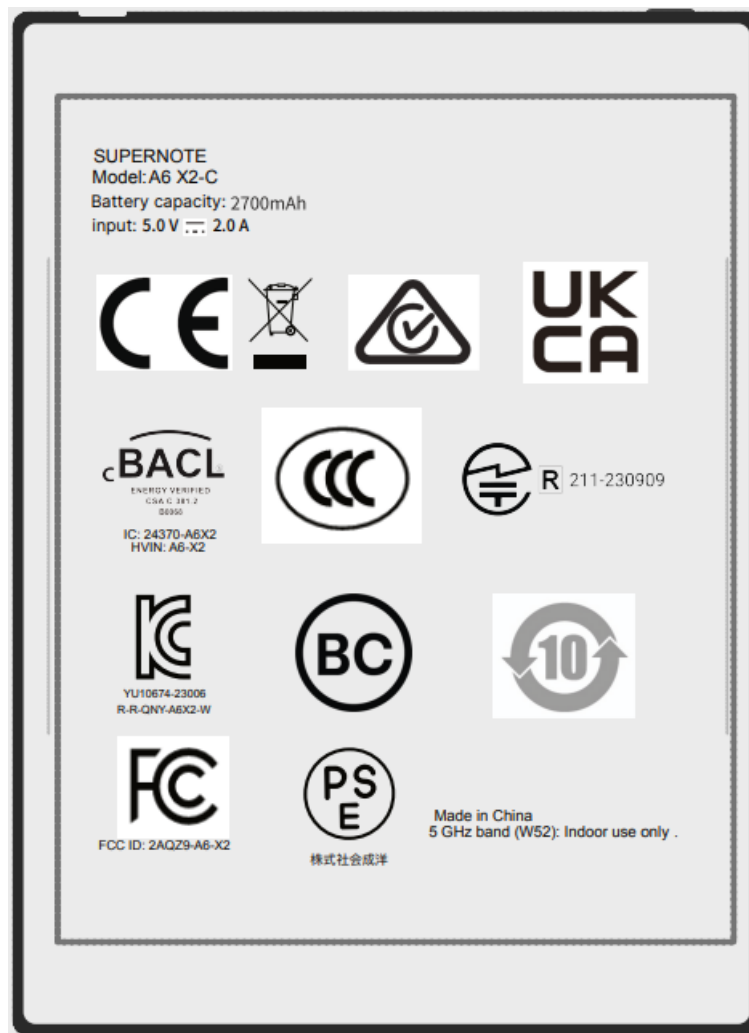

## FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Terson ero, vite an a semed by turn the queen in an on, the we enouge tory cort the net one are or more the town

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency banes, at you are to a wireless ase aton antenna, ent over he power, tactual SAR level of the phone while operating can be well below the maximum value, in general, Before a new model device is a available for sale to the public, it must be tested and certified to the FCC that it

does not exceed the exposure limit established by the FCC Tests for each device are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this model device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the eut a minimum of 0 mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

## **ISED RSS Warning/ISED RF Exposure Statement**

### **ISED RSS Warning:**

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

**Note:** For 5150~5250MHz is only for indoor use.

### **RF Exposure Information (ISED SAR) :**

This device has been tested ISED SAR and meets the ISED limit.

### **Specific Absorption Rate (SAR) information**

SAR tests are conducted using standard operating positions accepted by the ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model device is available for sale to the public, it must be tested and certified to the ISED that it does not exceed the exposure limit established by the ISED Tests for each device are performed in positions and locations (e.g. at the ear and worn on the body) as required by the ISED For body worn operation, this model device has been tested and meets the ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the eut a minimum of 0 mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.



[support.supernote.com](http://support.supernote.com)

## **FAQ's**

Can I use this device underwater?

No, this device is not waterproof. Do not expose it to water or moisture.

Can I repair the device by myself?

No, do not attempt to disassemble or repair the device by yourself. Seek professional assistance if needed.

Can I use the device outdoors?


The device is designed for indoor use only. Avoid using it in extreme temperatures or direct sunlight.

How do I reset the device?

To perform a factory reset, go to Settings System Reset Factory data reset. Note that this will erase all data on the device, so make sure to back up any important information.

---

## Documents / Resources

|  |  |
|--|--|
|  | <p><a href="#">nomad A6 X2-C Removable Batter</a> [pdf] User Guide<br/>A6 X2-C Removable Batter, A6 X2-C, Removable Batter, Batter</p> |
|--|--|

## References

- [User Manual](#)