



Nordtronic Zigbee Box Relay Dali Instruction Manual

[Home](#) » [Nordtronic](#) » Nordtronic Zigbee Box Relay Dali Instruction Manual 

 
 


Zigbee Box Relay Dali Instruction Manual


Contents

- [1 Box relayDali](#)
- [2 Wiring diagram](#)
- [3 Operation](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Box relayDali

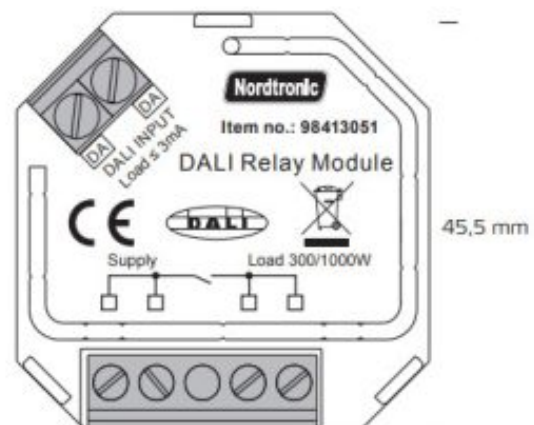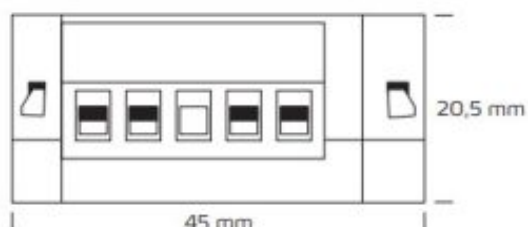

DALI signal input

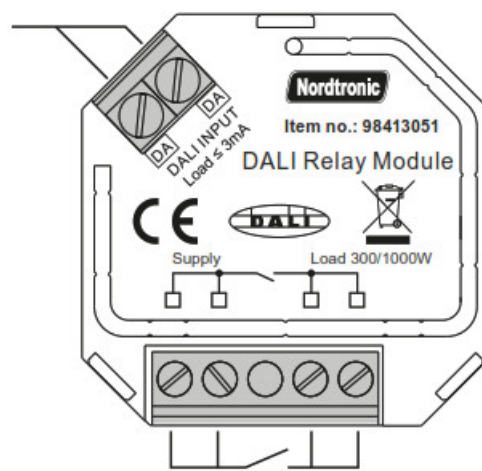 


Relay(N.C.)

Factory default power on status: contact closed

Input		
DALI control input	DALI consumption	Number of DALI addresses
1	< 3mA	1


Output, relay			
Switching voltage AC	Switching voltage DC	Current	Type of contact
Max. 250V	Max. 30V	Resistive load: max. 4.3A Capacitive load: max. 1.3A Inductive load: max. 4.3A	1 changeover

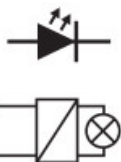 Compatible Load Types		
Load symbol	Load type	Maximum load
	Resistive loads Conventional incandescent and halogen light sources	1000W @ 230VAC 500W @ 110VAC
	Capacitive loads Fluorescent tube lamp (compact / with electronic ballast), electronic transformer, LED	300W @ 230VAC 150W @ 110VAC
	Inductive loads Ferromagnetic transformers	1000W @ 230VAC 500W @ 110VAC

Wiring diagram


Switching of 100-240VAC load

 DALI PS

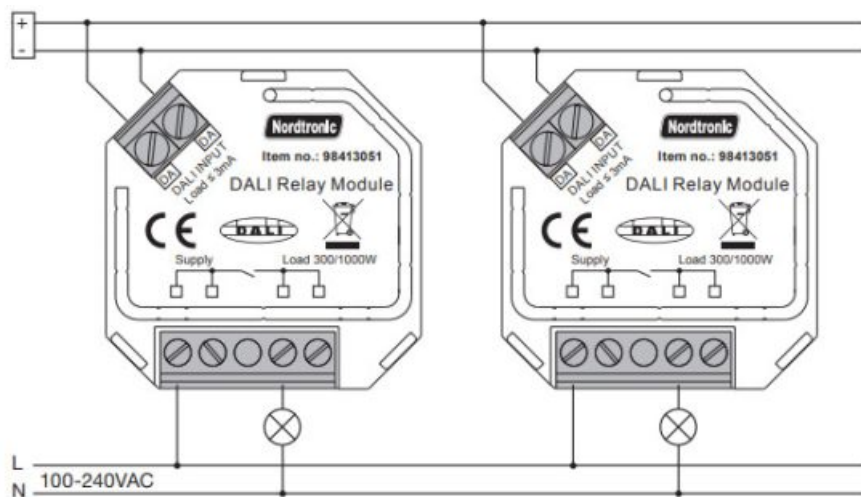

Switching of 12/24VDC load

 DALI PS

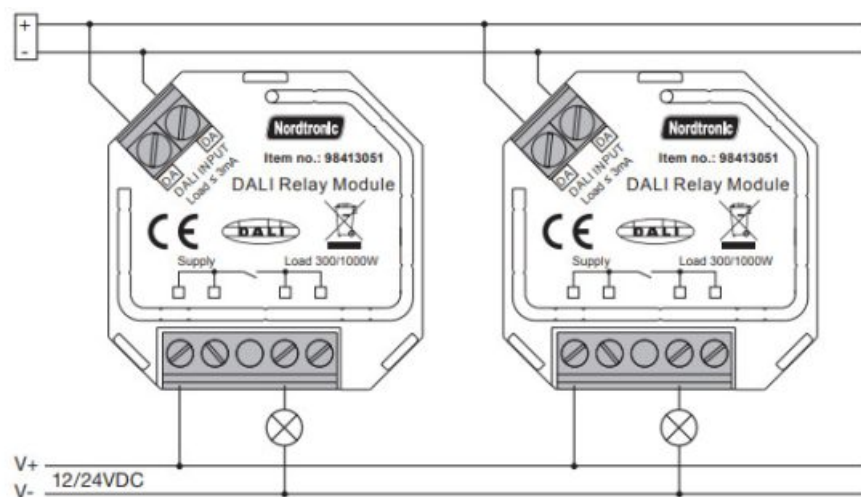

Operation

Setting DALI Address

1 DALI address can be assigned by the DALI Master controller automatically, please refer to user manuals of compatible DALI Masters for specific operations.

 


Nordtronic A/S
 Flade Engvej 4
 DK – 9900 Frederikshavn
 Denmark
 CVR: 29808708
 Tel: +45 70209531
www.nordtronic.com

Find the updated manual on our website

www.nordtronic.com

With reservation for typing errors

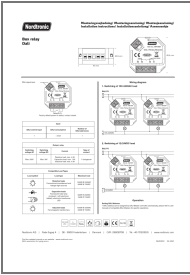	Nordtronic Zigbee Box Relay Dali [pdf] Instruction Manual Zigbee Box Relay Dali
---	--

References

-  [Nordtronic](#)