



NORMAN DIAL01 Remote Control User Manual

[Home](#) » [NORMAN](#) » NORMAN DIAL01 Remote Control User Manual 

Contents

- 1 NORMAN DIAL01 Remote Control
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQ
- 5 PRODUCT SPECIFICATION
- 6 FCC Information
- 7 BUTTON OVERVIEW
- 8 REPLACE BATTERY
- 9 CHANNEL BUTTON INTRODUCTION
- 10 GROUP CONTROL
- 11 OPERATION
- 12 PAIRING REMOTE WITH SHADE
- 13 CLEAR PAIRING REMOTE WITH SHADE
- 14 SET MY FAVORITE POSITION
- 15 CLEAR MY FAVORITE POSITION
- 16 SET UPPER LIMIT
- 17 CLEAR UPPER LIMIT
- 18 SET LOWER LIMIT
- 19 CLEAR LOWER LIMIT
- 20 SET VANE OPEN POSITION
- 21 CLEAR VANE OPEN POSITION
- 22 COPY REMOTE
- 23 FACTORY RESET FOR COPY REMOTE
- 24 Documents / Resources
 - 24.1 References

NORMAN



Product Information

Specifications

- Model: DIAL01
- FCC ID: Q3V-DIAL01
- IC: 28542-DIAL01
- Compliance: FCC Part 15, ICES-003(B) / NMB-003(B)
- Battery: CR2032 3V

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Unauthorized modifications may void the user's authority to operate this equipment. To avoid interference, connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

IC Information

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Risk of RF exposure: The equipment complies with FCC/ISED RF exposure limits set forth for an uncontrolled environment. The equipment must not be co-located or operating in conjunction with any other antenna or

transmitter.

Product Usage Instructions

Button Overview

- Move Shade to Fully Open
- Setup Best Privacy Control All Channels Stop
- My Favorite Best View
- Shade Channel (There are 5 channels)
- Move Shade to Fully Closed

The function of buttons may vary depending on the shade type, please refer to the OPERATION section for more details.

Replace Battery

1. Step 1: Remove the Color ring.
2. Step 2: Remove the Battery Cover.
3. Step 3: Replace CR2032 3V batteries.
4. Step 4: Put the battery cover and Color ring back.
5. Step 5: Remote lights will illuminate after proper installation.

Channel Button Introduction

When you select a channel (1~5), the selected channel will light up, and you can then operate the shade(s) that are programmed to this channel.

Group Control

When pressing the ALL button, the button will light up and you can then operate all shades that are programmed to the remote at once.

Operation

Lift Feature	Button	Function
Bottom Up (Cellular Shade / Roller Shade / Roman Shade)	Top Down Bottom Up (Cellular Shade)	Fully close for best privacy.
	Day & Night (Cellular Shade)	Fully close for best privacy.
	Perfect Sheer	Fully close for best privacy.
	Best Privacy	Fully close for best privacy.
	Top Down Bottom Up (Cellular Shade)	Fully open for best view.

Top Down Bottom Up (Cellular Shade)	Day & Night (Cellular Shade)	Fully open for best view.
	Perfect Sheer	Fully open for best view.
	Best Privacy	Fully open for best view.
Day & Night (Cellular Shade)	Top Down Bottom Up (Cellular Shade)	Fully open for best view.
	Day & Night (Cellular Shade)	Fully open for best view.
	Perfect Sheer	Fully open for best view.
	Best Privacy	Fully open for best view.
Perfect Sheer	Top Down Bottom Up (Cellular Shade)	Fully open for best view.
	Day & Night (Cellular Shade)	Fully open for best view.
	Perfect Sheer	Fully open for best view.
	Best Privacy	Fully open for best view.
Best Privacy	Top Down Bottom Up (Cellular Shade)	Fully open for best view.
	Day & Night (Cellular Shade)	Fully open for best view.
	Perfect Sheer	Fully open for best view.
	Best Privacy	Fully open for best view.
My Favorite	Top Down Bottom Up (Cellular Shade)	Move to My Favorite pre-set position. Default My Favorite position: 1/2 of shade height.
	Day & Night (Cellular Shade)	Move to My Favorite pre-set position. Default My Favorite position: 1/2 of shade height.
	Perfect Sheer	Move to My Favorite pre-set position. Default My Favorite position: 1/2 of shade height.
	Best Privacy	Move to My Favorite pre-set position. Default My Favorite position: 1/2 of shade height.

FAQ

Q: What battery does the remote control use?

A: The remote control uses a CR2032 3V battery.

Q: How do I replace the battery in the remote control?

A: To replace the battery, follow these steps:

1. Step 1: Remove the Color ring.
2. Step 2: Remove the Battery Cover.
3. Step 3: Replace CR2032 3V batteries.
4. Step 4: Put the battery cover and Color ring back.
5. Step 5: Remote lights will illuminate after proper installation.

Q: How do I select a channel?

A: To select a channel, press the corresponding channel button (1~5) on the remote control. The selected channel will light up, and you can then operate the shade(s) that are programmed to this channel.

Q: What is the Group Control feature?

A: The Group Control feature allows you to operate all shades that are programmed to the remote control at once. Simply press the ALL button on the remote control to activate this feature.

Q: What are the different lift feature buttons?

A: The lift feature buttons vary depending on the shade type. Please refer to the OPERATION section for a detailed description of the lift feature buttons for each shade type.

PRODUCT SPECIFICATION

1. **Model** DIAL01
2. **Dimensions** OD 67.6mm x H 21.2mm
3. **Weight (including battery)** 74.5g ± 20g
4. **Battery/Voltage** CR2032 3V x 2
5. **Radio Frequency** proprietary 2.4 GHz
6. **Operation Temperature** : 0°C – 50°C / 32°F – 122°F

FCC ID: Q3V-DIAL01

IC: 28542-DIAL01

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
- Unauthorized modifications may void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

IC Information

Innovation, Science and Economic Development Canada (ISED) Notices

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:


1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-003(B) / NMB-003(B)

RF Exposure Warning


The equipment complies with FCC/ISED RF exposure limits set forth for an uncontrolled environment. The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

BUTTON OVERVIEW

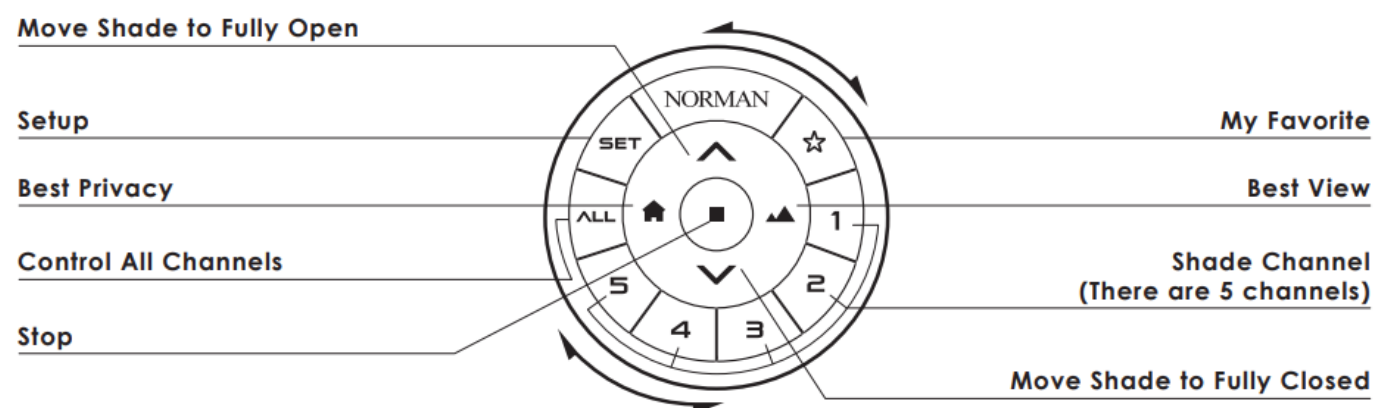

The function of buttons may vary depending on the shade type, please refer to section "OPERATION".

REPLACE BATTERY

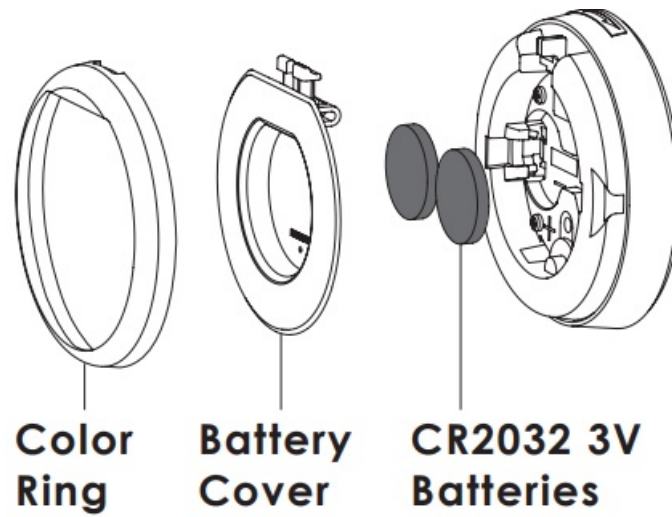

- Step 1: Remove the Color ring.
- Step 2: Remove the Battery Cover.
- Step 3: Replace CR2032 3V batteries.
- Step 4: Put the battery cover and Color ring back.
- Step 5: Remote lights will illuminate after proper installation.

CHANNEL BUTTON INTRODUCTION

SELECT ONE CHANNEL

When you select a channel (1~5), the selected channel will light up, and you can then operate the shade(s) that are programmed to this channel.





 

 




 
 
























GROUP CONTROL

 When pressing "ALL" button, the button will light up and you can then operate all shades that are programmed to the remote at once.



OPERATION


Lift Feature Button Function	Lift Feature			
	Bottom Up (Cellular Shade / Roller Shade / Roman Shade)	Top Down Bottom Up (Cellular Shade)	Day & Night (Cellular Shade)	Perfect Sheer
 Best Privacy	 Fully close for best privacy.	 Fully close for best privacy.	 Fully close for best privacy.	 Fully close for best privacy.
 Best View	 Fully open for best view.	 Fully open for best view.	 Fully open for best view.	 Fully open for best view.
 My Favorite	 Move to "My Favorite" pre-set position. Default "My Favorite" position: 1/2 of shade height.	 Move to "My Favorite" pre-set position. Default "My Favorite" position: 1/2 of shade height.	 Move to "My Favorite" pre-set position. Default "My Favorite" position: 1/2 of shade height.	 Move to "My Favorite" pre-set position. Default "My Favorite" position: 1/2 of shade height.
 Counterclockwise Dial	 Slightly adjust shade position to close.	 Slightly move middle rail to close. When dial more than 90°, middle rail will continuously move to close. Middle rail will stop when it fully closed to bottom rail. Keep dialing the remote, middle rail and bottom rail will move down together.	 Slightly move middle rail to close. When dial more than 90°, middle rail will continuously move to close. Middle rail will stop when it fully closed to bottom rail. Keep dialing the remote, middle rail and bottom rail will move down together.	 When shade is not fully closed, slightly tilt to make bottom rail lowered a bit. Turn over 90° to make shade fully closed. When shade is fully closed, slightly tilt to make vane opened a bit. Turn over 90 degrees to make vane fully opened.
 Clockwise Dial	 Slightly adjust shade position to open.	 Slightly move middle rail to open. When dial more than 90°, middle rail will continuously move to open.	 Slightly move middle rail to open. When dial more than 90°, middle rail will continuously move to open.	 When vane is opened, slightly tilt clockwise to make vane closed a bit. Turn over 90° to make shade fully closed. When shade is fully closed, slightly tilt to make bottom rail raised a bit. Turn over 90° to make shade fully raised.
 Fully Close	 Continuously move shade to close.	 Continuously move bottom rail to close.	 Continuously move bottom rail to close.	 Move shade to fully closed/ When adjusting vane openness, press 1 time and shade will be fully lowered down and closed. Press again and vane would be opened.
 Fully Open	 Continuously move shade to open.	 Continuously move bottom rail to open. Bottom rail will stop when it fully close to middle rail. Press this button again, bottom rail and middle rail will move up together.	 Continuously move bottom rail to open. Bottom rail will stop when it fully close to middle rail. Press this button again, bottom rail and middle rail will move up together.	 Move shade to fully open. When adjusting vane openness, press 1 time and shade will be fully closed. Press again and shade would be fully rolled up.

PAIRING REMOTE WITH SHADE

Shades are pre-programmed to the designated channel / group according to your order details. If you want to change the pre-setting, please CLEAR pre-setting first (please refer to page 2) , then follow the below steps to set up a new pairing.

IMPORTANT! Please only pair shades with the same lift type to the same channel for optimal operation.

 
Step 1: On Shade

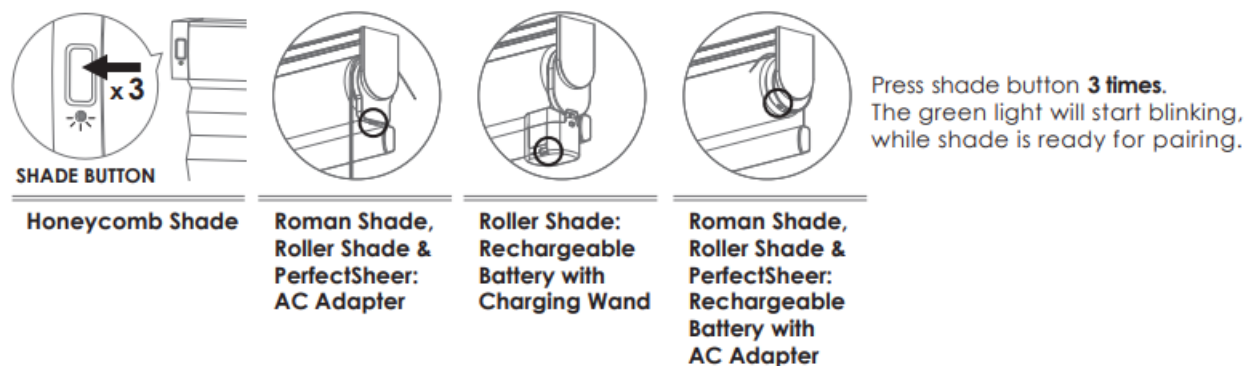

Step 2: On Remote



 
Step 3: Pairing Remote with Shade

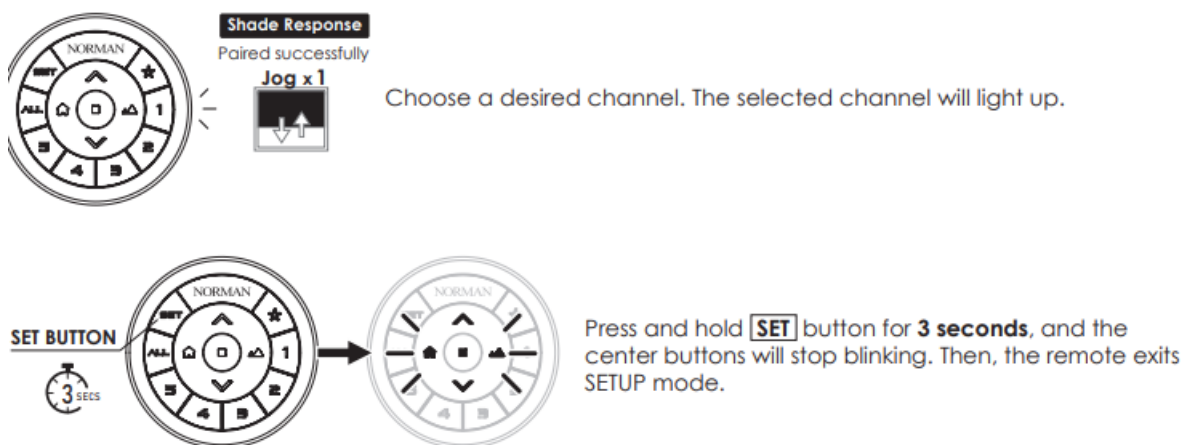

i SETUP mode will time out after 20 seconds of inactivity.

CLEAR PAIRING REMOTE WITH SHADE

 Step 1: On Shade

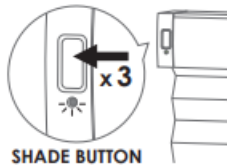

Honeycomb Shade



Roman Shade,
Roller Shade &
PerfectSheer:
AC Adapter



 
Roller Shade:
Rechargeable
Battery with
Charging Wand



Roman Shade,
Roller Shade &
PerfectSheer:
Rechargeable
Battery with
AC Adapter


Press **SHADE BUTTON** 3 times.
The green light will start blinking,
while shade is ready for pairing.

Step 2: On Remote

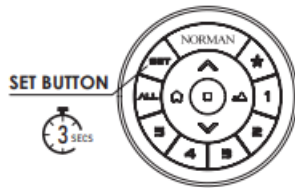


Press and hold **SET** button for **3 seconds**, and center buttons will blink,
the remote is in SETUP mode.

Step 3: Clear remote with Shade

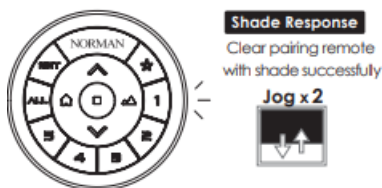


Choose the channel which belongs to the shade you would like to unpair
from your remote. The selected channel will light up.

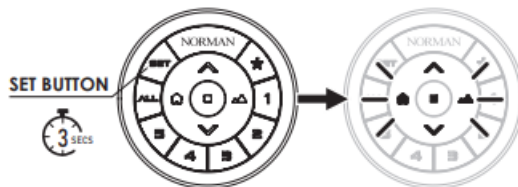

Press and hold **SET** button for **3 seconds**, and the
center buttons will stop blinking. Then, the remote exits
SETUP mode.

i SETUP mode will time out after 20 seconds of inactivity.

SET MY FAVORITE POSITION


Please press “My Favorite”  to check the default position setting, if you would like to change My Favorite position, you could follow below procedures.

CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.

Step 1: Move the shade to desired position.




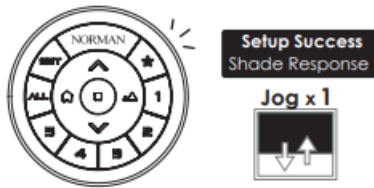
Step 2: Press and hold **SET** button for **3 seconds**, and center buttons will blink.

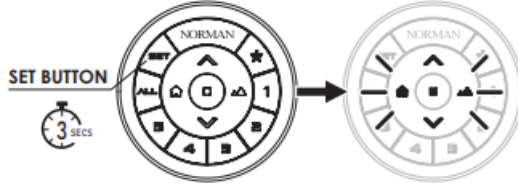

Step 3: Choose the channel which is paired to the shade. The selected channel will light up.



Step 4: Press  button to save My Favorite position.




CLEAR MY FAVORITE POSITION

If you clear My Favorite position, and do not set a new one, My Favorite position will reset back to default position which is 1/2 the length of the shade.


CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.

Step 1: Press and hold **SET** button for **3 seconds**. The center buttons will blink.

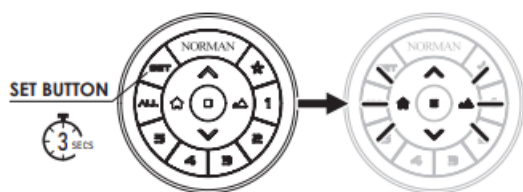

Step 2: Choose the channel which is paired to the shade. The selected channel will light up.



Step 3: Press and hold  button to clear My Favorite. The shade will jog twice and return to default Favorite position.



SET UPPER LIMIT


Shades upper limit has been set before shipping out from factory. If you want to change the pre-setting, please CLEAR the upper limit first (please refer to page 6) , then follow below steps to set up new upper limit.

CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.

Step 1: Move the shade bottom rail to desired position. But for cellular Shade Motorized Day & Night, please always move both middle rail and bottom rail to desired position.




Step 2: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons will start blinking - the remote is now in RESET mode.

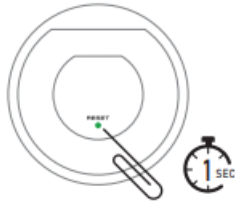

Step 3: Choose the channel which is paired to the shade. The selected channel will light up.



Step 4: Press  open button to save upper limit.




CLEAR UPPER LIMIT

If the upper limit hasn't been set successfully, the Best View, Best Privacy, and My Favorite function can't work optimally.

CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.

Step 1: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons start blinking - the remote is now in RESET mode.

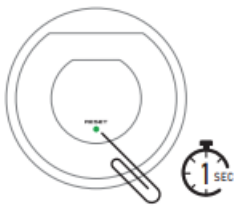

Step 2: Choose the channel which is paired to the shade. The selected channel will light up.



Step 3: Press and hold  open button for **1 second** to clear upper limit.



SET LOWER LIMIT

Shades lower limit has been set before shipping out from factory. If you want to change the pre-setting, please CLEAR the lower limit first (please refer to page 8) , then follow below steps to set up new lower limit.


CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.

Note: Lower limit for for Perfect Sheer—Shade is fully lowered and vane is fully opened.

Step 1: Move the shade to desired position. For Perfect Sheer, move the shade to vane fully opened position.




Step 2: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons will start blinking - the remote is now in RESET mode.

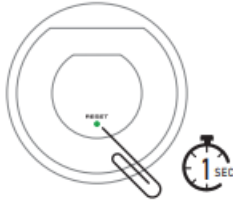

Step 3: Choose the channel which is paired to the shade. The selected channel will light up.



Step 4: Press  close button to save lower limit.

 


CLEAR LOWER LIMIT

If the lower limit hasn't been set successfully, the Best View, Best Privacy, and My Favorite function can't work optimally.


CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.

Step 1: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons will start blinking - the remote is now in RESET mode.

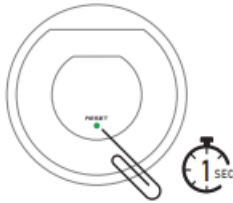

Step 2: Choose the channel which is paired to the shade. The selected channel will light up.



Step 3: Press and hold  close button for **1 second** to clear lower limit.



SET VANE OPEN POSITION

(ONLY FOR PERFECT SHEER)

 
Vane open position has been set before shipping out from factory. If you want to change the pre-setting, please CLEAR the vane open position first (please refer to page 10) , then follow below steps to set up vane open position.

CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.

Step 1: Move the shade to desired position.



Step 2: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons will start blinking - the remote is now in RESET mode.

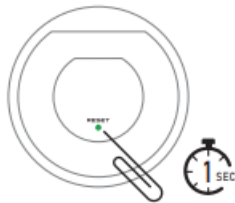

Step 3: Choose the channel which is paired to the shade. The selected channel will light up.



Step 4: Press **SET** button to save vane open position.

 


CLEAR VANE OPEN POSITION

(ONLY FOR PERFECT SHEER)

CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.

Step 1: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons will start blinking - the remote is now in RESET mode.

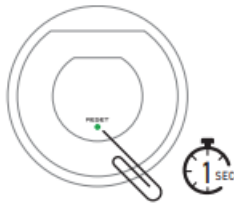

Step 2: Choose the channel which is paired to the shade. The selected channel will light up.



 
Step 3: Press and hold **SET** button for **1 second** to clear vane open position.



COPY REMOTE


Copy all settings from the existing remote to a new remote.

New Remote

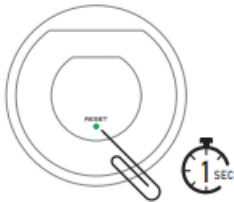

- 1 Press and hold **RESET** button for **1 second** by pin (not provided), center buttons will start blinking.
- 2 Press **RESET** button **3 times**, center buttons will flash quickly.

 Existing Remote

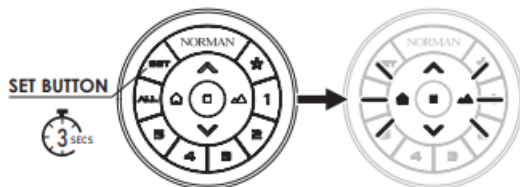

- 3 Press and hold **SET** button for **3 seconds**, the center buttons will start blinking.
- 4 Press **SET** button **3 times**, the channel lights will blink **4 times**.

Copy Success

New Remote

All of channel lights will light up for **1 second**, and exit out of RESET mode.

 
Existing Remote

Press and hold **SET** button for **3 seconds**, and the center buttons will stop blinking and exit out of SETUP mode.


FACTORY RESET FOR COPY REMOTE

CAUTION! By performing FACTORY RESET, your copied remote will be erased. The connection between your existing remote and hub will be disconnected. But you can still use the existing remote to operate the paired shades.


Step 1: Press and hold **RESET** button for **1 second** by pin (not provided). The center buttons will start flashing and enter RESET mode.

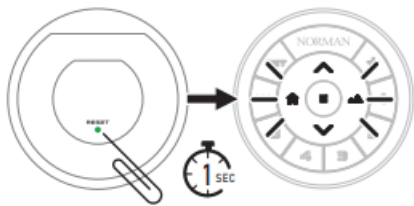

 Step 2: Press **RESET** button **6 times**, the channel lights will flash **4 times**, then the center buttons will start blinking.

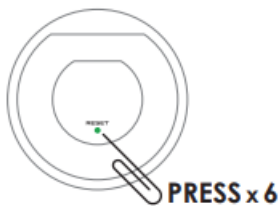

 Step 3: Press and hold **RESET** button for **1 second**, and exit out of RESET mode.

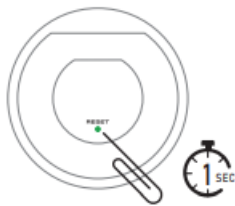

Documents / Resources

	<p>NORMAN DIAL01 Remote Control [pdf] User Manual</p> <p>DIAL01 Remote Control, DIAL01, Remote Control, Control, Remote</p>
--	---

References

- [User Manual](#)