


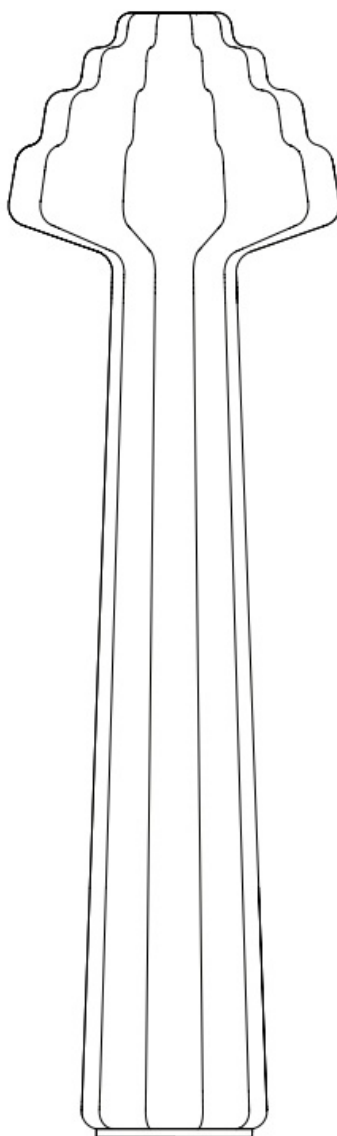

normann PHANTOM Floor Lamp



Contents [[hide](#)]

[1 ASSEMBLY INSTRUCTIONS PHANTOM](#)

[2 GENERAL INSTRUCTIONS](#)


[3 Documents / Resources](#)

[3.1 References](#)

ASSEMBLY INSTRUCTIONS PHANTOM

IMPORTANT

Always shut off power to the circuit before starting installation work. In some countries electrical installation work may only be carried out by an authorised electrical contractor. Contact your local electricity authority for advice.

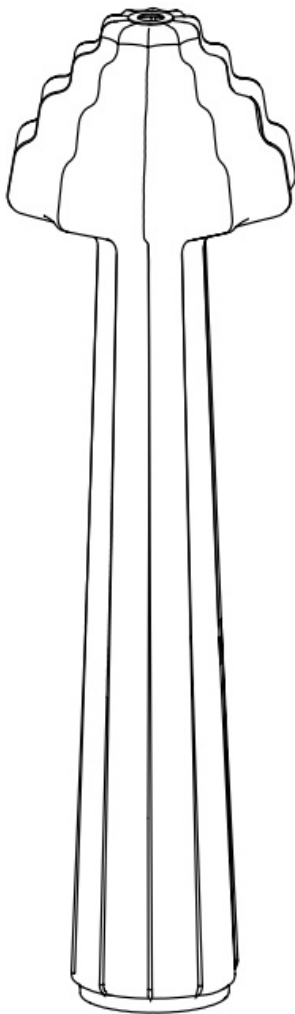

A



B




C

The instructions specify that unpacking requires two-person cooperation:

Step 1 – Stand the box upright after removing the top packaging cover and the insert cardboard.

Attentions:

- Avoid using sharp tools or excessive force.
- Tear the white paper gently by hand.
- Do not touch the surface of the lampshade.

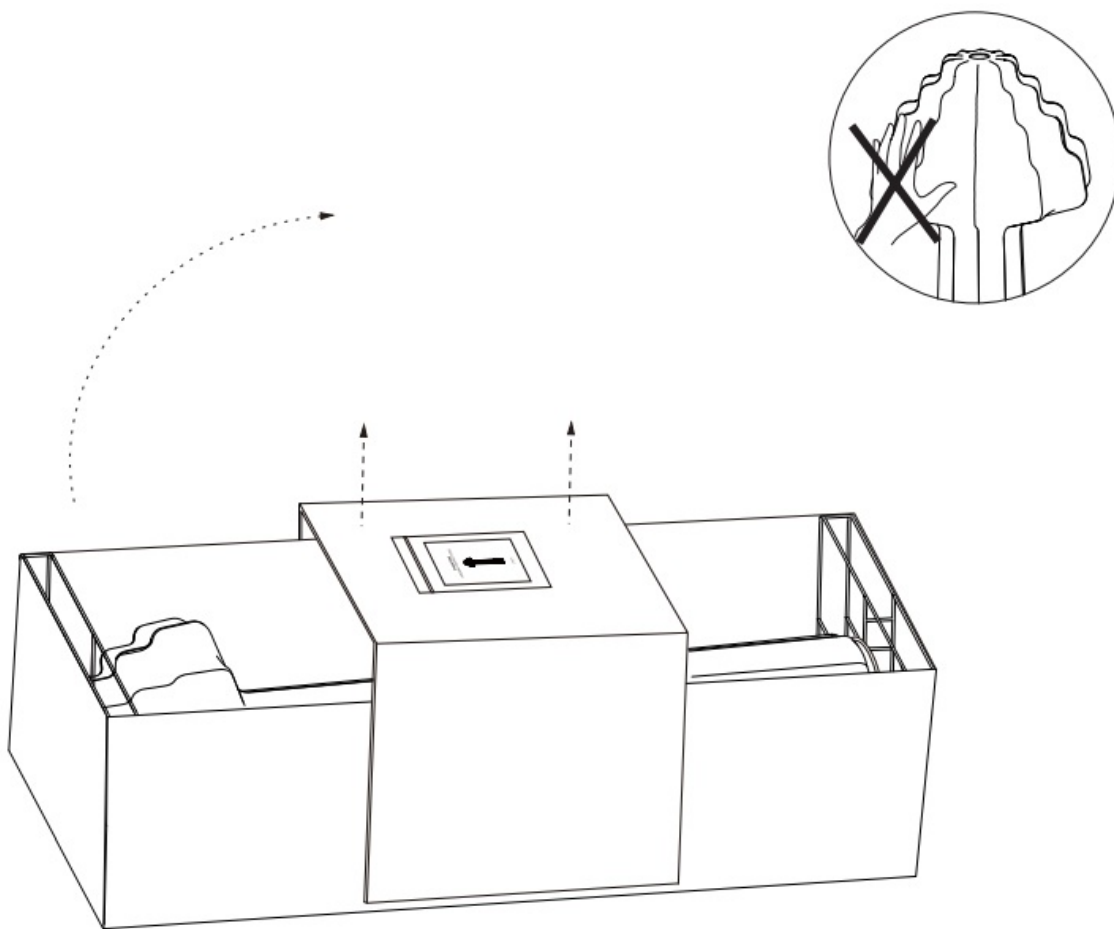

Step 1


The instructions specify that unpacking requires two-person cooperation:

Step 2 – Slide out the entire light together with its packaging support horizontally,

Step 3 – Carefully remove the wrapping paper by hand, followed by detaching the top support bracket.

Attentions:

- Avoid using sharp tools or excessive force.
- Tear the white paper gently by hand.
- Do not touch the surface of the lampshade.

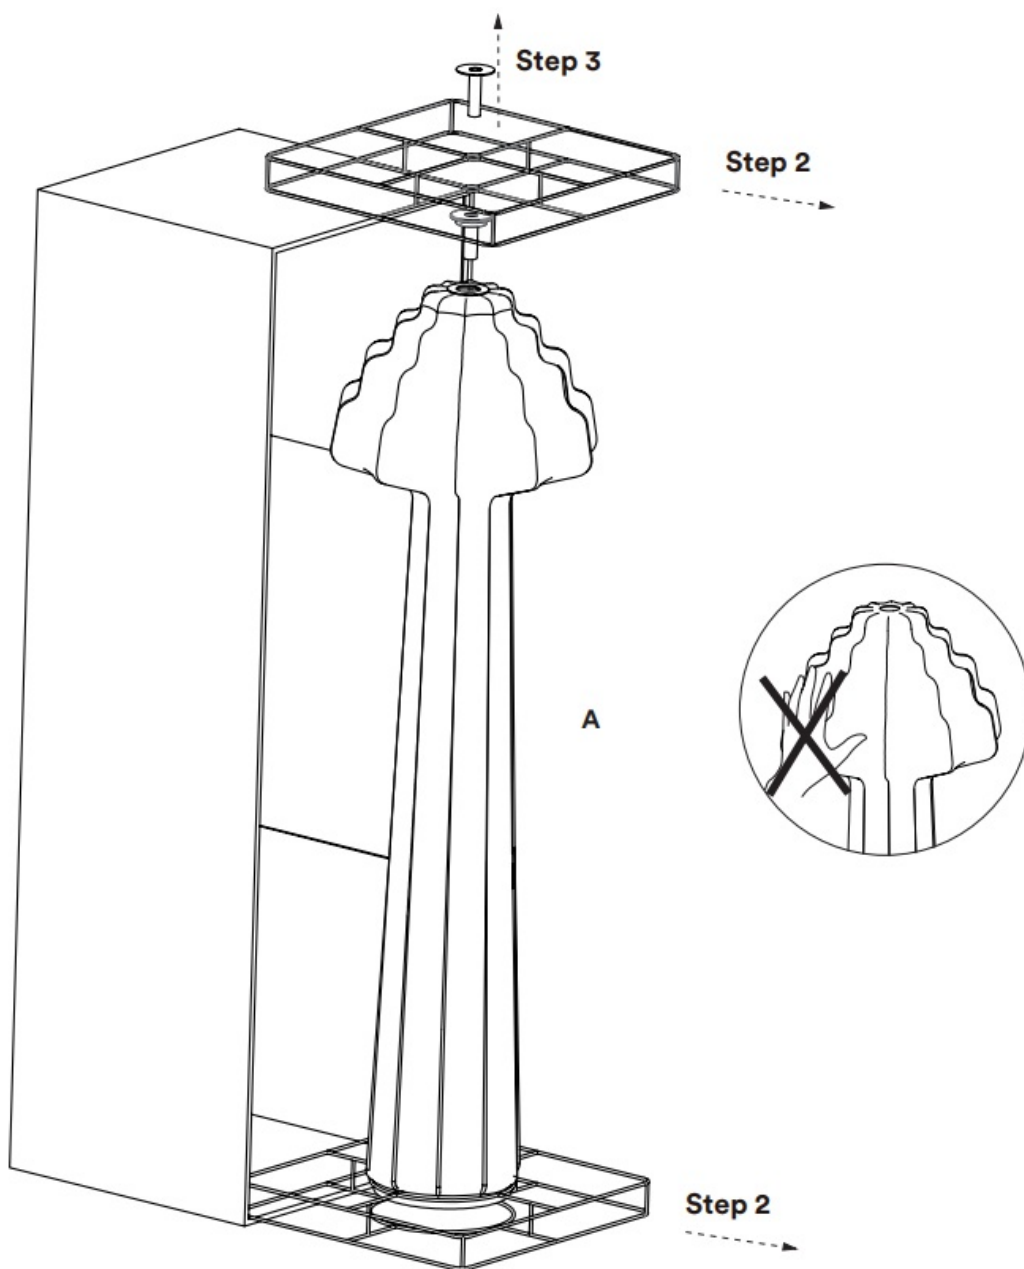

The instructions specify that unpacking requires two-person cooperation:

Step 4 – Tilting the Lamp: One person inserts their fingers into the top hole of the lamp.

Another person lifts one side of the base bracket. Together, tilt the lamp gently to an angle below 30 degrees—just enough to access the bottom. Caution: Avoid excessive tilting.

Step 5 – Removing the Thumb Screws: Locate the two thumb screws at the bottom of

the lamp. Unscrew both screws completely.


Step 6 – Repositioning the Lamp: Carefully return the lamp to an upright position.

To relocate the lamp: Hold it by inserting fingers into the top hole.

Move the base aside and suspend the lamp while positioning it as needed.

Attentions:


- Avoid using sharp tools or excessive force.
- Tear the white paper gently by hand.
- Do not touch the surface of the lampshade.

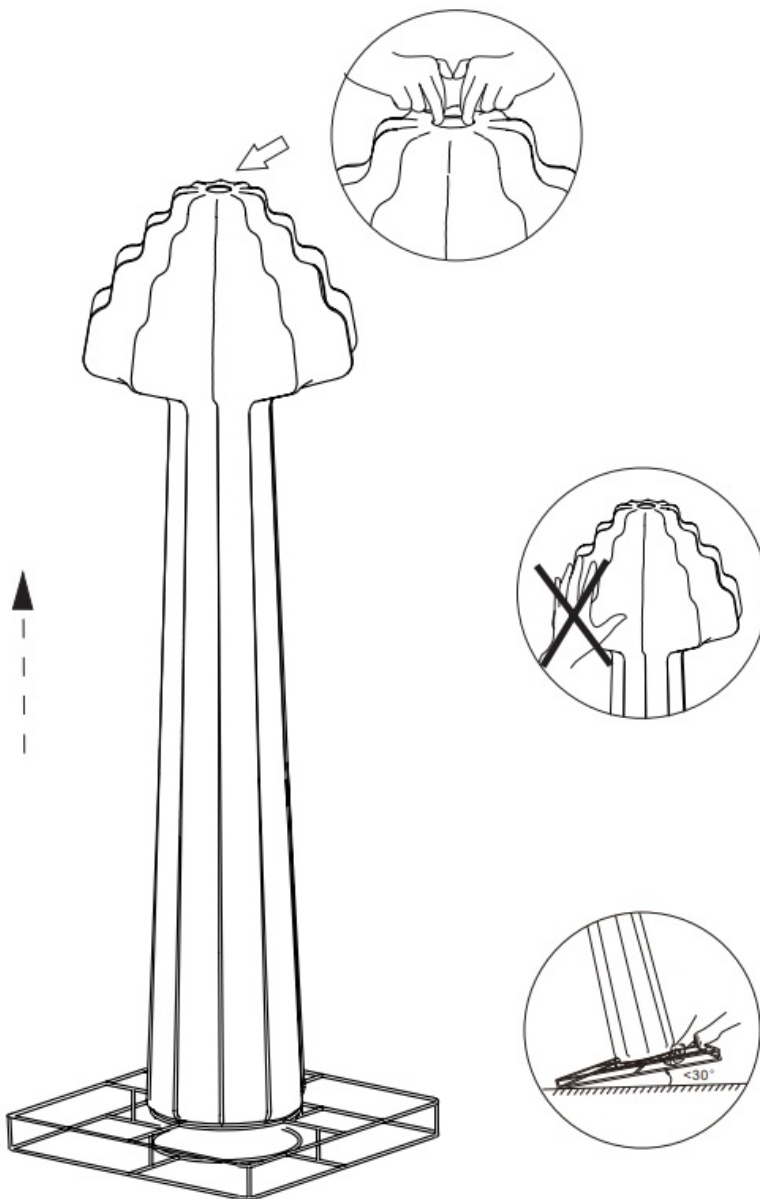

Install the top cover and connect the power cord.

Attentions

- Avoid using sharp tools or excessive force.
- Tear the white paper gently by hand.
- Do not touch the surface of the lampshade.

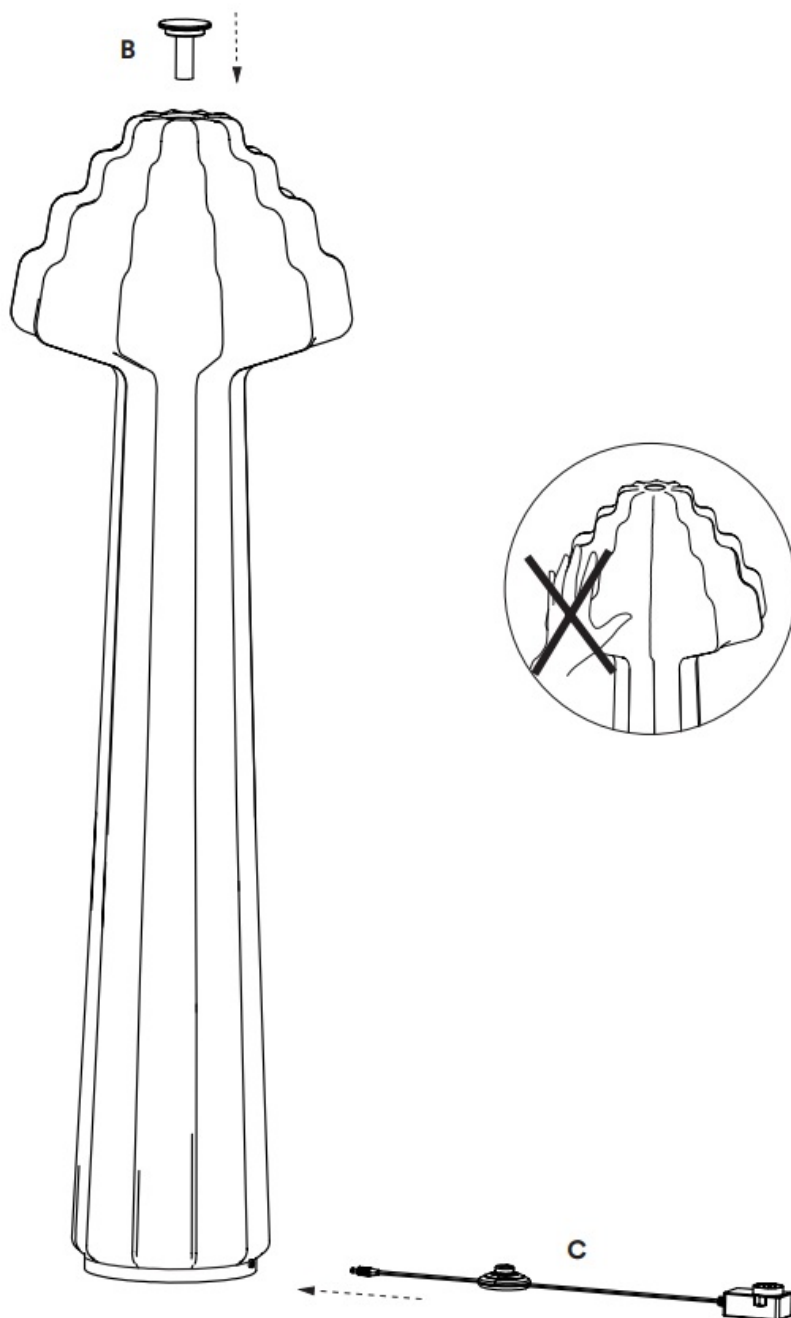

GENERAL INSTRUCTIONS

Please note the information contained in these instructions and save this manual, also when the lamp is already mounted.

Safety precautions:

- Electrical connections may only be carried out by qualified staff.
- The manufactures do not accept responsibility for injuries or defects caused by

improper use of this lamp.

- Attention! Before starting the installation, disconnect the power by turning off the circuit breaker, or by removing the fuse at the fuse box.
- Mind to use this lamp for its predetermined function. For example don't mount indoor lamps in outdoor areas.
- Please check all components are complete before installing.
- Don't cover the lamp.
- Don't connect the lamp to power and don't switch it on when it's in packing.
- Bulbs and transformers get very hot during operating. At improper use there is the risk of fire.
- If the external flexible cable or cord is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- Do not mount the lamp on wet or conducting background.
- Make sure that the cables or cords don't get damaged during installation.
- The given main voltage (100-240V ~ 50/60Hz) shall not be exceeded.
- Plug and connection elements must be free of tensile strength and torsion force.
- Don't touch bulbs with bare hands.
- If the product is damaged, please contact Normann Copenhagen for replacements.

Maintenance instructions:

- Before cleaning, disconnect the power by turning off the circuit breaker, or by removing the fuse at the fuse box.
- Mind to clean the surfaces of lamp only.
- Wetness shouldn't get in terminal box or to any conducting part.
- Before you start to clean let it cool down for 10 minutes!
- Cleaning with a soft dry cloth only

Advice for environmental care:

Please don't dispose of this article in normal domestic waste after the end of its lifecycle. Instead, we advise that you dispose of it according to local environmental laws for waste disposal. The materials are recyclable according to their specifications. With the correct

recycling of these materials, you can make a significant contribution to environmental protection. Ask your local authority for next staging area.

CE marking:

By affixing the CE marking to a product, a manufacturer declares that the product meets all the legal requirements for CE marking and can be sold throughout the European Economic Area (EEA).



Documents / Resources

	normann PHANTOM Floor Lamp [pdf] Instruction Manual PHANTOM Floor Lamp, PHANTOM, Floor Lamp, Lamp
---	--

References

- [User Manual](#)

📁 Floor Lamp, lamp, NORMANN, Phantom, PHANTOM Floor
■ NORMANN Lamp

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.