NORTEK WS15Z-1 GoControl In Wall Three-Way Switch





# NORTEK WS15Z-1 GoControl In Wall Three Way Switch **Instruction Manual**

Home » NORTEK » NORTEK WS15Z-1 GoControl In Wall Three Way Switch Instruction Manual



### **Contents**

- 1 NORTEK WS15Z-1 GoControl In Wall Three-Way
- Switch
- 2 WS 1 SZ-1 WALL MOUNTED SWITCH
- **3 INSTALLATION**
- **4 BASIC OPERATION**
- **5 ADVANCED OPERATION**
- **6 CONFIGURATION**
- **7 SPECIFICATIONS**
- **8 REGULATORY INFORMATION**
- 9 WARRANTY
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts



NORTEK WS15Z-1 GoControl In Wall Three-Way Switch




- NOTE: This unit must be added to the Network only where it will be permanently installed.
- The proper operation of this node in the mesh network is dependent on it knowing its location concerning other nodes.
- You cannot "test bench" configure this unit, and then install it.

# WS 1 SZ-1 WALL MOUNTED SWITCH

- The GoControl<sup>™</sup> family of Z-Wave® certified wireless lighting products (smart LED fixtures, bulbs, switches, dimmers, outlets, plug-in modules, and thermostats) and security devices (alert sounder, motion sensor, and door/ window sensor) bring a new level of intelligent wireless capability to commercial and residential environments.
- The Z-Wave wireless protocol is an international wireless standard for remote home automation, security, and other applications. This product can be included and operated in any Z-Wave network with other Z-Wave-certified devices from other manufacturers and/or other applications. All non-battery-operated nodes within the network will act as repeaters regardless of vendor to increase the reliability of the network.
   GoControl Z-Wave products are easy to install, are Z-Wave certified, and allow dealers to create an integrated wireless network with nearly limitless expansion and interoperability with security, energy management, home entertainment, appliances, and more.
- DANGER! SHOCK HAZARD. Read and understand these instructions before installing. This device is intended
  for installation under the National Electric Code and local regulations in the United States, or the Canadian
  Electrical Code and local regulations in Canada. It is recommended that a qualified electrician perform this

installation. Make sure the load controlled by the switch does not exceed 1800 watts. For indoor use only. Retain instructions for future use.

### INSTALLATION

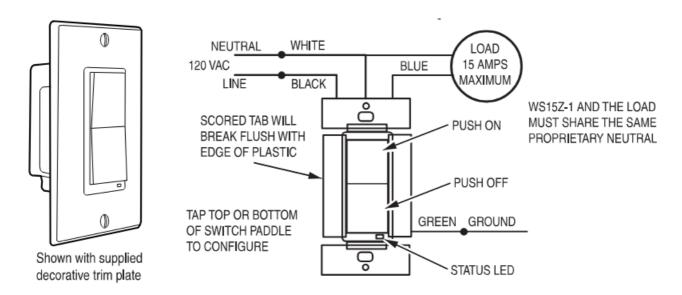

- Wire this switch in place of a current wall switch according to the diagram above. When used, WS15Z-1s are required to be wired to the same line {or neutral) which is also wired to the load being controlled, and not wired to any other neutral.
- If multiple neutrals are tied together in one box, separate the neutrals to preserve the integrity of the WS15Z-1 circuit.
- CAUTION! Do not wire the unit "live" (with power on the circuit).

### Adding to a network:

Refer to your Controller operating instructions to add this switch under the command of the Wireless Controller.

- With your Controller in Discovery or Add Mode, tap the switch once for Network Wide Inclusion. Tap twice for Standard Inclusion.
- 2. You should see an indication on your Controller that the "device was added" to the network and the LED will stop blinking.
- 3. The device will appear in the list of Switches. It should display as a switch. If the Controller/Gateway shows the addition failed, repeat Steps 1-3.

### Removing from a network:

The WS15Z-1 can be removed from the network by the Controller/Gateway. Refer to the Controller operating instructions for details.

- 1. Set the Controller into Removal Mode and follow its instructions to delete the WS15Z-1 from the Controller.
- 2. Remove the switch by tapping the paddle 2 times.
- 3. You should see an indication on your Controller that the "device was removed" from the network.

# **BASIC OPERATION**

# (Local Control)

- The switch paddle on the WS15Z-1 allows the user to.
- Turn the attached load on or off.
- Tapping the top of a switch turns the load attached ON.
- Tapping the bottom of a switch turns the load attached OFF.

### **LED Indication**

To act as a night light, the LED on the WS15Z-1 will turn ON when the load attached is OFF. However, the LED
can be user-configured to turn ON, when the load attached is ON, if so desired. See the "CONFIGURATION"
section.

### **Remote Control**

• The WS15Z-1 will respond to BASIC and BINARY commands that are part of the Z-Wave system. Refer to your Controller's instructions as to whether your Controller can transmit those commands.

### **ADVANCED OPERATION**

#### All On/ All Off

- The WS15Z-1 supports the ALL ON/ ALL OFF commands. The WS15Z-1 can be set to respond to ALL ON and ALL OFF commands in four different ways.
- Refer to your Controller for information on how to set the WS15Z-1 to operate in the manner you desire. Some Controllers may be only able to set certain settings of ALL ON/ALL OFF response.
- The four different ways the WS1 SZ-1 can be set up to respond to ALL ON and ALL OFF commands are.
- 1. Respond to the ALL ON or the ALL OFF command.
- 2. Responds to ALL OFF command but will not respond to ALL ON command.
- 3. Responds to ALL ON command but will not respond to ALL OFF command.
- 4. Respond to the ALL ON and the ALL OFF command.

# **CONFIGURATION**

- The WS15Z-1 supports the Configuration command.
- Each unit can be configured to operate slightly differently than how it works when you first install it.
- Using the Configuration command you can configure the following.

# **Night Light**

By default, the LED on the WS15Z-1 will turn OFF when the load attached is turned ON. To make the LED turn ON when the load attached is turned ON, set Parameter 3 to a value of 1.

Parameter	Length	Valid Values	Configuration Option
3	1 Byte	0	LED OFF when the load is on, and ON when the load is off (default - night lite mode)
		1	LED ON when the load is on, and OFF when the load is off
		2	LED is always on
		3	LED is always off
		4	LED blinks during RF transmissions from or to the device

### **Invert Switch**

To change the top of the switch to OFF and the bottom of the switch to ON, set Parameter 4 to a value of 1.

Parameter	Length	Valid Values	Configuration Option
4	1 Byte	0	Top of switch is ON, bottom of switch is OFF (default)
		1	Bottom of switch is ON, top of switch is OFF

# **Resetting to Defaults**

- Each configuration Parameter can be set back to its default setting by setting the default bit in the Configuration Set command.
- See your Controller's instructions on how to do this (and if it supports it).
- All configuration commands will be reset to their default state when the WS15Z-1 is excluded from the Z-Wave network by using the Controller to reset the node.

### **SPECIFICATIONS**

• Power: 120 VAC, 60 Hz

• Signal (Frequency): 908.42 MHz

Maximum Load: Resistive: 15 amps (1800 watts) maximum, 120 VAC

• Motor: 1/2 H.P. maximum, 120 VAC

Incandescent: 600W maximum, 120 VAC Up to 130 feet line of sight

• Range: Z-Wave® is a registered trademark of Sigma Designs and its subsidiaries in the United States and other countries.

### **REGULATORY INFORMATION**

The WS15Z-1 is certified to comply with applicable FCC and IC rules and regulations governing RF and EMI emissions. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interterence
- 2. This device must accept any interference received, including interference that may cause undesired operation.

# **FCC Notice**

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interterence in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interterence to radio communications. However, there is no guarantee that interterence will not occur in a particular installation. If this equipment does cause harmful interterence to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interterence by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- · Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician to help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

#### **IC Notice**

This Class B digital apparatus complies with Canadian ICES-003

This device complies with the Industry Canada license-exempt ASS standard(s). Operation is subject to the following two conditions:

- 1. this device may not cause interterence,
- this device must accept any interterence, including interterence that may cause undesired operation of the device.

### WARRANTY

### What is Covered?

- Nortek Security & Control ("NS&C") warrants to consumers who purchase this product for personal, family, or
  household purposes new from NS&C directly or from an authorized NS&C dealer, that the product will be free
  from defects in materials and workmanship for (1) year from the date of purchase. This warranty only applies if
  the product is installed at a residence in the 50 United States or District of Columbia, and only at the sne of the
  original installation.
- It is not transferable. This warranty is not extended to resellers.
- If a defect exists, NS&C will have you ship the defective part or product to us, and we will, at our option, either repair or replace n.
- This warranty does not cover defects or damages caused by improper handling, maintenance, storage, installation, removal or re-installation, misuse, non-factory authorized modification or alteration, use of incompatible accessories, electrical power problems or surges, impact by foreign objects, accident, fire, acts of God, normal wear and tear or shipping damage other than a shipment from NS&C.
- Note that all NS&C products are designed to be installed, removed, and serviced by trained individuals or professionals.
- Keep your original sales receipt as you will be required to obtain warranty service.
- This warranty shall not be extended or restarted upon receipt of any repaired or replacement part or product

under this warranty. No person is authorized to extend or otherwise modify this warranty.

## **How do I Obtain Warranty Service?**

To obtain warranty service, email our Returns Department at <a href="mailto:returns@nortek.com">returns@nortek.com</a>. induce your name, address, telephone number, the model number of your product, a copy of your original sales receipt, and a description of the problem. Unless we need to discuss the situation further with you, you will be emailed a Return Authorization Number and shipping instructions. If we need to discuss the situation further with you, we will call or email you. NS&C may require troubleshooting on the installed product before a Return Authorization Number is issued. Anything shipped to us without a Return Authorization Number will be automatically returned unopened. You are responsible for the charges for shipment to us unless you are a California resident.

#### Limitations

- THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL NOT EXCEED THE WARRANTY PERIOD PROVIDED HEREIN.
- Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
- NS&C SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE BREACH OF ANY WRITTEN OR IMPLIED WARRANTY.
- Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
- This warranty gives you specific legal rights, and you may also have other legal rights which vary from State to State.

## **IMPORTANT**

- Radio controls provide a reliable communications link and fill an important need in portable wireless signaling.
- However, there are some limitations which must be observed.
- For U.S. installations only: The radios are required to comply with FCC Rules and Regulations as Part 15 devices.
- As such, they have limited transmitter power and therefore limited range.
- A receiver cannot respond to more than one transmitted signal at a time and may be blocked by radio signals that occur on or near their operating frequencies, regardless of code settings.
- Changes or modifications to the device may void FCC compliance.
- Infrequently used radio links should be tested regularly to protect against undetected interterence or fault.
- A general knowledge of radio and its vagaries should be gained before acting as a wholesale distributor or dealer, and these facts should be communicated to the ultimate users.
- NORTEK SECURITY & CONTROL
- USA & Canada 800-421-1587 & 800-392-0123
- 760-438-7000 Toll Free FAX 800-468-1340
- www.nortekcontrol.com

# **Documents / Resources**



NORTEK WS15Z-1 GoControl In Wall Three Way Switch [pdf] Instruction Manual 10008577X5, WS15Z-1, WS15Z-1 GoControl In Wall Three Way Switch, WS15Z-1, GoControl In Wall Three Way Switch, In Wall Three Way Switch, Wall Three Way Switch, Three Way Switch, Way Switch

# References

• User Manual

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.