



NOSTALGIA CLR B3 PCRR Retro Blender Instructions

[Home](#) » [Nostalgia](#) » NOSTALGIA CLR B3 PCRR Retro Blender Instructions 

NOSTALGIA™

PRODUCTS



CLRB3PCRR
RETRO BLENDER
Instructions and Recipes
SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz

300 Watts, ETL Approved

THIS PRODUCT IS FOR USE IN 120V AC OUTLETS ONLY.



Contents

- [1 IMPORTANT SAFEGUARDS](#)
- [2 INTRODUCTION](#)
- [3 PRODUCT REGISTRATION](#)
- [4 PARTS & ASSEMBLY](#)
- [5 HOW TO OPERATE](#)
- [6 HELPFUL TIPS](#)
- [7 CLEANING & MAINTENANCE](#)
- [8 RECIPES](#)
- [9 RESTAURANT-STYLE SALSA](#)
- [10 SWEET ASIAN SALAD DRESSING](#)
- [11 STRAWBERRY DAIQUIRI SLUSH WITH HONEYDEW MELON](#)
- [12 APRICOT SMOOTHIE](#)
- [13 KAHLUA COLADA](#)
- [14 RETURNS & WARRANTY](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)
- [16 Related Posts](#)

IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance. When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
5. Close supervision is necessary when any appliance is used by or near children.

6. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
7. Unplug from outlet when not in use, before removing parts and before cleaning.
Allow to cool before putting on or taking off any parts, and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
9. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
10. DO NOT use the appliance for other than its intended use.
11. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
14. NEVER leave unit unattended while in use or when plugged into an outlet.
15. Extreme caution must be used when moving an appliance containing hot food.
16. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.



When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions before operating this appliance.
2. NEVER put fingers or utensils into feed or discharge areas.
3. Keep hands and utensils out of the container while blending to reduce the risk of severe personal injury or damage to the RETRO BLENDER. To protect against electrical shock do not immerse cord, plug or main unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before removing parts for cleaning.
6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance
 1. to the nearest repair shop for examination or repair.
 2. The manufacturer does not recommend the use of accessory attachments. Use of attachments may cause injuries.
 3. Blades are sharp. DO NOT touch.
 4. DO NOT let the cord touch hot surfaces.
 5. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
 6. Extreme caution must be used when moving this appliance with liquids inside.
 7. This unit must be on a level surface to operate properly.
 8. DO NOT use this appliance for other than its intended use.
 9. DO NOT leave the unit unattended while in use or when plugged into an outlet.
10. Check inside of the Ice Shaving Chamber for foreign objects prior to use.
11. A short power-supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.

12. An extension cord can be used if care is exercised in use.
13. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
14. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
15. Always operate the RETRO BLENDER with cover in place.
16. Make sure the glass Pitcher with blender base is properly attached before inserting the pitcher into the base unit.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the RETRO BLENDER from Nostalgia™! Now you can blend, crush and pulverize your way to great tasting fruit smoothies, soups, salsas and more! Features include:

- Powerful 300-watt blender to mix, blend and crush foods and liquids
- Chrome Control Lever
- The glass pitcher holds up to 1.5 liters
- Detachable glass pitcher and stainless steel blades for effortless cleaning
- Removable Blender Cap for adding ingredients
- Includes grinding cup and travel bottle with lids

PRODUCT REGISTRATION

WELCOME TO THE NOSTALGIA PARTY!

Do you love our product?

Give us your REVIEW, REGISTER your product and get entered to WIN PRIZES! You can also gain access to exclusive discounts, fresh new recipes, monthly specials & more!

- Visit the site you purchased the product from
- Go to the product page
- Leave a 5-star review!



If you aren't happy, please give us a chance to cure it!

Customer service:

(920) 347-9122 or visit our online contact form:

<https://nostalgiaproducts.com/pages/support>



<https://nostalgiaproducts.com/pages/warranty-information>

PARTS & ASSEMBLY

Parts

Your RETRO BLENDER comes fully assembled.

Before first use, thoroughly wash all parts by following the instructions under CLEANING AND MAINTENANCE.



HOW TO OPERATE

Now that your RETRO BLENDER is cleaned, making perfect frozen drinks is both easy and fun!

1. First, find a stable surface near an electrical outlet before starting. Make sure the cord is away from any water source and then plug cord into the electrical outlet.
2. Fill the Pitcher with all necessary ingredients and place the Pitcher Lid back on the Pitcher. It is best to begin by adding liquid ingredients, then following with solid ingredients. Additional ingredients may be added by twisting and lifting the Blender Cap

NOTE: Do not exceed MAX fill line marked on the Pitcher.

3. Place the Pitcher onto the Base and lock into place.
4. To start blending, pull down on the Control Lever on the side. CAUTION: Do not place hands into Pitcher with blender plugged in.
5. Allow ingredients to blend to the desired consistency, then let go of the Control Lever.
6. Wait until all moving parts have stopped and the unit is unplugged from the outlet before moving or cleaning the unit. Drink up and enjoy!

HELPFUL TIPS

Blending

To achieve the best results when blending:

- Always add liquid to the Pitcher before adding solid ingredients.
This will ensure that ingredients are uniformly mixed.
- Cut most foods into cubes approximately ½" to 1" to achieve a more uniform result.
- To dislodge food, use a rubber spatula or plastic spoon to help remove food lodged around the blade assembly. DO NOT use spatula until you have turned off the blender. Make sure spatula is not inside the Pitcher before blending.
- To prolong the life of your RETRO BLENDER, allow 5 minutes for unit to cool before using again.
- DO NOT overload the blender. If the motor stalls, turn the blender off immediately, unplug the unit, and remove a portion of the food, then continue.
- DO NOT leave unit running for an extended period of time. This is not a commercial unit. Odor
As with most modern blending appliances, this unit has a high RPM electric motor. It is common for the motor to emit a slight graphite or burning odor for the first few uses. After the first few uses, the odor will go away.

CLEANING & MAINTENANCE

Follow these steps to keep your RETRO BLENDER in great condition:

1. Begin by disconnecting the unit from the electrical outlet. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.
2. Thoroughly wash the Pitcher and Blender Cap in warm, sudsy water and thoroughly dry. DO NOT put the Base in water. To clean the Base, use a damp cloth to wipe the exterior and dry with a clean, dry towel.
3. Once washing and drying is complete, reassemble your RETRO BLENDER . It is now ready to use again.

RECIPES

Use your imagination to create many different drinks with your RETRO BLENDER. Below are several recipes to try. You can adjust the ingredients to your particular taste, or create your own – so have fun! If you have a recipe for a drink made for one, your RETRO BLENDER has the capacity for 52 oz. of drink – so remember to adjust your recipes accordingly.

1 SHOT = 1½ ounces (45 ml)

1 CUP = 5.33 Shots (239.85 ml)

RESTAURANT-STYLE SALSA

- 1 28-oz. can whole peeled plum tomatoes
- 1 small yellow onion
- 1-2 jalapeno peppers
- 3 cloves garlic
- 1 ½ tsp. ground cumin
- 1 ½ tsp. salt
- ¼ to 1 tsp. granulated sugar (optional)
- 1 to 2 handfuls cilantro leaves
- 3 Tbsp. lime juice

- ¾ cup corn (optional)
- ¾ cup canned black beans (optional)
- Corn chips, for serving

De-stem jalapeno peppers, then peel and roughly chop onion, jalapeno peppers, and garlic.

Add all ingredients (except corn and black beans) to the Pitcher, and Pulse until texture is as smooth as desired. Taste the salsa and tweak as you see necessary. Transfer salsa to a bowl and, if desired, add the corn and black beans. Serve with chips and enjoy!

SWEET ASIAN SALAD DRESSING

- ½ cup white wine vinegar
- ¼ cup olive oil
- ¼ cup fresh or frozen raspberries
- 2 tsp. honey

Place all ingredients in the Pitcher and blend until smooth.

STRAWBERRY DAIQUIRI SLUSH WITH HONEYDEW MELON

- 1 12-ounce Package of Frozen, Unsweetened Strawberries
- 1⅓ Cup Light Corn Syrup
- ⅔ Cup White Rum
- 3 Tablespoons of Fresh Lime Juice
- ½ Fresh Honeydew Melon, Seeded and Cut Into ½ Inch Cubes
- Lime Slices for Garnishing

Place all ingredients in the Pitcher and blend until desired consistency.
Serves four.

APRICOT SMOOTHIE

- 2 Ounces of White Rum
- 1 Ounce of Triple Sec
- 26 Ounces of Apricot Juice
- ½ Ounce of Cream

Place all ingredients in the Pitcher and blend until desired consistency.
Serves two.

KAHLUA COLADA

- 1½ Ounce of Kahlua
- ½ Ounce of Rum
- 2¼ Ounces of Coconut Cream
- 2¼ Ounces of Pineapple Juice

- ½ Ounce of Cream

Place all ingredients in the Pitcher and blend until desired consistency.
Serves one.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

RETRO BLENDER / CLRB3PCRR

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 9:00 AM and 4:00 PM, Monday through Friday, Central Standard Time. Distributed by:

Nostalgia Products LLC

1471 Partnership Dr.

Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122

Web: www.nostalgiaproducts.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaproducts.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

Product Warranty Terms

Nostalgia Products LLC (the "Company") hereby warrants that for a period of one (1) year from the date of original purchase, this product will be free of defects in material and workmanship under normal home use, provided that the product is operated and maintained in accordance with the operating instructions. As the sole and exclusive remedy under this warranty, the Company will at its discretion either repair or replace the product found to be defective, or issue a refund on the product during the warranty period. This warranty is only available to the original retail purchaser of the product from the date of initial retail purchase, and is only valid with the original sales receipt, as proof of purchase date is required to obtain warranty benefits. All warranty claims must be brought to the attention of the Company within the warranty period and no later than 30 days of the failure to perform. This warranty does not cover normal wear or damage caused by shipping, mishandling, misuse, accident, alteration, improper replacement parts, or other than ordinary household use. You may be required to return the product (with shipping prepaid by you) for inspection and evaluation. Return shipping costs are not refundable. The Company is not responsible for returns damaged or lost in transit. Unless otherwise specifically permitted by the operating instructions, this warranty applies to indoor household use only. In order to obtain service under this warranty, please contact the Company at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaproducts.com. Warranty valid only in USA and Canada.

This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose, which are hereby excluded to the extent permitted by law. In no event shall the Company be liable for any indirect, incidental, consequential, or special damages arising out of or in connection with this product or the use thereof. Some states, provinces or jurisdictions do not permit the exclusion or limitation of incidental or consequential damages, so the foregoing exclusion or limitation may not apply to you.

This warranty does not apply to re-manufactured merchandise.

Please read the operating instructions carefully. Failure to comply with the operating instructions will void this warranty.

For more information, visit us online at www.nostalgiaproducts.com.


Like us on Facebook at www.facebook.com/NostalgiaElectrics.

Follow our boards on Pinterest at www.pinterest.com/nostalgiaelctrx.

Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.

**All products are trademarks of Nostalgia Products LLC.
Worldwide design & utility patented or patents pending.**

Documents / Resources

	<p>NOSTALGIA CLRB3PCRR Retro Blender [pdf] Instructions CLRB3PCRR, Retro Blender, CLRB3PCRR Retro Blender</p>
---	---

References

- [N Nostalgia Products | Fun and Entertaining Products with a Retro Flair](#)
- [N Support – Nostalgia](#)