



NOSTALGIA NMSST1 Series MyMini Single Slice Toaster Instruction Manual

[Home](#) » [Nostalgia](#) » NOSTALGIA NMSST1 Series MyMini Single Slice Toaster Instruction Manual 

Contents

- [1 NOSTALGIA NMSST1 Series MyMini Single Slice Toaster](#)
- [2 SAFETY](#)
 - [2.1 Appliance Specifications](#)
- [3 IMPORTANT PRECAUTIONS](#)
- [4 INTRODUCTION](#)
- [5 PARTS & ASSEMBLY](#)
- [6 HOW TO OPERATE](#)
- [7 HELPFUL TIPS](#)
- [8 CLEANING & MAINTENANCE](#)
- [9 RETURNS & WARRANTY](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

NOSTALGIA™

NOSTALGIA NMSST1 Series MyMini Single Slice Toaster



SAFETY

Your safety and the safety of others are very important

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

- This is the safety alert symbol.
- This symbol alerts you to potential hazards that can cause serious injury to you and others.
- All safety messages will follow the safety alert symbol.
- All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications

- 120 Volts, 60 Hertz
- 500 Watts

THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY

Refer to www.nostalgiaproducts.com/user-manuals/ for the most updated manual.

IMPORTANT PRECAUTIONS

1. NEVER immerse appliances in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER leave appliances unattended while in use.

5. NEVER place anything other than what is being cooked in or on the appliance.
6. Unplug the unit from the outlet when not in use, before removing parts, and before cleaning.
7. DO NOT operate this appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. nor if the appliance ever malfunctions. Return the appliance to the nearest repair shop for examination, repair, or adjustment.
8. DO NOT place appliances in a dishwasher.
9. Keep out of reach of children.
10. This appliance is NOT A TOY.
11. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
12. Young children should be supervised while in the proximity of the appliance to ensure that they do not play with it.
13. Do not touch hot surfaces. Use handles or knobs.
14. DO NOT let the cord hang over the edge of the table or counter, or touch hot surfaces.
15. Extreme caution must be used when moving appliances containing hot oil or other hot liquids.
16. Always attach the plug to appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

Read all instructions before operating this appliance

17. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
18. Close supervision is necessary when any appliance is used by or near children.
19. Unplug from outlet when not in use, before removing parts and before cleaning.
20. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
21. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
22. DO NOT use outdoors.
23. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
24. DO NOT use the appliance for other than its intended use.
25. An appliance that is plugged into an outlet should not be left unattended while in operation.
26. Check appliance for the presence of foreign objects prior to use.
27. DO NOT attempt to stick any utensils or other objects into the toaster while the appliance is plugged in.
28. A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
29. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
30. If a longer detachable power-supply cord or extension cord is used:
 - The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
 - The cord should be arranged so that it will not drape over the countertop where it can be pulled on by children or tripped over unintentionally.
31. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock,

this plug is intended to fit into a polarized outlet only one way. If the plug is intended to fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

32. Oversized foods, and metal foil packages. or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
33. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like when in operation.
34. DO NOT attempt to dislodge food when the toaster is plugged in.
35. DO NOT operate unattended.
36. When heating toaster pastries, always use the lightest toast color setting.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the MYMINITM SINGLE SLICE TOASTER from Nostalgia™! Designed as a great-looking retro piece, it's a fun and convenient way to make the perfect toast or bagel every time!

Features Include:

- Single wide slot for toasting bread or bagel halves
- Easy-to-use and easy-to-clean!

PARTS & ASSEMBLY

PARTS

Your MYMINITM SINGLE SLICE TOASTER comes fully assembled.



BROWNING CONTROL DIAL:

From less brown to more brown.



CRUMB TRAY



HOW TO OPERATE

- Place the MYMINITM SINGLE SLICE TOASTER on a stable surface near an electrical outlet before starting.
- Always make sure that the cord is away from any water source.
- Plug the appliance into an electrical socket.
- Place one piece of bread into the Toasting Slots.
- Select desired heat setting (1 = Lightest to 5 = Darkest).

NOTE: The BAGEL function

- Press the lever down to start the cooking cycle.
- When cooking has been completed, the bread will automatically pop up.
- To shorten the cooking time, simply turn the Browning Control Knob to a lighter setting.

- Unplug the appliance and allow the unit to cool completely. Once the unit is cool, remove and clean Crumb Tray.

By following these simple instructions, your MYMINITM SINGLE SLICE TOASTER will be fun for friends, family, and kids of all ages!

HELPFUL TIPS

TOASTING

The MYMINITM SINGLE SLICE TOASTER is designed to use only one piece of bread or two halves of one bagel at a time. DO NOT force bread into toasting slots. All pieces of bread are not the same; therefore you will need to adjust the variable heat controller accordingly. Room-temperature bread will cook more quickly than bread just removed from the refrigerator.

BURNING/SMOKING

If the machine is burning or smoking during cooking, unplug the machine to end the cooking cycle. Smoking may also be caused by excess crumbs stuck inside the machine. To prevent smoking, make sure to empty and clean Crumb Tray after each use.

CLEANING & MAINTENANCE

Make sure the unit is unplugged before cleaning. Allow all parts to COOL to the touch.

To prolong the life of your MYMINITM SINGLE SLICE TOASTER, please follow these simple instructions for maintenance. Never place the appliance in a dishwasher.

- Make sure the unit is completely cooled and unplugged before storing or cleaning.
- Do not try to remove bread if it gets jammed inside the toaster slots without first unplugging the unit.
- Clean outer surface with a soft damp cloth when it is unplugged and completely cooled.
- Dry all parts with a soft, non-abrasive towel or cloth.
- Do not operate without at least one piece of bread in place.
- Any other servicing should be performed by an authorized representative.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

MYMINITM SINGLE SLICE TOASTER SERIES

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 9:00 AM and 4:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products LLC

1471 Partnership Dr.

Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122

Web: www.nostalgiaproducts.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaproducts.com and fill out the Customer Service Inquiry form and click the Submit button. A representative will contact you as soon as possible.

Product Warranty Terms

Nostalgia Products LLC (the "Company") hereby warrants that for a period of one (1) year from the date of original purchase, this product will be free of defects in material and workmanship under normal home use, provided that the product is operated and maintained in accordance with the operating instructions. As the sole and exclusive remedy under this warranty, the Company will at its discretion either repair or replace the product found to be defective, or issue a refund on the product during the warranty period. This warranty is only available to the original retail purchaser of the product from the date of initial retail purchase, and is only valid with the original sales receipt, as proof of purchase date is required to obtain warranty benefits.

All warranty claims must be brought to the attention of the Company within the warranty period and no later than 30 days of the failure to perform. This warranty does not cover normal wear or damage caused by shipping, mishandling, misuse, accident, alteration, improper replacement parts, or other than ordinary household use. You may be required to return the product (with shipping prepaid by you) for inspection and evaluation. Return shipping costs are not refundable. The Company is not responsible for returns damaged or lost in transit. Unless otherwise specifically permitted by the operating instructions, this warranty applies to indoor household use only. In order to obtain service under this warranty, please contact the Company at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaproducts.com. Warranty valid only in USA and Canada.

This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose, which are hereby excluded to the extent permitted by law. In no event shall the Company be liable for any indirect, incidental, consequential, or special damages arising out of or in connection with this product or the use thereof. Some states, provinces, or jurisdictions do not permit the exclusion or limitation of incidental or consequential damages, so the foregoing exclusion or limitation may not apply to you.

This warranty does not apply to re-manufactured merchandise

Please read the operating instructions carefully. Failure to comply with the operating instructions will void this warranty.


For more information, visit us online at www.nostalgiaproducts.com

- Like us on Facebook at www.facebook.com/NostalgiaElectrics.
- Follow our boards on Pinterest at www.pinterest.com/nostalgiaelctrx.
- Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.




Make every day a party!

Visit www.nostalgiaproducts.com for more fun products.

Documents / Resources

<div><div>NOSTALGIA™</div><div></div><div><div>STYLISH & FUNCTIONAL</div><div>MyMini™ Single Slice Toaster Café, toast & more delicious MyMini™ toasters & accessories available MyMini™</div><div>100% Stainless Steel Manual Model NMSST1</div></div></div>	<p>NOSTALGIA NMSST1 Series MyMini Single Slice Toaster [pdf] Instruction Manual</p> <p>NMSST1 Series MyMini Single Slice Toaster, NMSST1 Series, MyMini Single Slice Toaster, Single Slice Toaster, Slice Toaster, Toaster</p>
--	--

References

-  [Hosted by one.com](#)
-  [DeepL Translate: The world's most accurate translator](#)
-  [Nostalgia Products | Fun and Entertaining Products with a Retro Flair](#)