

Nostalgia BST3RR 3-in-1 Breakfast Station



# Nostalgia BST3RR 3-in-1 Breakfast Station Instruction Manual

[Home](#) » [Nostalgia](#) » Nostalgia BST3RR 3-in-1 Breakfast Station Instruction Manual 

## Contents

- [1 Nostalgia BST3RR 3-in-1 Breakfast Station](#)
- [2 IMPORTANT SAFEGUARDS](#)
  - [2.1 ADDITIONAL IMPORTANT SAFEGUARDS](#)
- [3 INTRODUCTION](#)
- [4 HOW TO OPERATE](#)
- [5 CLEANING & MAINTENANCE](#)
- [6 RECIPES](#)
- [7 WARRANTY](#)
- [8 FREQUENTLY ASKED QUESTIONS](#)
- [9 VIDEO – PRODUCT OVERVIEW](#)
- [10 References](#)
- [11 Related Posts](#)

# NOSTALGIA



**Nostalgia BST3RR 3-in-1 Breakfast Station**



All products are trademarks of Nostalgia Products LLC. Worldwide design & utility patented or patents pending. © 2019 Nostalgia Products LLC. [www.nostalgiaproducts.com](http://www.nostalgiaproducts.com)(rev. 08/09/19 TK)

## SAFETY

Your safety and the safety of others is very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

-  This is the safety alert symbol.
-  This symbol alerts you to potential hazards that can cause serious injury to you and others.
- All safety messages will follow the safety alert symbol.
- All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury and tell you what can happen if the instructions are not followed.

**Appliance Specifications:** 120 Volts, 60 Hertz, 1500 Watts

HOUSEHOLD USE ONLY THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY. Refer to [www.nostalgiaproducts.com/user-manuals/](http://www.nostalgiaproducts.com/user-manuals/) for the most updated manual.

## IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.

**When using electrical appliances, basic safety precautions should always be followed, including:**

1. Read all instructions before operating this appliance.

2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
5. Close supervision is necessary when any appliance is used by or near children.
6. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
7. Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
9. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
10. DO NOT use the appliance for other than its intended use.
11. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
14. NEVER leave unit unattended while in use or when plugged into an outlet.
15. Extreme caution must be used when moving an appliance containing hot food.
16. Always attach the plug to the appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.



#### **ADDITIONAL IMPORTANT SAFEGUARDS**

#### **Operating Safety Precautions**

1. DO NOT touch hot surfaces. Use handles or knobs.
2. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
3. Scalding may occur if the lid of the coffee maker is opened during the brewing cycle.
4. The container is designed for use with this appliance. It must never be used on a range top.
5. DO NOT set a hot container on a wet or cold surface.
6. DO NOT use a cracked container or a container with a loose or weakened handle.
7. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electrical shock.
8. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation.  
DO NOT store any item on top of the appliance when in operation.
9. Extreme caution should be exercised when using containers constructed of other than metal or glass.
10. DO NOT store any materials, other than manufacturers recommended accessories, in this oven when not in use.
11. DO NOT place any of the following materials in the oven: paper, cardboard, plastic, and the like.
12. DO NOT cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
13. Use extreme caution when removing the tray or disposing of hot grease.
14. Do not clean the container with cleansers, steel wool pads, or other abrasive material.

15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts causing a risk of electric shock.
16. **WARNING:** Risk of Fire or Electric Shock. Do not remove this cover. No user-serviceable parts inside. Repair should be done by authorized service personnel only.
17. **Caution:** to reduce the risks of fire or shock, do not operate the unit unless the removable top tray is in place.

### **Instructions for the Electrical Cord and Plug**

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
2. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
3. If a long detachable power-supply cord or extension cord is used:
  - Extension cords can be used if care is exercised in their use.
  - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
  - When using a longer cord or extension cord, make sure that the cord does not drape over a countertop or tabletop where it can be pulled on or tripped over unintentionally.
4. The manufacturer does not recommend using this machine in countries that do not support 120V AC even if a voltage adapter, transformer, or converter is in use.


### **SAVE THESE INSTRUCTIONS!**

### **INTRODUCTION**


Thank you for purchasing the 3-IN-1 BREAKFAST STATION from Nostalgia™! The 3-IN-1 BREAKFAST STATION allows you to make hot and delicious breakfast meals and coffee all in one unit! Use the included toaster oven for toasting bread, buns, bagels and more. Grill pancakes, sausages, bacon, or eggs on the griddle while your bread is toasting and coffee is brewing! With the 3-IN-1 BREAKFAST STATION, simple meals are ready in minutes!

### **PARTS & ASSEMBLY**

**PARTS** Your 3-IN-1 BREAKFAST STATION requires little assembly.

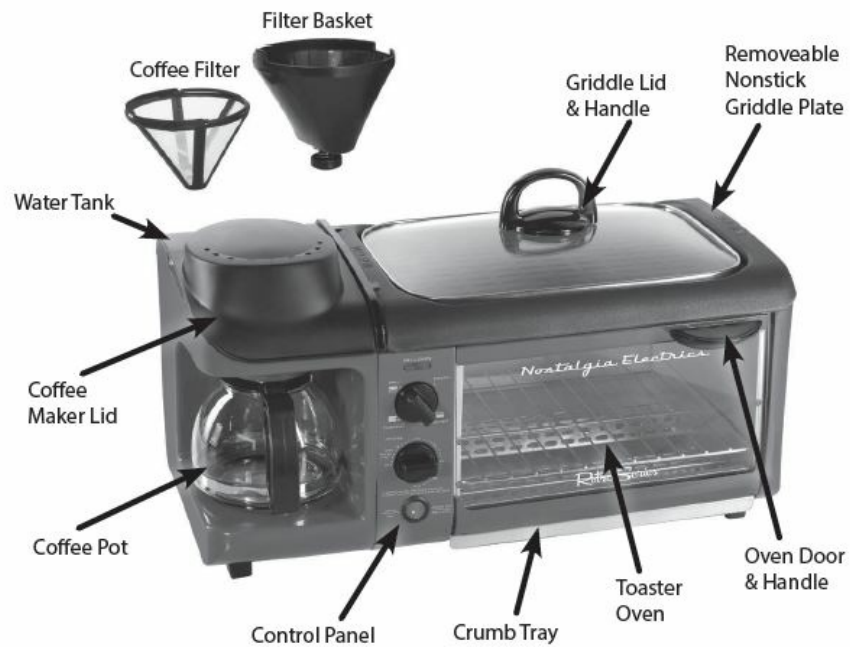

### For use in Toaster Oven:

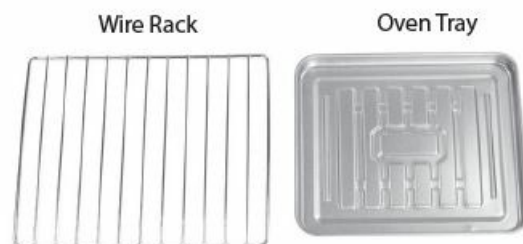


### COFFEE MAKER

1. Place Coffee Filter inside of Filter Basket.
2. Lift Coffee Maker Lid
3. Place both inside of Coffee Maker.


 
## CONTROL PANEL

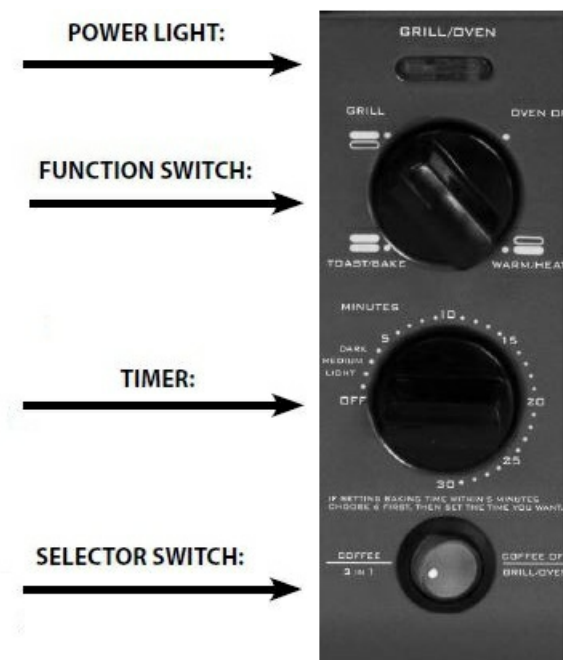

- **POWER LIGHT:**

Oven with Grill indicator

- **FUNCTION SWITCH:**

**Turn dial to the desired setting:** GRILL, TOAST/BAKE, WARM/ HEAT, or OVEN OFF.

- **TIMER:**

Turn the knob clockwise to switch on the appliance and then set the desired amount of cooking time (0-30 minutes). When the set time is reached, a chime bell will be heard and the appliance will shut off automatically.

- **SELECTOR SWITCH:**

Turn the Selector Switch to the desired setting: COFFEE / 2 in 1, or COFFEE OFF / Grill/Oven.

- To switch off the oven, turn the Timer to "OFF"
- To switch off the coffee maker, turn the Selector Switch to "COFFEE OFF"

## HOW TO OPERATE

- Before first use, remove all accessories including Coffee Pot, Coffee Filter, Nonstick Griddle Plate and Trays and wash with clean water to remove any debris. Dry parts thoroughly and reassemble.
- Place the 3-IN-1 BREAKFAST STATION on a stable surface near an electrical outlet before using to cook or brew coffee.
- Always make sure that the cord is away from any water source.
- Plug the cord into an electrical socket.

## TOASTER OVEN

1. For optimal Bake performance, turn the Function Switch to Bake and preheat appliance for 4-5 minutes.
2. Once appliance is preheated, turn the Function Selector to the desired position.
  - **Reheat-Warm Mode:** Only the lower heating element will heat up to bake, which allows you to reheat food without roasting it.
  - **Bake-Toast Mode:** Both heating elements heat up to bake and roast the food.
  - **Broil-Grill Mode:** Only the upper heating element heats up in order to roast the food, or heat up the Nonstick Griddle Plate.
3. Place the food to be cooked on the Wire Rack. If food contains oil, grease or juices, make sure that Oven Tray is in place on Wire Rack first.
4. Turn the Timer to the required cooking time. The pilot light will come on, indicating that the oven is heating.
5. If you are cooking food for less than 5 minutes, first turn the Timer past the 5 minute mark and then back to the desired cooking time.
6. A bell will ring to signal the end of the cooking cycle. The appliance will switch off automatically.
7. When cooking cycle has finished, turn the Function Selector to OVEN OFF, open the Oven Door and remove the food from the Wire Rack and/or Oven Tray using an oven mitt or pot holder.
8. Unplug appliance when finished and let it cool completely.

## NONSTICK GRIDDLE

1. Apply a thin coat of vegetable oil to surface of Nonstick Griddle Plate to protect finish.
2. Turn Function Selector to Broil-Grill mode to begin heating Nonstick Griddle Plate. Allow to preheat for 3-5 minutes.
3. When preheated, begin to cook breakfast meat, eggs, silver dollar pancakes or desired food item. Cooking time will vary depending on the items being cooked.
4. When finished cooking, turn Function Selector to OVEN OFF position and remove food using a rubber spatula.
5. NEVER use a metal spatula, fork or other utensil to remove food, as this could scratch and damage the nonstick coating.
6. Unplug appliance and allow to cool completely before cleaning or removing Nonstick Griddle Plate.

## COFFEE MAKER

1. Put desired amount of coffee grounds into Coffee Filter and place Coffee Filter inside of Filter Basket.
2. Pour desired amount of clean, cold water into the Water Tank. Never exceed the maximum level indicated.

3. Make sure that Coffee Pot is on burner.
4. Close Coffee Maker Lid and flip Selector Switch to the COFFEE/3 in 1 position.
5. While coffee is brewing, DO NOT open Coffee Maker Lid as this could cause scalding.
6. When coffee has finished brewing, flip Selector Switch to COFFEE OFF position.
7. Unplug appliance when finished and allow hot plate beneath Coffee Pot to cool completely before cleaning.
8. Coffee maker is equipped with a non-drip valve that will automatically operate to stop drops of coffee dripping onto the hotplate. However, if any coffee splashes or drips onto the hot plate beneath the Coffee Pot, clean it with a dry, non-abrasive cloth after appliance has cooled completely.

## **HELPFUL TIPS**

### **BURNING/SMOKING**

- If the machine is burning or smoking during cooking, turn all knobs and switches to the OFF position to end the cooking cycles.
- Smoking may also be caused by excess crumbs or grease stuck inside the machine. To prevent smoking, make sure to empty and clean the Crumb Tray after each use.

### **NONSTICK SURFACE**

- It is normal for appliances with nonstick coating to emit a slight odor and smoke during the first few uses. The odor and smoking should dissipate with normal usage.
- Remember to always coat nonstick surface with vegetable oil before each use to protect the nonstick finish.

## **CLEANING & MAINTENANCE**

Make sure the unit is unplugged before cleaning. Allow all parts to COOL to the touch, especially the Toaster Oven, Griddle Plate, Coffee Pot and Crumb Tray. To prolong the life of your 3-IN-1 BREAKFAST STATION, please follow these simple instructions for maintenance. Never place the appliance in a dishwasher.

- Make sure the 3-IN-1 BREAKFAST STATION is unplugged and completely cooled before storing or cleaning.
- Remove Griddle Plate, Wire Rack and Crumb Tray. Wash them using warm, soapy water and a non-abrasive sponge or cloth. Dry thoroughly with a dry, non-abrasive cloth.
- Clean outer surface of the 3-IN-1 BREAKFAST STATION with a dry, non-abrasive cloth when it is unplugged and completely cooled.
- Clean interior of the Toaster Oven with a damp (not wet), non-abrasive cloth. DO NOT use a scouring pad on the interior of the Toaster Oven. Dry thoroughly with a non-abrasive cloth.
- Clean the Glass Door of the Toaster Oven with glass cleaner or mild detergent and a damp, non-abrasive cloth. DO NOT use an abrasive cloth or scouring pad as they may scratch the glass. Dry thoroughly using a dry, non-abrasive cloth.
- When cleaning the coffee filter and coffee funnel, open the lid to the coffee maker and hold each side of the coffee funnel and pull straight up.
- Wash Coffee Filter and Coffee Funnel in warm, soapy water with a non-abrasive sponge or cloth. Dry thoroughly using a dry, non-abrasive cloth.
- Reassemble all parts after cleaning and drying them thoroughly.



- Do not operate Toaster Oven without at least one piece of bread in place.
- Never use the 3-IN-1 BREAKFAST STATION without the Griddle Plate and Crumb Tray in place.
- Store 3-IN-1 BREAKFAST STATION in a cool, dry place. Always store indoors. NEVER store appliance without unplugging and allowing to cool completely first.
- DO NOT wrap cord tightly around the appliance as this could loosen the cord or cause it break.

## RECIPES

**Use your 3-IN-1 BREAKFAST STATION for a quick, easy-to-serve meal:**

- A Variety of Sausages and Patties (Pork, Beef, Turkey, Veggie, or Chicken)
- Slider Burgers & Buns
- Breakfast Sandwiches
- Bacon, Eggs & Toast
- Silver Dollar Pancakes
- Bagels and English Muffins and much more!

## WARRANTY

### Returns & Warranty Policy

#### Immediate Return Instructions:

- If the unit is not functioning or is damaged when first unboxed, return it to the place of purchase immediately.

#### Contact Information:

- **Distributor:** Nostalgia Products LLC
- **Address:** 1471 Partnership Dr., Green Bay, WI 54304-5685
- **Customer Service Phone:** (920) 347-9122
- **Website:** [www.nostalgiaproducts.com](http://www.nostalgiaproducts.com)
- **Customer Service Hours:** Monday to Friday, 8:00 AM – 5:00 PM, Central Standard Time

#### Submitting Customer Service Inquiries:

- Visit [www.nostalgiaproducts.com](http://www.nostalgiaproducts.com)
- Complete and submit the Customer Service Inquiry form.
- A representative will contact you promptly.

#### Product Warranty Terms:

- **Warranty Period:** 1 year from the date of original purchase.
- **Coverage:** Free from defects in material and workmanship under normal home use.
- **Warranty Service:** Repair, replacement, or refund for defective products, at the Company's discretion.
- **Eligibility:** Original retail purchaser with the original sales receipt.

- **Claim Deadline:** Within the warranty period, no later than 30 days after the failure.
- **Exclusions:** Does not cover wear and tear, shipping damage, mishandling, misuse, accidents, alterations, improper parts, or non-household use.
- **Return Policy for Inspection:** Product should be returned with shipping prepaid by the customer. Return shipping costs are non-refundable. The Company is not liable for damage or loss during transit.
- **Use Limitation:** Warranty applicable for indoor household use only, unless specified otherwise in the operating instructions.
- **Geographic Limitation:** Warranty valid in the USA and Canada only.

#### **Legal Disclaimers:**

- Excludes implied warranties of merchantability and fitness for a particular purpose.
- No liability for indirect, incidental, consequential, or special damages. This may vary based on jurisdiction.
- Not applicable to re-manufactured merchandise.

#### **Operating Instructions Compliance:**

- Warranty void if the operating instructions are not followed.

#### **Online Presence:**

- **Facebook:** [www.facebook.com/NostalgiaElectrics](https://www.facebook.com/NostalgiaElectrics)
- **Pinterest:** [www.pinterest.com/nostalgiaelctrx](https://www.pinterest.com/nostalgiaelctrx)
- **Twitter:** [www.twitter.com/NostalgiaElctrx](https://www.twitter.com/NostalgiaElctrx)

For detailed information and operating instructions, visit [www.nostalgiaproducts.com](https://www.nostalgiaproducts.com).

## **FREQUENTLY ASKED QUESTIONS**

Which brand manufactures the 3-in-1 Breakfast Station with the model BST3RR?

The 3-in-1 Breakfast Station with the model BST3RR is manufactured by Nostalgia.

What is the color of the Nostalgia BST3RR 3-in-1 Breakfast Station?

The Nostalgia BST3RR 3-in-1 Breakfast Station is red in color.

What are the product dimensions of the Nostalgia BST3RR 3-in-1 Breakfast Station?

The product dimensions of the Nostalgia BST3RR 3-in-1 Breakfast Station are 11.75 inches in diameter, 19.25 inches in width, and 11.5 inches in height.

What type of control does the Nostalgia BST3RR 3-in-1 Breakfast Station use?

The Nostalgia BST3RR 3-in-1 Breakfast Station uses a knob as the control type.

What is the door style of the Nostalgia BST3RR 3-in-1 Breakfast Station?

The door style of the Nostalgia BST3RR 3-in-1 Breakfast Station is a dropdown door.

What components are included with the Nostalgia BST3RR 3-in-1 Breakfast Station?

The included components with the Nostalgia BST3RR 3-in-1 Breakfast Station are referred to as the Breakfast Station.

What is the model name of the Nostalgia BST3RR 3-in-1 Breakfast Station?

The model name of the Nostalgia BST3RR 3-in-1 Breakfast Station is Retro 3-in-1 Family Size.

What finish type does the Nostalgia BST3RR 3-in-1 Breakfast Station have?

The Nostalgia BST3RR 3-in-1 Breakfast Station has a non-stick finish type.

What is the cable length of the Nostalgia BST3RR 3-in-1 Breakfast Station?

The cable length of the Nostalgia BST3RR 3-in-1 Breakfast Station is 11.5 inches.

How much does the Nostalgia BST3RR 3-in-1 Breakfast Station weigh?

The Nostalgia BST3RR 3-in-1 Breakfast Station has a weight of 11.88 pounds.

Can you describe the all-in-one breakfast solution provided by the Nostalgia BST3RR 3-in-1 Breakfast Station?

The Nostalgia BST3RR 3-in-1 Breakfast Station is an all-in-one solution that includes a 3-cup coffee maker, a large griddle for cooking eggs, bacon, and pancakes, and a toaster oven capable of holding up to four slices of bread.

How does the Nostalgia BST3RR 3-in-1 Breakfast Station save countertop space?

The Nostalgia BST3RR 3-in-1 Breakfast Station is designed to be compact, saving countertop space while offering a convenient solution for cooking various breakfast meals.

What capacity does the coffee maker in the Nostalgia BST3RR 3-in-1 Breakfast Station have?

The coffee maker in the Nostalgia BST3RR 3-in-1 Breakfast Station brews up to 3 cups at a time in minutes, and it comes with a glass carafe, a coffee scoop, and a reusable filter.

What cooking capabilities does the family-sized griddle of the Nostalgia BST3RR 3-in-1 Breakfast Station offer?

The family-sized griddle of the Nostalgia BST3RR 3-in-1 Breakfast Station provides ample room to fry eggs, omelets, pancakes, sausages, bacon, hashbrowns, and other breakfast foods. It also includes a glass lid.

How does Nostalgia describe its overall design philosophy, including the BST3RR 3-in-1 Breakfast Station?

Nostalgia describes its design philosophy as drawing inspiration from early 19th-century America. They offer unique, novel, and fun products for the family while preserving the past, embracing the present, and looking forward to the future.

## VIDEO – PRODUCT OVERVIEW



[Download the PDF link Nostalgia BST3RR 3-in-1 Breakfast Station Instruction Manual Breakfast-Station-Instruction-Manual.mp4](#)

REFERENCE: [Nostalgia BST3RR 3-in-1 Breakfast Station Instruction Manual-Device.Report](#)

---

## References

- [User Manual](#)