

Nostalgia RSM702 Single Snow Cone Maker



Nostalgia RSM702 Single Snow Cone Maker Instruction Manual

[Home](#) » [Nostalgia](#) » Nostalgia RSM702 Single Snow Cone Maker Instruction Manual 

Contents

- [1 Nostalgia RSM702 Single Snow Cone Maker](#)
- [2 IMPORTANT PRECAUTIONS](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 INTRODUCTION](#)
- [5 PARTS & ASSEMBLY](#)
- [6 HOW TO OPERATE](#)
- [7 HELPFUL TIPS](#)
- [8 CLEANING & MAINTENANCE](#)
- [9 RECIPES](#)
- [10 RETURNS & WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)
- [14 Related Posts](#)



NOSTALGIA™

Nostalgia RSM702 Single Snow Cone Maker



SAFETY

Your safety and the safety of others is very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

-  This is the safety alert symbol.
-  This symbol alerts you to potential hazards that can kill or hurt you and others.
- All safety messages will follow the safety alert symbol.
- All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications: 120 Volts, 60 Hz 40 Watts, ETL Approved

IMPORTANT PRECAUTIONS

1. NEVER immerse base in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliances unattended while in use.
6. NEVER try to force the cover into the locked position.
7. Unplug unit from the outlet when not in use and during cleaning.
8. DO NOT operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions.

9. DO NOT put in a dishwasher.
10. This appliance is for use with food and liquids only.
11. Keep out of reach of children.
12. This appliance is NOT A TOY.
13. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
14. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of how to operate this appliance.
15. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Read all instructions before operating this appliance.
2. Keep hands away from the blade mechanism. Use handles or knobs.
3. DO NOT touch moving parts.
4. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
5. Close supervision is necessary when any appliance is used near children.
6. Unplug from the outlet when not in use, before removing parts and before cleaning.
7. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
8. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
9. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
10. Position the appliance as close to the outlet as possible to prevent injury due to tripping over the cord.
11. DO NOT place on or near a hot gas or electric burner, nor in a heated oven.
12. Check ice hopper for the presence of foreign objects prior to use.
13. DO NOT use the appliance for other than its intended use.
14. An appliance that is plugged into an outlet should not be left unattended while in operation.
15. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
16. Longer detachable power supply cords can be used if care is exercised in their use.
17. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
18. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing The RETRO SERIES SINGLE SNOW CONE MAKER. Now you can create refreshing snow cones at home anytime! Use ice cubes to make shaved ice then add your choice of flavored syrup and enjoy

a cold, tasty treat that's fun for the whole family and a great relief from the summer sun. You can even make fruit slush drinks, yogurt snow and smoothies! This product is a great companion to the other fun appliances in Nostalgia Electrics' Retro Series line.

The RETRO SERIES SINGLE SNOW CONE MAKER is designed for kitchen use, but can be used in a number of locations such as:

- Family Rooms
- Dorm Rooms
- Offices
- Club Houses

PARTS & ASSEMBLY

ASSEMBLY

Your RETRO SERIES SINGLE SNOW CONE MAKER requires very little assembly.

- Before first use, lift the removable top off of the body and wipe clean the inside of the unit with a non-abrasive moist sponge, a non-abrasive towel, or a damp cloth followed by a non-abrasive dry towel.
- After cleaning the inside, put the top back on the base of the unit.
- Now you are ready to enjoy cool, refreshing icy snacks from your RETRO SERIES SINGLE SNOW CONE MAKER!



HOW TO OPERATE

- Place the RETRO SERIES SINGLE SNOW CONE MAKER on a stable, waterproof surface near an electrical outlet before starting.
- Always make sure that the cord is away from a water source.
- Remove the Snow Cone Holder from the base of the unit and reattach the Snow Cone Holder so that it faces upward.

- Before plugging in the unit, add 4-5 ice cubes to the Ice Hopper by removing the Lid. In order to do so, turn the Lid clockwise, lift and remove.
- Plug in the unit.
- Place a cone in the Snow Cone Holder.
- When you are ready to make a snow cone, place the Lid back on the unit and turn Lid counter-clockwise to lock.
- The Ice Hopper will immediately begin shaving the ice. Rotate cone with your hand as needed to collect ice.
- To stop the Ice Hopper from shaving ice, turn the Lid clockwise.
- Repeat the process until you have shaved the amount of ice desired.
- Unplug unit from the outlet when finished.

By following these simple instructions, your RETRO SERIES SINGLE SNOW CONE MAKER will be fun for friends, family and kids of all ages!

HELPFUL TIPS

ICE CUBES

- Ice cubes should sit a short while before putting them in the shaving unit. If ice has a frosty appearance, it is too hard to shave. Let ice sit until it is translucent and wet to the touch. Then it is ready to put in the Ice Hopper.

SHAVED ICE

While ice is shaving, it will empty from the Spout and may get on the surface and floor around the RETRO SERIES SINGLE SNOW CONE MAKER. This is normal. In order to prevent messes:

- Place the unit on a waterproof surface while in use.
- Rotate the cone in the holder as needed in order to fill the cone evenly.
- After you are finished making snow cones, make sure the Ice Hopper is empty so that ice does not melt onto the surface.

SHAKING

- If the unit begins to shake, make sure that the suction cups on the bottom of the unit are firmly pressed into the table or countertop.

CLEANING & MAINTENANCE

- Make sure the unit is unplugged before cleaning. Lift off the top housing to clean and dry the inside of the unit.
- Before first use and continuing after each use, be sure to wipe off the unit with a damp cloth and dry thoroughly.
- The blade is very sharp. Use EXTREME CAUTION when handling the appliance during cleaning.
- To prolong the life of your RETRO SERIES SINGLE SNOW CONE MAKER, hand-washing parts is advised. Dishwasher use is not recommended. Never place the main unit in a dishwasher.

RECIPES

Your **RETRO SERIES SINGLE SNOW CONE MAKER** makes perfectly shaved ice that can be used to make:

- **SNOW CONES**

After shaving the ice, add flavored syrup. Add more than one flavor to create colorful and varied snow cones. Create stripes of flavor in the shaved ice for Rainbow Snow Cones.

- **SLUSH DRINKS**

Fill a glass with freshly shaved ice. Add your favorite soft drink, flavored tea or fruit juice. Mix well.

- **FRESH FRUIT SLUSH**

Fill a serving cup with freshly shaved ice. Add flavored syrup and top with fresh chopped fruit of your choice.

- **ICE CREAM SLUSH**

Fill a serving cup with your choice of ice cream. Top with a generous serving of shaved ice. Add flavored syrup.

- **YOGURT SNOW**

Freeze flavored yogurt in ice cube trays. Use your **RETRO SERIES SINGLE SNOW CONE MAKER** to shave the yogurt cubes and make a refreshing, healthy treat. Add flavored syrup for even more flavor.

- **SNOW SMOOTHIES**

Freeze ½ cup of milk in ice cube trays. Use your **RETRO SERIES SINGLE SNOW CONE MAKER** to shave the ice cubes. Place the shaved cubes and fresh strawberries or your choice of fruit in a blender. Add ¼ cup of sugar for sweetness, then blend until smooth or to desired consistency.

- **FROZEN JUICE DRINK**

Freeze fruit juice in ice cube trays. Use your **RETRO SERIES SINGLE SNOW CONE MAKER** to shave the cubes to create a healthy, juicy treat.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY. **RETRO SERIES SINGLE SNOW CONE MAKER / RSM702** Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by: Nostalgia Products Group LLC 1471 Partnership Dr. Green Bay, WI 54304-5685

Customer Service

- **Phone:** (920) 347-9122
- **Web:** www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com fill out the Customer Service Inquiry form, and click the Submit button. A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling, or unit being dropped. A product deemed defective either from

manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaelectrics.com.

This warranty does not apply to re-manufactured merchandise. Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

FREQUENTLY ASKED QUESTIONS

What are the dimensions of the Nostalgia RSM702 Single Snow Cone Maker?

The Nostalgia RSM702 Single Snow Cone Maker has dimensions of 7.5 x 6.7 x 12 inches.

What is the weight of the Nostalgia RSM702 Single Snow Cone Maker?

The Nostalgia RSM702 Single Snow Cone Maker weighs 3.83 pounds.

What is the material of the Nostalgia RSM702 Single Snow Cone Maker?

The Nostalgia RSM702 Single Snow Cone Maker is made of plastic.

What is the finish type of the Nostalgia RSM702 Single Snow Cone Maker?

The finish type of the Nostalgia RSM702 Single Snow Cone Maker is red.

How should I care for the Nostalgia RSM702 Single Snow Cone Maker?

The care instructions for the Nostalgia RSM702 Single Snow Cone Maker recommend hand washing.

What is the item model number for the Nostalgia RSM702 Single Snow Cone Maker?

Is there any warranty provided for the Nostalgia RSM702 Single Snow Cone Maker?

Yes, there is a 1-Year Limited Warranty for the Nostalgia RSM702 Single Snow Cone Maker.

What is the fabric type of the Nostalgia RSM702 Single Snow Cone Maker?

The fabric type of the Nostalgia RSM702 Single Snow Cone Maker is plastic.

How many pieces are included with the Nostalgia RSM702 Single Snow Cone Maker?

The Nostalgia RSM702 Single Snow Cone Maker comes as a single piece.

What are the recommended Nostalgia snow cone kits that work with the RSM702 model?

The Nostalgia RSM702 Single Snow Cone Maker works perfectly with all Nostalgia snow cone kits, such as the Snow Cone Kit, Snow Cone Syrups, or the Straws and Cups.

What type of blades does the Nostalgia RSM702 Single Snow Cone Maker have?

The Nostalgia RSM702 Single Snow Cone Maker is equipped with precision-cut stainless steel cutting blades.

How do the stainless steel cutting blades work on the Nostalgia RSM702 Single Snow Cone Maker?

The stainless steel cutting blades work quickly and efficiently to shave ice cubes into delicious, fluffy snow-like ice.

What makes the Nostalgia RSM702 Single Snow Cone Maker a party pleaser?

The Nostalgia RSM702 Single Snow Cone Maker is a fun and easy way to make delicious shaved ice treats, making it perfect for birthday parties, BBQs, dinner parties, and more.

Is the Nostalgia RSM702 Single Snow Cone Maker suitable for countertop use?

Yes, the Nostalgia RSM702 Single Snow Cone Maker is the perfect size to fit on a kitchen countertop or a small side table.

Does the Nostalgia RSM702 Single Snow Cone Maker have a safety feature?

Yes, a safety switch is built into the shaving mechanism of the Nostalgia RSM702 Single Snow Cone Maker to keep hands safe.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link: Nostalgia RSM702 Single Snow Cone Maker Instruction Manual Snow-Cone-Maker-Instruction-Manual.mp4](#)

REFERENCE: [Nostalgia RSM702 Single Snow Cone Maker Instruction Manual-Device.Report](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)