

Nostalgia SCM550COKE Single Snow Cone Maker



Nostalgia SCM550COKE Single Snow Cone Maker Instruction Manual

[Home](#) » [Nostalgia](#) » Nostalgia SCM550COKE Single Snow Cone Maker Instruction Manual 

Contents

- [1 Nostalgia SCM550COKE Single Snow Cone Maker](#)
- [2 IMPORTANT PRECAUTIONS](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 INTRODUCTION](#)
- [5 PARTS & ASSEMBLY](#)
- [6 HOW TO OPERATE](#)
- [7 CLEANING & MAINTENANCE](#)
- [8 RECIPES](#)
- [9 RETURNS & WARRANTY](#)
- [10 FREQUENTLY ASKED QUESTIONS](#)
- [11 VIDEO – PRODUCT OVERVIEW](#)
- [12 References](#)
- [13 Related Posts](#)



NOSTALGIA™

Nostalgia SCM550COKE Single Snow Cone Maker



SAFETY

Your safety and the safety of others is very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

-  This is the safety alert symbol.
-  This symbol alerts you to potential hazards that can kill or hurt you and others.
- All safety messages will follow the safety alert symbol.
- All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications: 120 Volts, 60 Hz 40 Watts, ETL Approved


IMPORTANT PRECAUTIONS

1. NEVER immerse Top Housing in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. NEVER try to force the cover into locked position.

7. Unplug unit from outlet when not in use and during cleaning.
8. DO NOT operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions.
9. This appliance is for use with food and liquids only.
10. DO NOT put in a dishwasher.
11. Keep out of reach of children.
12. This appliance is NOT A TOY.
13. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
14. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of how to operate this appliance.
15. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Read all instructions before operating this appliance.
2. Keep hands away from blade mechanism. Use handles or knobs.
3.  Blades are extremely sharp. Use with EXTREME CAUTION.
4. DO NOT touch moving parts.
5. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
6. Close supervision is necessary when any appliance is used near children.
7. Unplug from outlet when not in use, before removing parts and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
9. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
10. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
11. Position the appliance as close to the outlet as possible to prevent injury due to tripping over cord.
12. DO NOT place on or near a hot gas or electric burner, nor in a heated oven.
13. Check Ice Shaving Canister for presence of foreign objects prior to use.
14. DO NOT use the appliance for other than its intended use.
15. An appliance that is plugged into an outlet should not be left unattended while in operation.
16. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
17. Longer detachable power supply cords can be used if care is exercised in their use.
18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

20. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

SAVE THESE INSTRUCTIONS!

INTRODUCTION


Thank you for purchasing the COCA-COLA® SERIES SNOW CONE MAKER. Now you can create refreshing snow cones at home anytime! Use ice cubes to make shaved ice then add your choice of flavored syrup and enjoy a cold, tasty treat that's fun for the whole family and a great relief from the summer sun. You can even make fruit slush drinks, yogurt snow and smoothies! This product is a great companion to the other fun appliances in Nostalgia's COCA-COLA® line.

The COCA-COLA® SNOW CONE MAKER is designed for kitchen use, but can be used in a number of locations such as:

- Family Rooms
- Dorm Rooms
- Offices
- Club Houses

PARTS & ASSEMBLY

Your COCA-COLA® SNOW CONE MAKER comes fully assembled.

- Before first use, lift the Top Housing off of the Main Unit and remove the Ice Shaving Canister.
- The Ice Shaving Canister can be removed by taking off the Ice Shaving Canister Lid and lifting Ice Shaving Canister from Top Housing.
- Wipe clean the inside of the Main Unit and Ice Shaving Canister with a non-abrasive moist sponge, a non-abrasive towel, or a damp cloth followed by a non-abrasive dry towel.
- After cleaning the inside, reassemble the Ice Shaving Canister and Main Unit, and put the top back on the Main Unit.
-  Use EXTREME caution when cleaning and handling the Ice Shaving Canister, as the blades are VERY sharp.
- Now you are ready to enjoy cool, refreshing icy snacks from your COCA-COLA® SNOW CONE MAKER!

PARTS



ASSEMBLY



When assembling Ice Shaving Canister parts, turn Locking Cap clockwise to lock and turn counter-clockwise to unlock.

HOW TO OPERATE

- Place the COCA-COLA® SNOW CONE MAKER on a stable, waterproof surface near an electrical outlet before starting.
- Always make sure that the cord is away from any water source.
- Before plugging in the unit, add ice cubes to the Ice Shaving Canister by removing the Lid.



- Do not overfill the Ice Shaving Canister. Make sure that there is enough room to put the Lid back on.
- Plug in the unit.
- Turn Lid counter-clockwise to lock and turn on unit.



Unit is ON



Unit is OFF

- The unit will immediately begin shaving the ice.
- Repeat the process until you have shaved the amount of ice desired.
- Turn Lid clockwise and unplug unit from outlet when finished.
- Scoop out shaved ice with Ice Scoop from inside Main Unit by opening the Door. Fill Plastic Cones with desired amount of shaved ice.
- Squirt flavored syrup onto ice in cones and serve.



- This unit comes with two Plastic Cones. It does not include syrup. It is recommended that you purchase a snow cone kit with syrup mix and paper cones if you are planning to make a large batch of snow cones.



By following these simple instructions, your COCA-COLA® SNOW CONE MAKER will be fun for friends, family and kids of all ages!

HELPFUL TIPS

ICE CUBES


- Ice cubes should sit outside of the freezer a short while before putting them in the shaving unit. If ice has a frosty appearance, it is too hard to shave. Let ice sit until it is translucent and wet to the touch. Then it is ready to put in the Ice Shaving Canister.

SHAVED ICE

In order to prevent messes:

- Place unit on a waterproof surface while in use.
- After you are finished making snow cones, make sure to empty Ice Shaving Canister and Main Unit so that ice does not melt onto surface.

CLEANING & MAINTENANCE

- Make sure the unit is unplugged before cleaning.
- Disassemble unit by removing the Ice Shaving Canister Lid and lifting off the Top Housing.
- Remove all parts of the Ice Shaving Canister.
- Unlock the Ice Feed Insert from the Ice Shaving Canister by turning Locking Cap counter-clockwise.
- Wash all parts of the Ice Shaving Canister, Plastic Cones, Cone Shelf and Ice Scoop by hand with warm, soapy water. Rinse and dry thoroughly with a non-abrasive cloth.
- Wipe down the inside of the Main Unit with a dry, non-abrasive cloth.
-  The blade is very sharp. Use EXTREME CAUTION when handling the appliance during cleaning.
- Keep Top Housing away from water. NEVER wash Top Housing with water or damp cloth. Only use a dry cloth on the Top Housing.
- Make sure to clean and dry the unit before and after each use.
- To prolong the life of your COCA-COLA® SNOW CONE MAKER, hand- washing parts is advised. Dishwasher use is not recommended.

RECIPES

Your COCA-COLA® SNOW CONE MAKER makes perfectly shaved ice that can be used to make:

• SNOW CONES

After shaving the ice, add flavored syrup. Add more than one flavor to create colorful and varied snow cones. Create stripes of flavor in the shaved ice for Rainbow Snow Cones.

• SLUSH DRINKS

Fill a glass with freshly shaved ice. Add your favorite soft drink, flavored tea or fruit juice. Mix well.

• FRESH FRUIT SLUSH

Fill a serving cup with freshly shaved ice. Add flavored syrup and top with fresh chopped fruit of your choice.

• ICE CREAM SLUSH

Fill a serving cup with your choice of ice cream. Top with a generous serving of shaved ice. Add flavored syrup.

- **YOGURT SNOW**

Freeze flavored yogurt in ice cube trays. Use your COCA-COLA® SNOW CONE MAKER to shave the yogurt cubes and make a refreshing, healthy treat. Add flavored syrup for even more flavor.

- **SNOW SMOOTHIES**

Freeze ½ cup of milk in ice cube trays. Use your COCA-COLA® SNOW CONE MAKER to shave the ice cubes. Place the shaved cubes and fresh strawberries or your choice of fruit in a blender. Add ¼ cup of sugar for sweetness, then blend until smooth or to desired consistency.

- **FROZEN JUICE DRINK**

Freeze fruit juice in ice cube trays. Use your COCA-COLA® SNOW CONE MAKER to shave the cubes to create a healthy, juicy treat.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY. RETRO SERIES SINGLE SNOW CONE MAKER / RSM702 Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by: Nostalgia Products Group LLC 1471 Partnership Dr. Green Bay, WI 54304-5685

Customer Service

- **Phone:** (920) 347-9122
- **Web:** www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com fill out the Customer Service Inquiry form, and click the Submit button. A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling, or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaelectrics.com.

This warranty does not apply to re-manufactured merchandise. Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

FREQUENTLY ASKED QUESTIONS

What is the brand and model of the snow cone maker described?

The snow cone maker is the Nostalgia SCM550COKE, belonging to the Nostalgia brand.

What is the item weight of the Nostalgia SCM550COKE Single Snow Cone Maker?

The item weight of the Nostalgia SCM550COKE Single Snow Cone Maker is 5 pounds.

What are the product dimensions of the Nostalgia SCM550COKE Single Snow Cone Maker?

The product dimensions of the Nostalgia SCM550COKE Single Snow Cone Maker are 8 x 12 x 15.25 inches.

What is the item model number of the Nostalgia SCM550COKE Single Snow Cone Maker?

The item model number for the Nostalgia SCM550COKE Single Snow Cone Maker is SCM550COKE.

In which color is the Nostalgia SCM550COKE Single Snow Cone Maker available?

The Nostalgia SCM550COKE Single Snow Cone Maker is available in the colors white/red.

What materials are used in the construction of the Nostalgia SCM550COKE Single Snow Cone Maker?

The Nostalgia SCM550COKE Single Snow Cone Maker is constructed with plastic and metal materials.

What Nostalgia snow cone kits are mentioned to work perfectly with the SCM550COKE model?

The Nostalgia SCM550COKE Single Snow Cone Maker works perfectly with all Nostalgia snow cone kits, including the Snow Cone Kit, Snow Cone Syrups, and the Straws and Cups.

What type of cutting blades does the Nostalgia SCM550COKE Single Snow Cone Maker have?

The Nostalgia SCM550COKE Single Snow Cone Maker is equipped with precision-cut stainless steel cutting blades that work quickly and efficiently to shave ice cubes into fluffy snow-like ice.

For what occasions is the Nostalgia SCM550COKE Single Snow Cone Maker described as a party pleaser?

The Nostalgia SCM550COKE Single Snow Cone Maker is described as a party pleaser, making it ideal for occasions such as birthday parties, BBQs, dinner parties, and more.

What is the suggested use for the Nostalgia SCM550COKE Single Snow Cone Maker?

The Nostalgia SCM550COKE Single Snow Cone Maker is suggested for making delicious shaved ice treats, particularly snow cones.

Is there a safety feature mentioned for the Nostalgia SCM550COKE Single Snow Cone Maker?

Yes, a safety switch is built into the shaving mechanism of the Nostalgia SCM550COKE Single Snow Cone

Maker to keep hands safe during operation.

What is the perfect size mentioned for the Nostalgia SCM550COKE Single Snow Cone Maker?

The Nostalgia SCM550COKE Single Snow Cone Maker is described as the perfect size to fit on a kitchen countertop or a small side table, making it easy to serve snow cones wherever you go.

Can the Nostalgia SCM550COKE Single Snow Cone Maker be used for locations other than the kitchen?

Yes, the Nostalgia SCM550COKE Single Snow Cone Maker is portable and convenient, making it easy to serve snow cones wherever you go.

How does the Nostalgia brand describe its products in the provided information?

The Nostalgia brand describes its products as offering unique, novel, and fun items for the family. They aim to preserve the past, embrace the present, and look forward to the future.

Can you use the Nostalgia SCM550COKE Single Snow Cone Maker with other branded snow cone kits?

The information provided specifically mentions that the Nostalgia SCM550COKE Single Snow Cone Maker works perfectly with all Nostalgia snow cone kits.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link Nostalgia SCM550COKE Single Snow Cone Maker Instruction Manual Single-Snow-Cone-Maker-Instruction-Manual.mp4](#)

REFERENCE: [Nostalgia SCM550COKE Single Snow Cone Maker Instruction Manual-Device.Report](#)

References

- [User Manual](#)