



# NOSTALGIA NSCM525WH Snow Cone Maker Instruction Manual

[Home](#) » [Nostalgia](#) » NOSTALGIA NSCM525WH Snow Cone Maker Instruction Manual 

## NOSTALGIA NSCM525WH Snow Cone Maker Instruction Manual



### Contents

- [1 SAFETY](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 ADDITIONAL IMPORTANT SAFEGUARDS](#)
- [4 INTRODUCTION](#)
- [5 PARTS & ASSEMBLY](#)
- [6 HOW TO OPERATE](#)
- [7 HELPFUL TIPS](#)
- [8 CLEANING & MAINTENANCE](#)
- [9 RECIPES](#)
- [10 RETURNS & WARRANTY](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

## SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can cause serious injury to you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

### **Appliance Specifications:**

120 Volts, 60 Hz

30 Watts

THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY.

Refer to [www.nostalgiaproducts.com/user-manuals/](http://www.nostalgiaproducts.com/user-manuals/) for the most updated manual.

## IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.

When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions before operating this appliance.
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
5. Close supervision is necessary when any appliance is used by or near children.
6. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
7. Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
9. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
10. DO NOT use the appliance for other than its intended use.

11. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
14. NEVER leave unit unattended while in use or when plugged into an outlet.
15. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

## **ADDITIONAL IMPORTANT SAFEGUARDS**

### **Operating Safety Precautions**

1. Blade is VERY sharp. Use EXTREME CAUTION when handling.
2. Avoid contact with moving parts. NEVER put fingers or utensils into feed or discharge areas.
3. Keep hands away from blade mechanism. Use handles or knobs.
4. Unplug from outlet when not in use, before removing parts and before cleaning.
5. Check the ice hopper for presence of foreign objects prior to use.

### **Instructions for the Electrical Cord and Plug**

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
2. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
3. If a long detachable power-supply cord or extension cord is used:
  - Extension cords can be used if care is exercised in their use.
  - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
  - When using a longer cord or extension cord, make sure that the cord does not drape over a countertop or tabletop where it can be pulled on or tripped over unintentionally.
4. The manufacturer does not recommend using this machine in countries that do not support 120V AC even if a voltage adapter, transformer, or converter is in use.

## **INTRODUCTION**

Thank you for purchasing the SNOW CONE MAKER from Nostalgia™! Now you can create refreshing snow cones at home anytime! Use ice cubes to make shaved ice then add your choice of flavored syrup and enjoy a cold, tasty treat that's fun for the whole family and a great relief from the summer sun. You can even make fruit slush drinks, yogurt snow and smoothies!

The SNOW CONE MAKER is designed for home kitchen use, but can be used in a number of locations such as:

- Family Rooms

- Dorm Rooms
- Offices
- Club Houses

## PARTS & ASSEMBLY

Your SNOW CONE MAKER comes fully assembled.

Before first use, follow the directions under CLEANING & MAINTENANCE to clean your machine.



Use EXTREME caution when cleaning and handling the Ice Shaving Canister, as the blades are VERY sharp.

## PARTS



## ASSEMBLY



## HOW TO OPERATE

1. Place the SNOW CONE MAKER on a stable, waterproof surface near an electrical outlet before starting.
2. Always make sure that the cord is away from any water source.
3. Before plugging in the unit, add ice cubes to the Ice Shaving Canister by removing the Lid.


**NOTE:** Do not overfill the Ice Shaving Canister. Make sure that there is enough room to put the Lid back on.



4. Plug in the unit.
5. Turn Lid counter-clockwise to lock and turn on unit.



Unit is ON

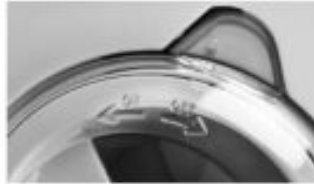

Unit is OFF

6. The unit will immediately begin shaving the ice.
7. Repeat the process until you have shaved the amount of ice desired.
8. Turn Lid clockwise and unplug unit from outlet when finished.
9. Scoop out shaved ice with Ice Scoop from inside Main Unit by opening the Door. Fill Plastic Cones with desired amount of shaved ice.
10. Squirt flavored syrup onto ice in cones and serve.



11. This unit comes with two Plastic Cones. It does not include syrup. It is recommended that you purchase a snow cone kit with syrup mix and paper cones if you are planning to make a large batch of snow cones.

By following these simple instructions, your SNOW CONE MAKER will be fun for friends, family and kids of all ages!

## HELPFUL TIPS

### ICE CUBES

Ice cubes should sit outside of the freezer a short while before putting them in the shaving unit. If ice has a frosty appearance, it is too hard to shave. Let ice sit until it is translucent and wet to the touch. Then it is ready to put in the Ice Shaving Canister.

### SHAVED ICE

In order to prevent messes:

- Place unit on a waterproof surface while in use.
- After you are finished making snow cones, make sure to empty Ice Shaving Canister and Main Unit so that ice

does not melt onto surface.

## CLEANING & MAINTENANCE

- Make sure the unit is unplugged before cleaning.
- Disassemble unit by removing the Ice Shaving Canister Lid and lifting off the Top Housing.
- Remove all parts of the Ice Shaving Canister.
- Unlock the Ice Feed Insert from the Ice Shaving Canister by turning Locking Cap counter-clockwise.
- Wash all parts of the Ice Shaving Canister, Plastic Cones, Cone Shelf and Ice Scoop by hand with warm, soapy water. Rinse and dry thoroughly with a non abrasive cloth.
- Wipe down the inside of the Main Unit with a dry, non-abrasive cloth.



- The blade is very sharp. Use EXTREME CAUTION when handling the appliance during cleaning.
- Keep Top Housing away from water. NEVER wash Top Housing with water or damp cloth. Only use a dry cloth on the Top Housing.
- Make sure to clean and dry the unit before and after each use.
- To prolong the life of your NOW CONE MAKER, hand-washing parts is advised. Dishwasher use is not recommended.

## RECIPES

Your SNOW CONE MAKER makes perfectly shaved ice that can be used to make:

### • SNOW CONES

After shaving the ice, add flavored syrup. Add more than one flavor to create colorful and varied snow cones. Create stripes of flavor in the shaved ice for Rainbow Snow Cones.

### • SLUSH DRINKS

Fill a glass with freshly shaved ice. Add your favorite soft drink, flavored tea or fruit juice. Mix well.

### • FRESH FRUIT SLUSH

Fill a serving cup with freshly shaved ice. Add flavored syrup and top with fresh chopped fruit of your choice.

### • ICE CREAM SLUSH

Fill a serving cup with your choice of ice cream. Top with a generous serving of shaved ice. Add flavored syrup.

### • YOGURT SNOW

Freeze flavored yogurt in ice cube trays. Use your SNOW CONE MAKER to shave the yogurt cubes and make a refreshing, healthy treat. Add flavored syrup for even more flavor.

### • SNOW SMOOTHIES

Freeze ½ cup of milk in ice cube trays. Use your SNOW CONE MAKER to shave the ice cubes. Place the shaved cubes and fresh strawberries or your choice of fruit in a blender. Add ¼ cup of sugar for sweetness, then blend until smooth or to desired consistency.

### • FROZEN JUICE DRINK

Freeze fruit juice in ice cube trays. Use your SNOW CONE MAKER to shave the cubes to create a healthy, juicy treat.

## **RETURNS & WARRANTY**

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

### **SNOW CONE MAKER / NSCM525WH**

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

#### **Distributed by:**

Nostalgia Products LLC  
1471 Partnership Dr.  
Green Bay, WI 54304-5685  
Customer Service  
Phone: (920) 347-9122  
Web: [www.nostalgiaproducts.com](http://www.nostalgiaproducts.com)

#### **Customer Service Inquiry**

To submit a Customer Service inquiry, go to [www.nostalgiaproducts.com](http://www.nostalgiaproducts.com) and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

#### **Product Warranty Terms**

Nostalgia Products LLC (the "Company") hereby warrants that for a period of one (1) year from the date of original purchase, this product will be free of defects in material and workmanship under normal home use, provided that the product is operated and maintained in accordance with the operating instructions. As the sole and exclusive remedy under this warranty, the Company will at its discretion either repair or replace the product found to be defective, or issue a refund on the product during the warranty period. This warranty is only available to the original retail purchaser of the product from the date of initial retail purchase, and is only valid with the original sales receipt, as proof of purchase date is required to obtain warranty benefits. All warranty claims must be brought to the attention of the Company within the warranty period and no later than 30 days of the failure to perform. This warranty does not cover normal wear or damage caused by shipping, mishandling, misuse, accident, alteration, improper replacement parts, or other than ordinary household use. You may be required to return the product (with shipping prepaid by you) for inspection and evaluation. Return shipping costs are not refundable. The Company is not responsible for returns damaged or lost in transit. Unless otherwise specifically permitted by the operating instructions, this warranty applies to indoor household use only. In order to obtain service under this warranty, please contact the Company at the telephone number listed above or by filling out the Customer Service Inquiry Form located at [www.nostalgiaproducts.com](http://www.nostalgiaproducts.com). Warranty valid only in USA and Canada.

This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose, which are hereby excluded to the extent permitted by law. In no event shall the Company be liable for any indirect, incidental, consequential, or special damages arising out of or in connection with this product or the use thereof. Some states, provinces or jurisdictions do not permit the exclusion or limitation of incidental or consequential damages, so the foregoing exclusion or limitation may not apply to you.


**This warranty does not apply to re-manufactured merchandise.**

Please read the operating instructions carefully. Failure to comply with the operating instructions will void this

warranty.

For more information, visit us online at [www.nostalgiaproducts.com](http://www.nostalgiaproducts.com). Like us on Facebook at [www.facebook.com/NostalgiaElectrics](https://www.facebook.com/NostalgiaElectrics). Follow our boards on Pinterest at [www.pinterest.com/nostalgiaelctrx](https://www.pinterest.com/nostalgiaelctrx). Tweet along with us on Twitter at [www.twitter.com/NostalgiaElctrx](https://www.twitter.com/NostalgiaElctrx).

**Documents / Resources**

	<p><a href="#">NOSTALGIA NSCM525WH Snow Cone Maker</a> [pdf] Instruction Manual NSCM525WH, Snow Cone Maker</p>
---	--

Manuals+.