



# notabrick Ms Wireless Portable Speaker User Manual

[Home](#) » [notabrick](#) » notabrick Ms Wireless Portable Speaker User Manual 

## Contents

 
 
- [1 notabrick Ms Wireless Portable Speaker](#)
- [2 Accessory](#)
- [3 Button Configurations](#)
- [4 Parameter](#)
- [5 LED Indicator](#)
- [6 Bluetooth Pairing](#)
- [7 FCC STATEMENT](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

# notabrick

 
**notabrick Ms Wireless Portable Speaker**



**Accessory**

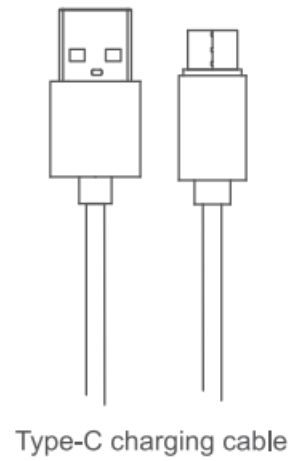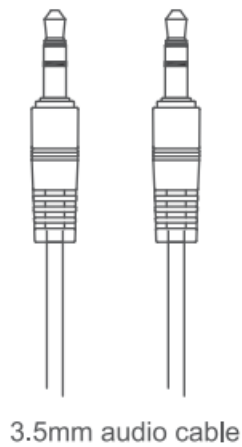



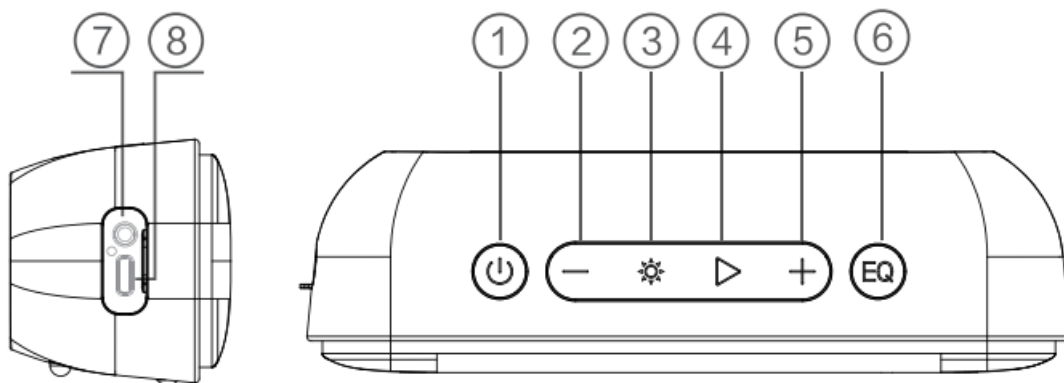




## Button Configurations



1. Power ON/OFF
2. Volume-/Previous Track
3. RGB Light
4. Play/Pause/Answer or Reject Phone Call
5. Volume+/Next Track
6. EQ Effect
7. AUX IN
8. Charging Port

## Parameter

- Bluetooth Version 5.0
- Transmission Range s20m (Open Field)
- Output Power 20W
- Battery 3.7V/1800mAH
- Power Supply Type-C 5V/1A
- Frequency Response 115Hz-15kHZ
- Distortion s1.0%
- Charging Time 3 hours

Key	Operation	Instruction
	Short Press	1. When the speaker is on and connected to a bluetooth device, short press once to activate voice Assistant.
	Long Press	1. When it' s off, press 2 seconds to turn on; 2. When it' s on, press 2 seconds to turn off.
	Short Press	Volume Down, 16 degrees in total
	Long Press	Previous track
	Short Press	1. Short press switch different RGB light 2. If the light is off, short press to turn on the light and default to the breathing light state
	Long Press	Long press is off the RGB light
	Short Press	1. In music playing state: short press to play/stop; 2. In incoming calls state: short press to answer calls; 3. In answering calls state: short press to hang up; 4. On bluetooth connected status: quick double click to dial the last dialed number
	Long Press	1. Long press 2 seconds enter pairing mode; 2. Long press 6seconds to automatic reset and power off when the speaker abnormal or crash
	Short Press	Volume Up, 16 degrees in total
	Long Press	Next track
	Short Press	1. Sound Effect Switch: Bass/ Outdoor 2. Quickly double-click to enter TWS connection, double-click again will disconnect TWS connection.
	Long Press	1. Switch: Bluetooth / AUX; 2. Press and hold for 6 seconds to clear the pairing information and restore the default volume with a tone, it will automatically shut down.

## LED Indicator

### White light indicator

- White light blinks when Bluetooth waiting for pairing; white light turn solid when Bluetooth is connected to the phone;
- Solid white when AUX mode, breath light when play and solid white when pause
- When TWS waiting for pairing, the white light blinks; when pairing is successful, the master speaker white light blinks, and the slaver is always on; when the mobile phone is connected, the master speaker white led light always on,breathe while playing.

### Blue light indicator:

EQ on blue light on; EQ off blue light off (default is off) speaker white led light always on,breathe while playing.

**Charging light indicator:**

The red light is always on when charging, the red light is off and the green indicator turns on when fully charged; the red light blinks when the battery is low.

**RGB light indicator**

1. Once the speaker is On, it will cycle through Red/Blue/Green/Yellow/Pink/Cyan/White lights by default.
2. Led light flicker follow with the music volume
3. Seven different color monochrome modes
4. RGB light effect switching sequence: Cycle through–Led light flickermonochrome modes
5. Long press to turn off the light, then short press to start from breathing

**Bluetooth Pairing**

Power on speaker the white LED will blinks, go to Bluetooth setting on your device, find “Notabrick Ms “select to pair.

**AUX Mode**

Insert the 3.5mm audio cable, the speaker will shift to AUX mode

**How to pair your device?**

1. Please make sure these two speakers to be paired disconnect from your bluetooth device before you turn them on. Then please turn on two speakers
2. Select either of the speakers. Quickly double-click” EQ to enter TWS connection, until you hear indicator tone
3. When TWS waiting for pairing, the white light blinks; when pairing is successful, the master speaker white light blinks, and the saver is always on; when the mobile phone is connected, the master speaker white led light always on,breathe while playing.
4. Select the searching mode on your device, When your device finds “Notabrick Ms”, select it and connect.
5. The LED indication light on both the speakers will turn white when your device is connected. They will perform as the stereo sounding system.
6. Once the speakers are well paired at the first time, they will be automatically paired next time without the above pairing operation.
7. If the speaker used to be paired, it is suggested to press “EQ” button for 6 seconds to forcibly cut off the power. Then restart and have the same speaker re-paired with the required new speaker according to the above instruction item 1-item 5.
8. When speakers are paired, double-clicking the “EQ” button again will disconnect the TWS connection;
9. When speakers are paired ,only the master speaker has hands-free function, and the slaver speaker is silent.

**FCC STATEMENT**

Federal Communications Commission (FCC) Statement. This device complies with part 15 of theFCC Rules. Operation is subject to the following twoconditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Warning: Changes or modifications made to this device not expressly approved by Shenzhen

Lenodell Technology Co., Ltd may void the FCC authorization to operate this device.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

**RF exposure statement:**

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

**Documents / Resources**

	<a href="#">notabrick Ms Wireless Portable Speaker</a> [pdf] User Manual MS, 2APEI-MS, 2APEIMS, Ms Wireless Portable Speaker, Ms, Wireless Portable Speaker, Portable Speaker, Speaker
--	---