



# NOTIFIER N-NCS Network Control Station Software Instructions

[Home](#) » [NOTIFIER](#) » NOTIFIER N-NCS Network Control Station Software Instructions 

## Contents

- [1 NOTIFIER N-NCS Network Control Station Software](#)
- [2 Absolute Minimum Hardware Requirements](#)
- [3 Software Configuration Requirements](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)



## NOTIFIER N-NCS Network Control Station Software



## **NCS Kit**

### **Hardware Requirements**

Product Installation Document

P/N 51689 Rev B 1/20/03

ECN 02-564

This document outlines the requirements for fielding a computer system capable of running the Notifier NCS software.

#### **Caution:**

The user-supplied system must meet the minimum system requirements.

The user must follow the detailed installation instructions set forth in this document. Notifier can not be held responsible or liable for any aspect of the user-supplied system operation and will not provide technical services of any kind. This kit and any PC in which it is installed does not have Underwriters Laboratories (UL ) listing, unless it is installed in a previously UL listed 400 MHz NCS or NRT computer

### **Absolute Minimum Hardware Requirements**

- NCS-NCW or NCS-NCF card (Refer to Document 51598 for configuration and installation instructions)
- 17-inch (measured diagonally) extended graphics adapter (XGA) display with a video resolution capable of supporting 1024 x 768 pixels
- Intel 400 MHz Pentium II or compatible
- 128 MB DIMM RAM
- 3.2 GB Hard Drive
- One PCI Slot (if NCS-NCW/F is not already installed)
- 512 KB Cache Memory
- Sound Card (Soundblaster Pro Compatible)
- 1.44 MB Floppy Drive with on-board floppy controller.
- 8 MB Video RAM, PCI-based AGP or XVGA
- Serial Printer (if printer is required, it must be serial)
- PS/2 Mouse
- 101-Key Keyboard
- Two Serial Ports, one Parallel Port
- 200 Watt Power Supply
- 8 GB Tape Backup or CDRW
- Internal, Case-mounted Speaker
- 32X CD ROM

### **Software Configuration Requirements**

- Paint Shop Pro or equivalent Graphics package to generate NCS Graphics
- See the NCS Manual (Document 51585) for configuration and installation instructions.

### **Operating Systems**

The NCS will only run on a system containing Microsoft® Windows NT® 4.0 with Service Pack 5, or on Windows® 2000 Professional with Service Pack 2.

Options

- Modem – Installation of a modem will invalidate UL listing.
- Microphone

## NOTE

Proper ESD grounding is required to the chassis of the computer.

Microsoft® Windows® and Windows NT® are registered trademarks of Microsoft Corporation

NCS Hardware Requirements P/N51689, Rev B 1/20/03

World Headquarters  
12 Clintonville Rd., Northford, CT 06472-1653 USA  
203-484-7161 • Fax 203-484-7118


[www.notifier.com](http://www.notifier.com)

NOTIFIER is a company

[www.PDF-Zoo.com](http://www.PDF-Zoo.com)

[firealarmresources.com](http://firealarmresources.com)

## Documents / Resources

	<p><a href="#">NOTIFIER N-NCS Network Control Station Software</a> [pdf] Instructions N-NCS Network Control Station Software, Network Control Station Software, Control Station Software, Station Software, Software</p>
---	--

## References

- [🔥 Fire Alarm Resources | Download fire alarm documents](#)
- [🏠 Home \(USA\) | NOTIFIER by Honeywell | Engineered Fire Alarm System.](#)