

 


Contents [[hide](#)]

- [1 Notion R023 LTE CPE Router](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Getting to know your router](#)
- [5 Installation](#)
- [6 Setting up a Wi-Fi connection](#)
- [7 Configuring your device](#)
- [8 For more help](#)
- [9 Safety information](#)
- [10 Cleaning and maintenance](#)
- [11 Warranty terms](#)
- [12 FCC Statement](#)
- [13 CONTACT](#)
- [14 FAQ](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)



Notion R023 LTE CPE Router

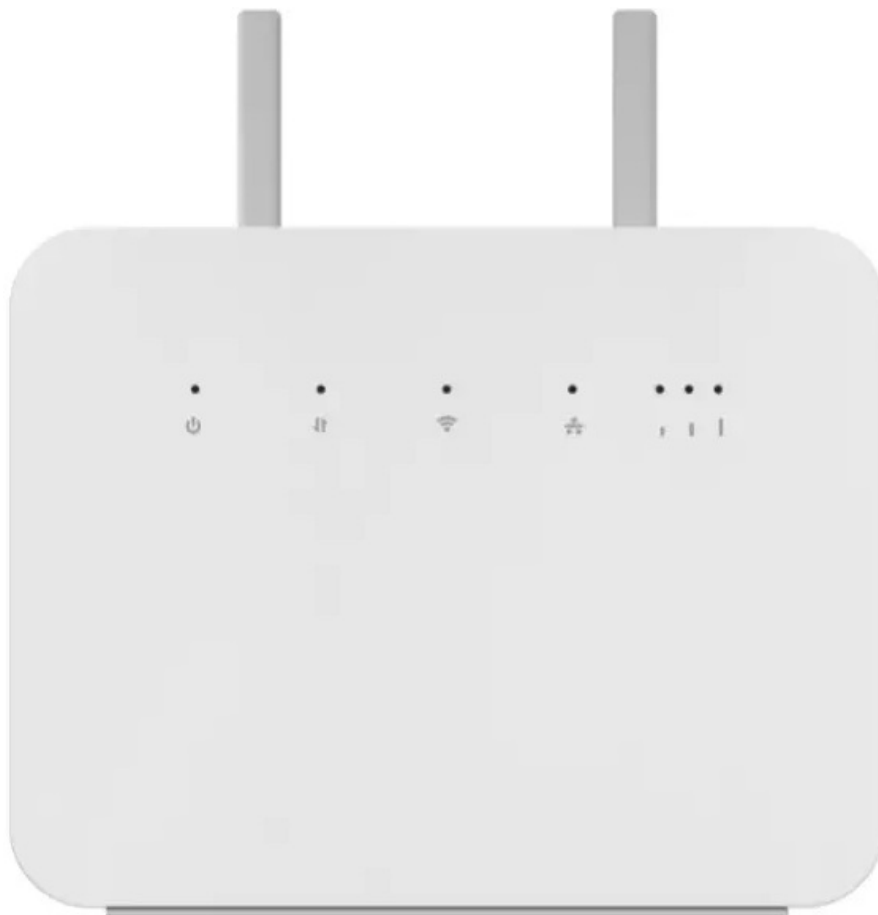

Product Information

Specifications

 
- Power indicator
- Network mode indicator
- Wi-Fi indicator
- LAN indicator
- Signal strength indicator
- LAN/WAN port
- SIM card slot
- WPS button
- Reset button
- USB port
- Power port
- Battery slot

Product Usage Instructions

- The power indicator displays different colors to indicate the device's status.
- The network mode and Wi-Fi indicators provide information about network and Wi-Fi connectivity.
- The LAN indicator shows the status of LAN ports and data transmission. The signal strength indicator displays the signal reception level.

Note: Charge the battery by connecting the power adapter to the device and pressing the power button on. Use only compatible adapters to prevent malfunctions or damage.

Getting to know your router

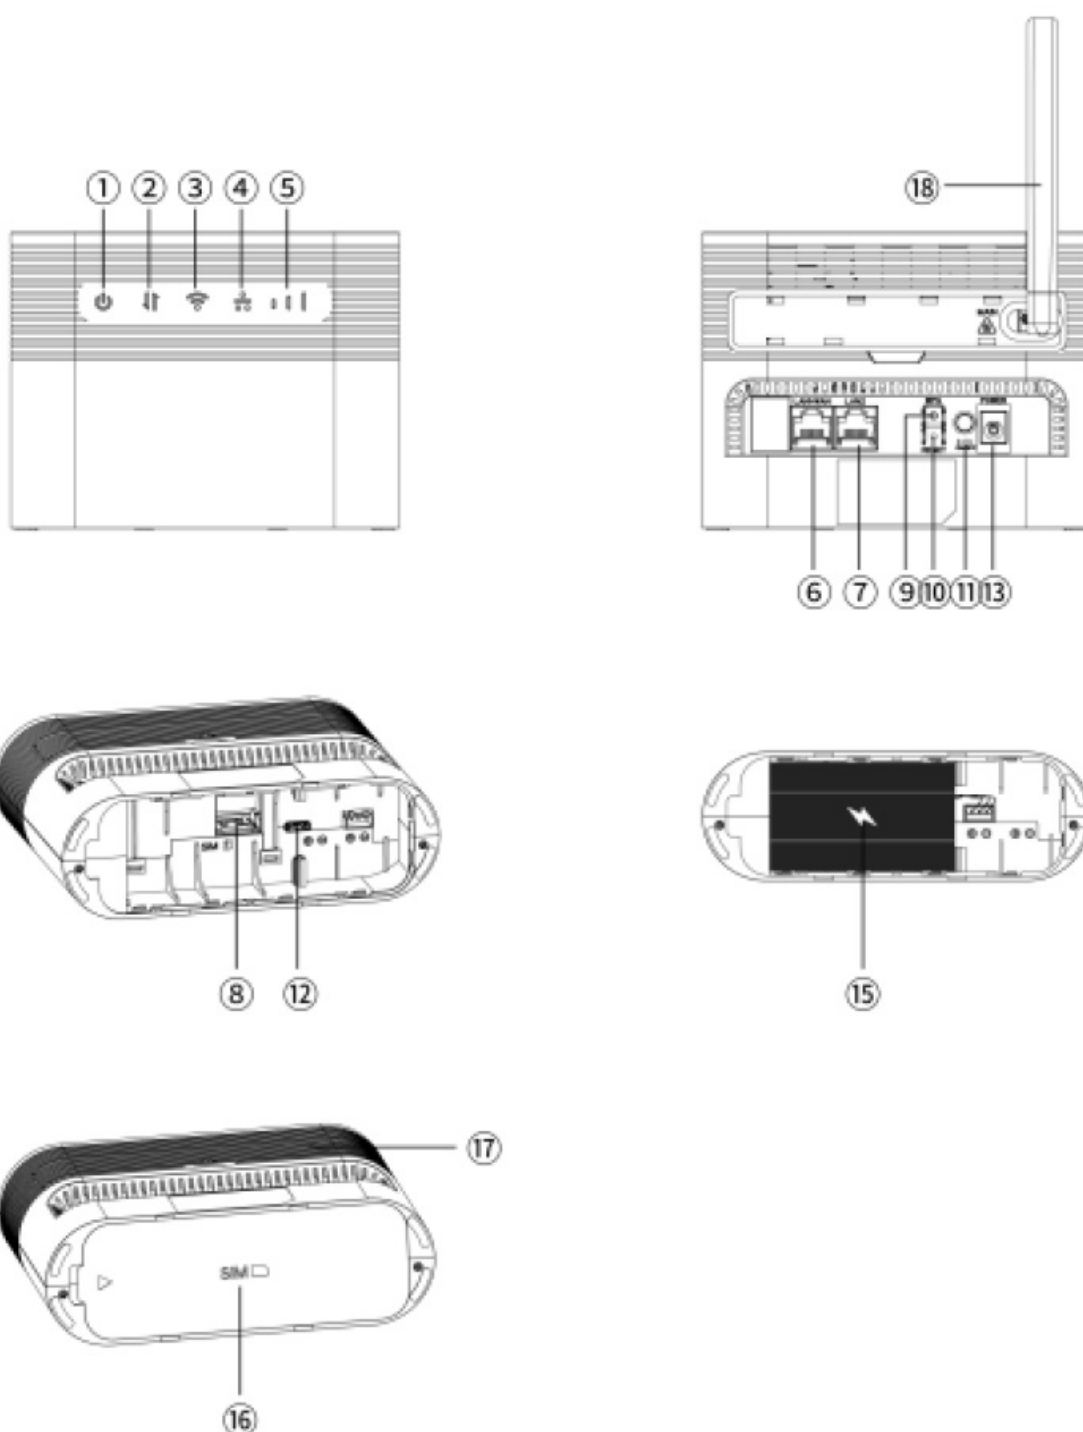

1. Powerindicator

On: The device is powered on

Steady Blue: Power on the device with the power adapter without a battery

Flickering Blue: No power adapter, and battery power is less than 20%

Steady Green: Charging full or no power adapter and battery power is more than 20%

Flickering Green: Charging the battery

2. Network mode indicator

Off: The device is powered off

Steady Green: Connected to a 4G/3G network. Flickering Green: 4G/3G data transfer

Steady Red:

- The SIM card is not recognized, the PIN has not been entered, or the PIN verification failed
- Failed to connect to a mobile network or an Ethernet network

Flickering Red: Searching for the network

3. Wi-Fi indicator

Steady Green: Wi-Fi is turned on

Flickering Green: WPS is connecting

4. LAN indicator

Off: Wi-Fi is turned off

Steady Green: At least one of the LAN ports is connected to a device

Flickering Green: Data is being transmitted through a LAN port

5. Signal strength indicator

Off: No device is connected to any LAN port

Steady Green: Signal reception available(more bars means better reception)

6. LAN/WAN port

Off: No reception

LAN/WAN automatic identification

Use as LAN: Connect to a computer, switch, or other LAN device

7. LAN port

Use as WAN: Ethernet access

Connect to a computer, switch, or other LAN device

8. SIM card slot

Install a standard SIM card to access the internet via an LTE data connection

9. WPS button

Press for 3 seconds to activate WPS connection when Wi-Fi is turned on

10. Reset button

!! Restoring the default settings of the device will erase all previous settings

When the device is powered on, press the reset button and hold for about 8 seconds to restore the device to its factory settings. After the factory defaults are restored, the device will restart automatically

11. Power button

Press the button to power the device on or off

12. USB port

Connect to a compatible USB cable Only for software upgrade

13. Power port

Connect to the compatible power adapter

14. Battery slot

Connect to compatible battery

15. Battery

Compatible battery

16. Backcover

Protect the SIM card slot and Battery

17. Antenna cover

Protect the antenna base

18. Antenna

External antenna of the device

 
(Non-standard accessories, specific to the purchased goods, if you have any questions, please contact the dealer)

Installation


Accessing the Internet using an LTE network

Step 1 Installing the SIM card


1. Power off your device
2. Slide off the back cover
3. Insert the SIM card into the card slot
4. Close the back cover

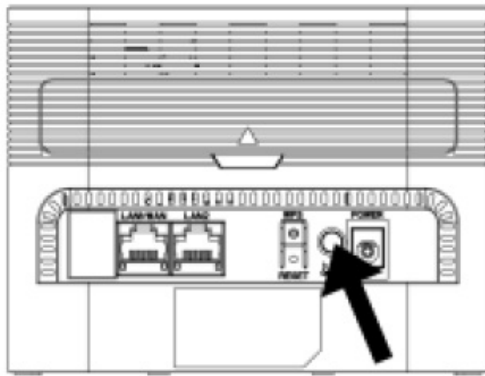


①

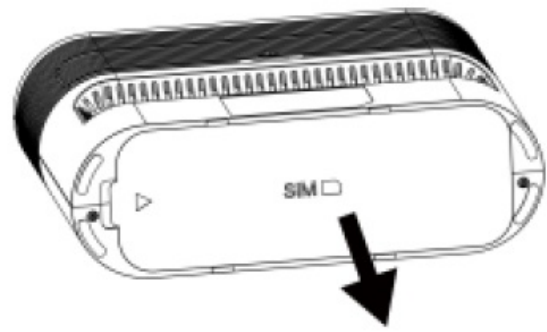 

②

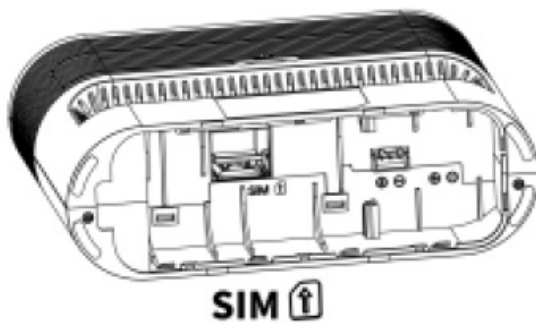 

③

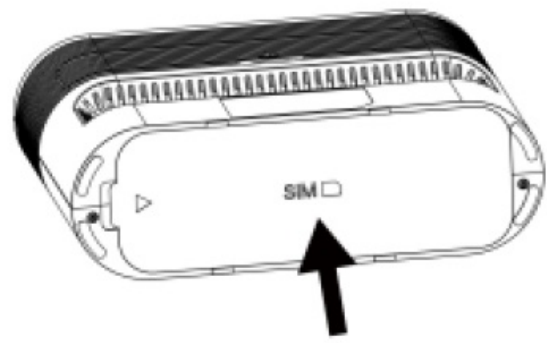 


④

- Do not remove the SIM card when it is in use, doing so will affect the performance of your device and data stored on the SIM card may be lost.

Step 2 Power on the device (by power adapter or battery)


Method 1: Power on the device with a power adapter

 - Press the power button on

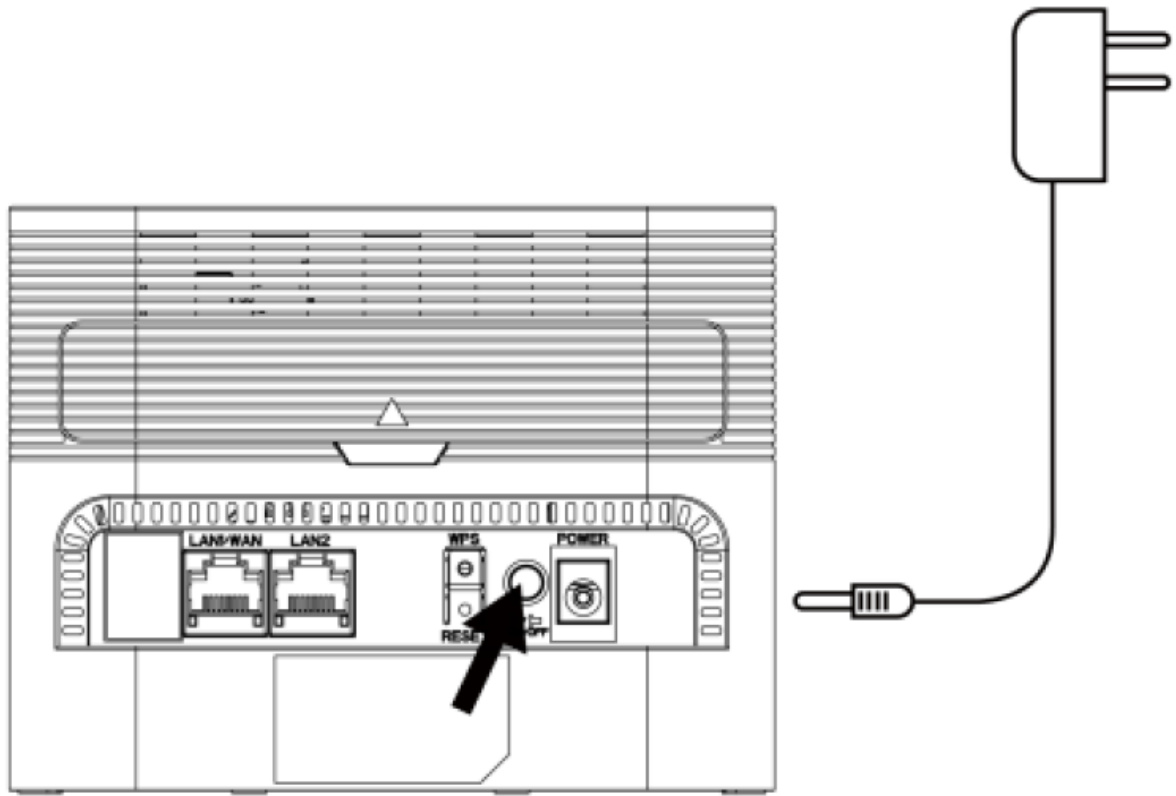


Method 2: Power on the device by battery

 1. Power off the device
2. Slide off the batteryback cover
3. Insert the battery into the battery slot
4. Close the batteryback cover, and press the power button on

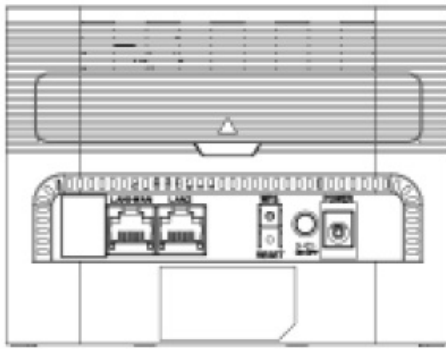


①

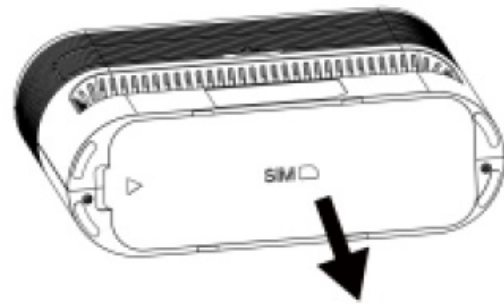 

②



 
③

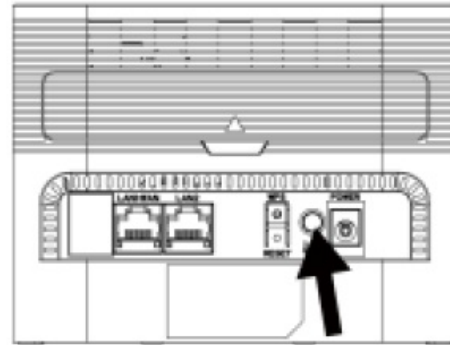


④

Note: Charging the Battery

 1. Power off the device
2. Slide off the batteryback cover
3. Insert the battery into the battery slot
4. Connect the power adapter to the device, and press the power button on

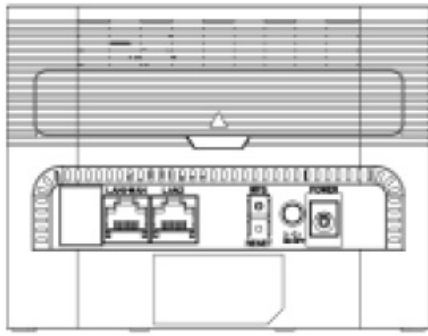


①

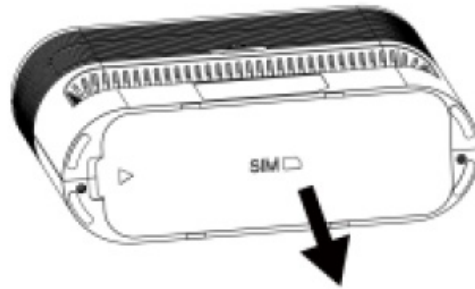 

②



 ③

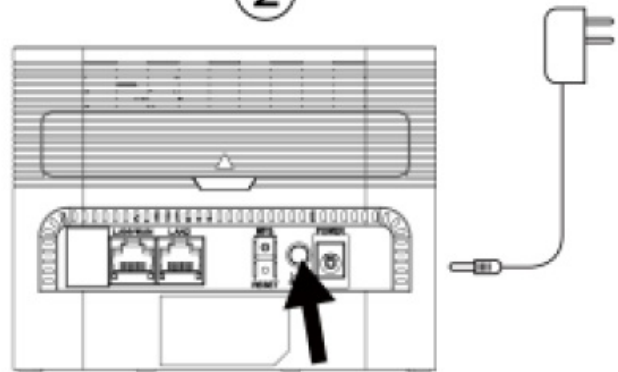

④

Use the power adapter to charge the device

- Only use adapters compatible with the CPE and provided by a designated manufacturer. Use of an incompatible adapter or one from an unknown manufacturer may cause the CPE to malfunction, fail, or even cause a fire. Such use voids all warranties, whether expressed or implied, on the product.
- The adapter is an optional accessory. If it is not included in the package, you may contact an authorized dealer to buy an adapter compatible with the CPE.

 
The CPE's adapter model is XXXXXX. For details about the specific adapter model, contact an authorized dealer.

Step 3 Connecting cables

To prevent interference caused by radio signals, place the device at least 1 meter away from the telephone and other electrical devices.

1. Power on the device by connecting the adapter

2. When the network mode indicator turns blue, your device has connected to 4G/3G network
3. Connect CPE to PC through a network cable, as shown in the figure below:

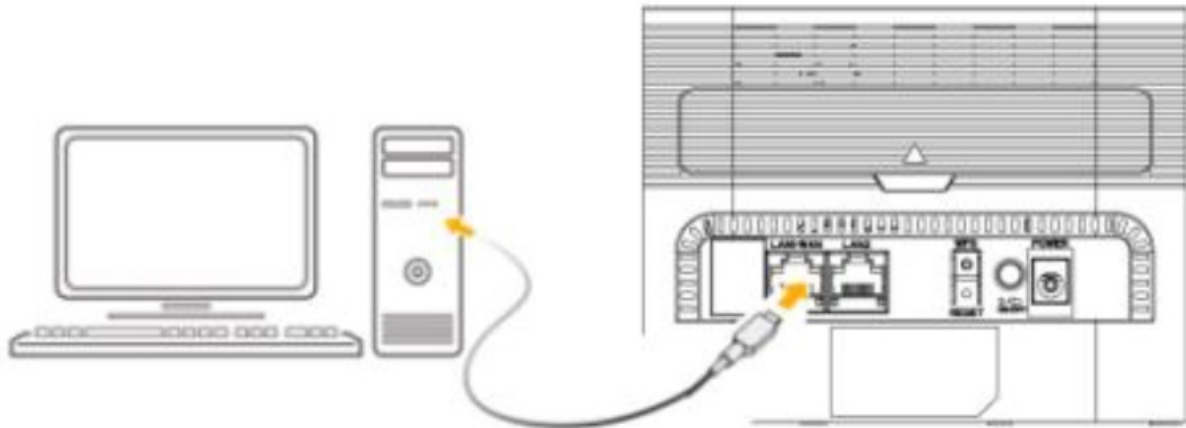

- Do not change another unexpected power adapter unless the manufacturer provides.
- For details about the specific adapter model, contact an authorized dealer.
- Once connected to a power outlet, press the power button to turn the device on.

Setting up a Wi-Fi connection

 
- Make sure your client (computer, tablet, or smartphone)also supports Wi-Fi.

Step 1 Enable Wi-Fi on the device

- When the Wi-Fi indicator is steady on, the Wi-Fi function of the device is turned on.
- For details about how to manually enable or disable the Wi-Fi function, refer to the WLAN settings section of the help information on the web management page.

Step 2: Recording the SSID and Wi-Fi key

- The default SSID and Wi-Fi key are printed on the device's bottom label.

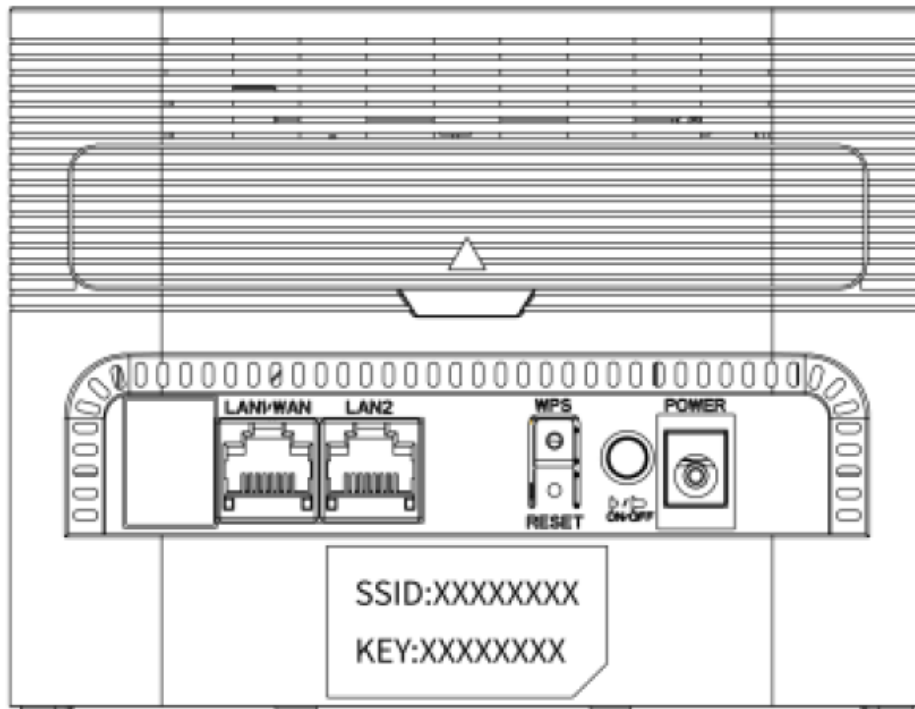

- To prevent unauthorized parties from accessing your Wi-Fi network, it is recommended that you change the SSID and Wi-Fi key from time to time. For details, see the help information on the web management page.

Step 3: Setting up a Wi-Fi connection on your client

Method 1: Setting up a Wi-Fi connection manually

1. From your Wi-Fi-enabled client, scan for wireless networks in your area
2. Connect to the network name that matches the SSID found on the device label
3. When prompted for the password, enter the Wi-Fi Key found on the device label. (The Wi-Fi key is case sensitive.) Your client will notify you when it is connected.

Method 2: Setting up a Wi-Fi connection through WPS

If the client supports WPS, you can set up a WPS connection as follows:

1. Ensure that Wi-Fi is enabled on the client
2. Press the WPS button for 3 seconds
3. Activate the WPS connection on the client in 2 minutes

!! For instructions about how to enable a WPS connection on the client, see the client's user guide.

Configuring your device

1. After a client is connected to the device through Wi-Fi or LAN port, launch a browser on the client and visit <http://192.168.1.1>
2. Enter the user name and password to log in to the web management page. The default user name and password are printed on the device's bottom label
3. Follow the quick setup wizard to check or set network connection parameters step by step. For details, see the help information on the web management page.
 - To protect your account, change the password after your first login. For details, see the help information on the web management page.
 - If you modify the SSID and Wi-Fi key, you must set up the Wi-Fi connection on the client again.

Once you are done, try opening a web page on the client to verify whether you have Internet access.

For more help

If you are experiencing any issues with the device, you can:

- Restart the device.
- See the help information on the web management page.
- Restore the device to its factory settings.
- Contact your service provider.

Figures in this guide are for your reference only. Specific models may vary slightly. contact your service provider for more detailed information.

Safety information

- This section contains important information about the operation of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic device

- Do not use your device if using the device is prohibited. Otherwise, it will cause danger or interference with other electronic devices.

Interference with medical equipment

- Follow the rules and regulations set forth by hospitals and health care facilities. Do not use your device where prohibited.
- Some wireless devices may affect the performance of hearing aids or pacemakers. Consult your service provider for more information.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If using a pacemaker, hold the device on the side opposite the pacemaker and do not carry the device in your front pocket.

Areas with flammables and explosives

- Do not use the device where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your device in these environments increases the risk of an explosion or fire. In addition, follow the instructions indicated in the text or symbols.
- Do not store or transport the device in containers with flammable liquids, gases, or explosives.

Operating environment

- Avoid dusty, damp, or dirty environments. Avoid magnetic fields. Using the device in these environments may result in circuit malfunctions.
- Before connecting and disconnecting cables, stop using the device and disconnect it from the power supply. Ensure that your hands are dry during operation.
- Place the device on a stable surface.
- Keep the device away from electronic appliances that generate strong magnetic or electric fields, such as a microwave oven or refrigerator.
- During thunderstorms, power off your device and remove all cables connected to it to protect against lightning strikes.
- Do not use your device during thunderstorms to protect your device against any

danger caused by lightning.

- Ideal operating temperatures are 0°C to +40°C. Ideal storage temperatures are -10°C to +60°C. Extreme heat or cold may damage your device or accessories.
- Keep the device and accessories in a well-ventilated and cool area away from direct sunlight. Do not enclose or cover your device with towels or other objects. Do not place the device in a container with poor heat dissipation, such as a box or bag.
- To protect your device or accessories from fire or electrical shock hazards, avoid rain and moisture.
- Keep the device away from sources of heat and fire, such as a heater, microwave oven, stove, water heater, radiator, or candle.
- Do not place any object, such as a candle or a water container, on the device. If any foreign object or liquid enters the device, immediately stop using it, and power it off, and remove all cables connected to it.
- Do not block device openings. Reserve a minimum of 10 cm around the device to dissipate heat.
- Stop using your device or applications for a while if the device is overheated. If skin is exposed to an overheated device for an extended period, low temperature burn symptoms, such as red spots and darker pigmentation, may occur.
- Do not allow children or pets to bite or suck the device or accessories. Doing so may result in damage or explosion.
- Observe local laws and regulations, and respect the privacy and legal rights of others.
- The device should be installed and operated with a minimum distance of 20 cm between the radiator and your body.
- Keep the device in a place with good reception. The distance between the device and other metal materials (such as metal brackets or metal doors and windows) should be greater than 25 cm and the distance between other devices should be greater than 30 cm.

Child's Child's safety

- Comply with all precautions with regard to the child's safety. Letting children play with the device or its accessories may be dangerous. The device includes detachable parts that may present a choking hazard. Keep away from children.
- The device and its accessories are not intended for use by children. Children should

only use the device with adult supervision.

Accessories

- Using an unapproved or incompatible power adapter may cause fire, explosion or other hazards.
- Choose only accessories approved for use with this model by the device manufacturer. The use of any other types of accessories may void the warranty, may violate local regulations and laws, and may be dangerous.

Power adapter safety

- The power plug is intended to serve as a disconnect device.
- For pluggable devices, the socket outlet shall be installed near the devices and shall be easily accessible.
- Unplug the power adapter from electrical outlets and the device when not in use.
- Do not drop or cause an impact to the power adapter.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- Do not touch the power cord with wet hands or pull the power cord to disconnect the power adapter.
- Do not touch the device or the power adapter with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.
- If your power adapter has been exposed to water, other liquids, or excessive moisture, take it to an authorized service center for inspection.
- Ensure that the power adapter meets the requirements of Clause 2.5 in IEC60950-1/EN60950-1/UL60950-1 and has been tested and approved according to national or local standards.

Cleaning and maintenance

- During storage, transportation, and operation of the device, keep it dry and protect it from collision.
- Keep the device and accessories dry. Do not attempt to dry it with an external heat

source, such as a microwave oven or hair dryer.

- Do not expose your device or accessories to extreme heat or cold. These environments may interfere with proper function and may lead to fire or explosion.
- Avoid collision, which may lead to device malfunctions, overheating, fire, or explosion.
- If the device is not going to be used for an extended period of time, power it off, and remove all cables connected to it.
- If anything unusual occurs (for example, if the device emits smoke or any unusual sound or smell), immediately stop using it, power it off, remove all cables connected to it, and contact an authorized service center.
- Do not trample, pull, or excessively bend any cable. Doing so may damage the cable, causing the device to malfunction.
- Before you clean or maintain the device, stop using it, stop all applications, and disconnect all cables connected to it.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device or accessories. These substances may cause damage to parts or present a fire hazard. Use a clean, soft, and dry cloth to clean the device and accessories.
- Do not place magnetic stripe cards, such as credit cards and phone cards, near the device for extended periods of time. Otherwise, the magnetic stripe cards may be damaged.
- Do not dismantle or remanufacture the device and its accessories. This voids the warranty and releases the manufacturer from liability for damage.

Environmental protection

- The device and its accessories (if included), such as the power adapter, headset should not be disposed of with household garbage.
- Please comply with local laws and regulations regarding the disposal of this device and its accessories, and support recycling.

Protection to Fix the Card

- Customer Name
- Customer Phone
- Purchase Date

- Product Model Number
- Customer Address
- Dealer signature
- User signature

Warranty terms

1. Within 7 days from the date of sale, if there is a performance failure, the product itself and the outer package must be kept intact (no scratches), and the same type of product can be replaced (subject to inspection), but the man-made damage is not included.
2. From the date of sale, the goods will be returned within seven days, replaced within 15 days and guaranteed for one year. Except for man-made damage. Accessories are not covered by the warranty.
3. Warranty service is only valid under normal use.
4. Man-made damage, including but not limited to self-dismantling, unsealing, water, liquid, falling, etc. Improper use and other external damage are not covered by the warranty. This card must be provided for warranty. If you fail to provide this card or alter this card without permission. The company has the right to make non-warranty treatment.

RF Spec.

WCDMA	
Operation Frequency:	Band 2: Band 5:
Maximum power(Band 2)	26dBm
Maximum power(Band 5)	23.39dBm
LTE	

Operation Frequency:	Band 2: Band4: Band 5: Band 7:
Maximum power(Band 2)	23.48dBm
LTE	
Operation Frequency:	Band 2: Band4: Band 5: Band 7:
Maximum power(Band 2)	23.48dBm
Maximum power(Band 4)	24.26dBm

Maximum power(Band 5)	23.63dBm
Maximum power(Band 7)	23.68dBm
WIFI2.4G	
Operation Frequency:	2412MHz~2462MHz
Maximum E.I.R.P.	18.17dBm

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.


CONTACT

- Manufacturer: Shanghai Notion Information Technology Co., Ltd.
- Address of Manufacturer: Room 408, Building 2, Grand Global R&D Center, Lane 666, Zhangheng Road, Pudong New Area, Shanghai, China

FAQ


- **Q: Can I use any power adapter to charge the device?**
 - **A:** It is recommended to use adapters compatible with the CPE provided by a designated manufacturer. Using incompatible adapters may cause malfunction or damage.
- **Q: How do I know if my SIM card is inserted correctly?**
 - **A:** Ensure that the SIM card is inserted into the card slot properly with the contacts facing down. Follow the user manual instructions for correct insertion.

Documents / Resources

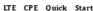	Notion R023 LTE CPE Router [pdf] User Guide R023, R023 LTE CPE Router, LTE CPE Router, CPE Router, Router
---	--

References

- [User Manual](#)

 CPE Router, LTE CPE Router, Notion, R023, R023 LTE CPE Router,
 Notion router

—Previous Post

[Notion M12 LTE CAT-1 Module Owner’s Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.