



## Nous E6 Smart ZigBee LCD Temperature and Humidity Sensor Instruction Manual

[Home](#) » [NOUS](#) » Nous E6 Smart ZigBee LCD Temperature and Humidity Sensor Instruction Manual 

### Nous E6 Smart ZigBee LCD Temperature and Humidity Sensor



## Contents

- 1 Introduction
- 2 Know about the sensor
- 3 Button
- 4 Screen
- 5 On the back
- 6 Quick Installation Guide
- 7 Documents / Resources
  - 7.1 References
- 8 Related Posts

## Introduction

You will need Nous Smart Home App. Scan the QR code or download it from **direct link**



Register with your mobile number/E-mail then login

ZigBee Hub/Gateway E1 is required

## Know about the sensor




## Button




- Enter configuration mode: Press and hold the button for 5 seconds until the screen blinks, the device will enter configuration mode.
- Shift C/F: Double-click to cycle switching between °C and °F temperature unit.
- Trigger to report: Single-click to report its current status to cloud server.

## Screen

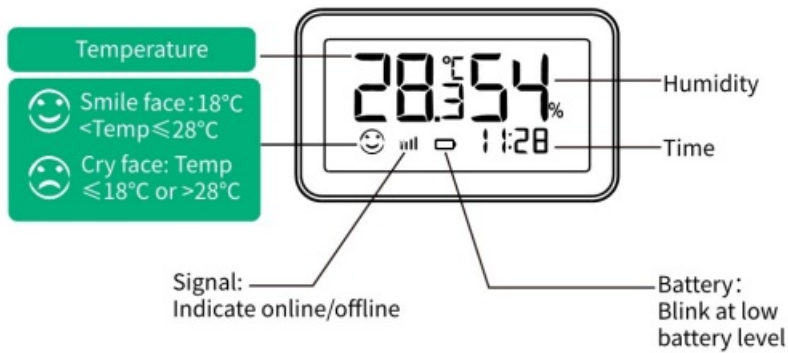

## On the back

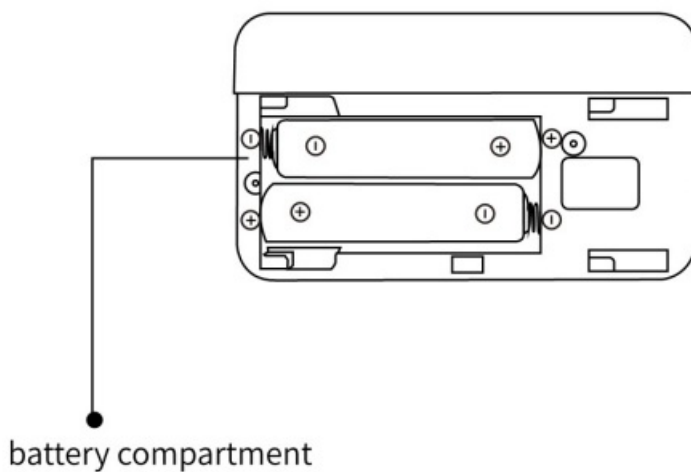


## Quick Installation Guide


**Note:** the smart gateway must be added first before adding the sub-device.

1. Power on the sensor.


1. Open the battery cover.

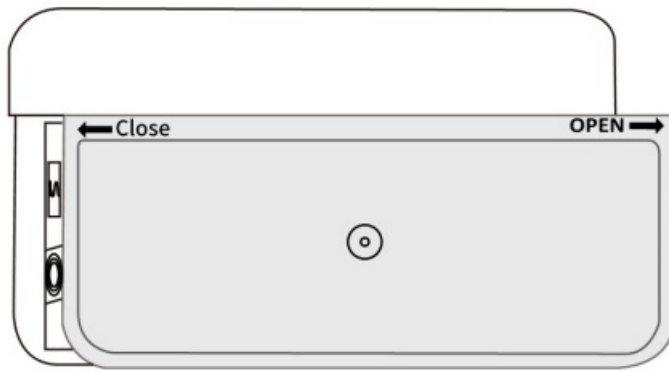


2. Insert the battery into the battery compartment (please note battery positive and negative).

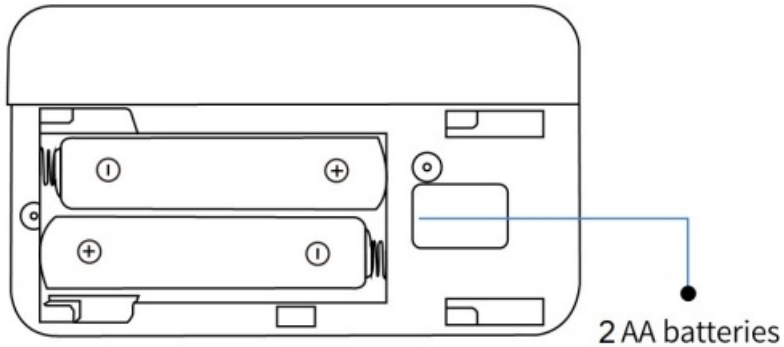

3. Close the battery cover.

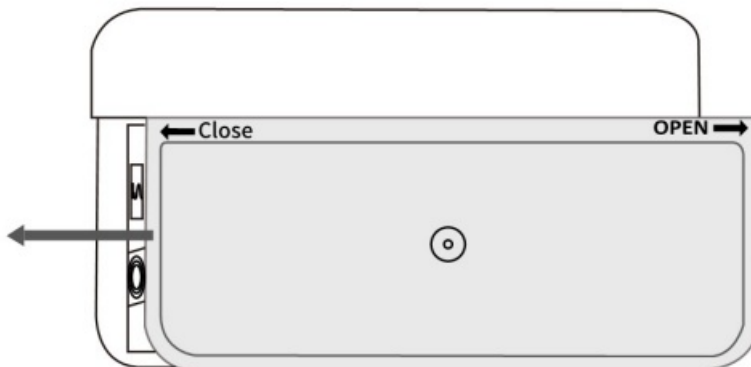

2. You will need Nous ZigBee GateWay/Hub. Open "Nous Smart Home" app, Enter the gateway homepage and click "Add subdevice".

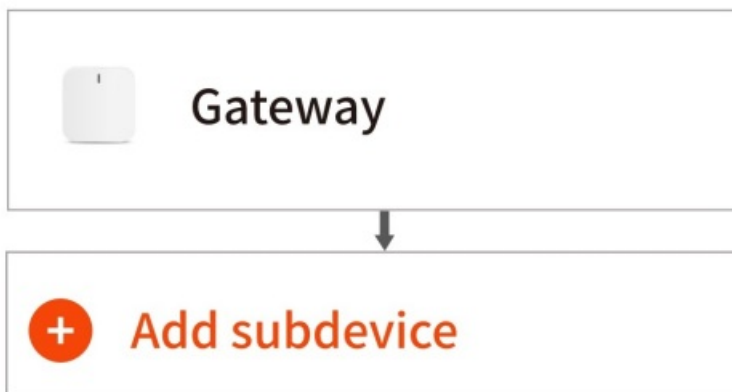


3. Press the reset button for 5 seconds, till the screen blink, then click the confirm button which shows and "LED already blink" follow the in-app instructions to connect the sensor to your gateway.



LED already blink

4. Waiting for a few seconds, This device is added successfully and you may rename it. Click “Done” to finish the setting.

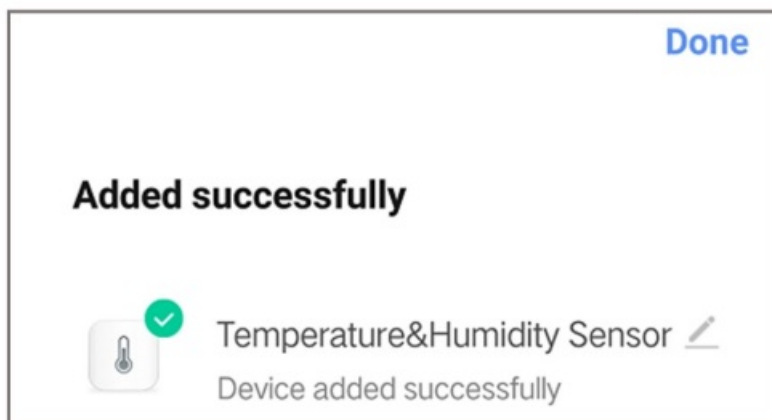


5. Put it where you need it.
6. Nour Smart Home app settings:
1. The temperature unit setting.



**Note: for the unit convert, it also can be converted by double -click the button.**

2. The temperature update sensitivity setting.

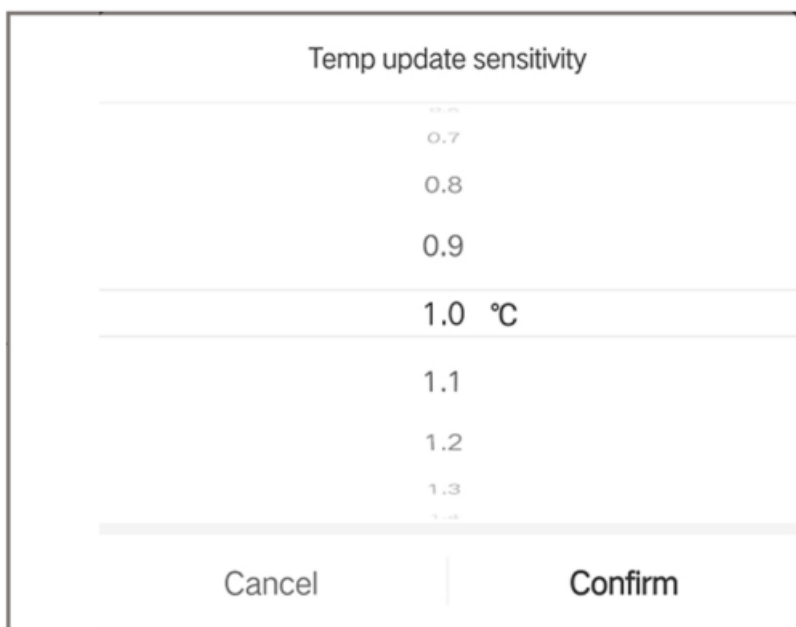


3. Limits setting of Low temperature alarm and High temperature alarm.



| Set minitemp | Set maxtemp |
|--------------|-------------|
| -10.3        | 39.7        |
| -10.2        | 39.8        |
| -10.1        | 39.9        |
| -10.0 °C     | 40.0 °C     |
| -9.9         | 40.1        |
| -9.8         | 40.2        |
| -9.7         | 40.3        |
| Cancel       | Confirm     |

4. Enable/disable alarm setting.


Set

High temperature alarm

☒


Low temperature alarm

☒

Low battery

☒

nous

|   |   |
|---|---|
|  | <p><a href="#">Nouis E6 Smart ZigBee LCD Temperature and Humidity Sensor</a> [pdf] Instruction Manual<br/>E6 Smart ZigBee LCD Temperature and Humidity Sensor, E6, Smart ZigBee LCD Temperature and Humidity Sensor, Temperature and Humidity Sensor, Humidity Sensor</p> |
|---|---|

References

- [Nouis Smart](#)