



Home » Novo Support » Novo Support 6.1 Disable Enable Touch Feature User Manual 🟗



Novo Support 6.1 Disable Enable Touch Feature



Contents [hide]

- 1 Disable/Enable touch feature
- 2 Disable Touch Feature
- 3 Enable Touch Feature
- 4 Documents / Resources
 - 4.1 References


Disable/Enable touch feature

For some use cases, you may want to temporarily disable or enable the touch feature. The following instructions show how to disable or enable it.

Disable Touch Feature

To disable touch, use a key combination on the remote control.


Press these buttons sequentially: Input Source, Input Source, then Vol down.

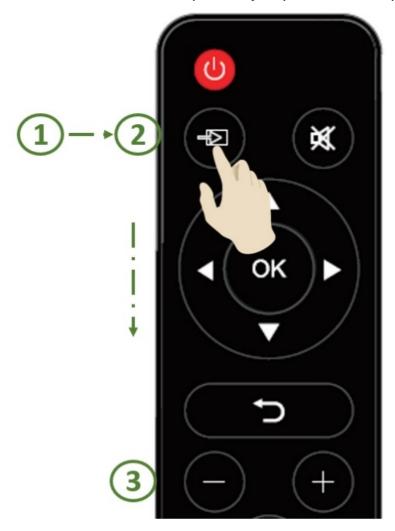

Enable Touch Feature

To enable touch, use a key combination on the remote control.

Press these buttons sequentially: Input Source, Input Source, then Vol up.

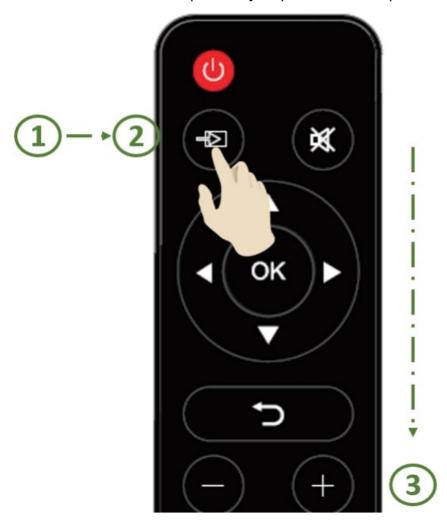

Documents / Resources

6.1 Disable/Enable touch feature Fit nome one cases, you may want to temporarily disable or makin the teach feature, the following instructions show has to disable or enable 21. Disable Touch Feature

1. Stadle teach, one a key endication on the result control.

From those bettern aspectfully: Open Source, Squet Source,

Novo Support 6.1 Disable Enable Touch Feature [pdf] User Manual

6.1 Disable Enable Touch Feature, Disable Enable Touch Feature, Enable Touch Feature, Touch Feature, Feature

References

• User Manual

Support

♦ 6.1 Disable Enable Touch Feature, Disable Enable Touch Feature, Enable Touch Feature, Feature, Novo Support, Touch Feature
Leave a comment
Your email address will not be published. Required fields are marked*

Comment *		
Name		
Email:		
Email		
Website		
Cove my name amail and website in this browser for the next time I sam	mont	
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	
	_ Godi on	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.