

[Skip to content](#)

## [Manuals+](#)

User Manuals Simplified.



# novopal Pure Sine Wave 2000 Watt Car Power Inverter Converter DC 12V to 120V AC Instructions

May 11, 2022 May 11, 2022 [Leave a comment on novopal Pure Sine Wave 2000 Watt Car Power Inverter Converter DC 12V to 120V AC Instructions](#)

[Home](#) » [novopal](#) » novopal Pure Sine Wave 2000 Watt Car Power Inverter Converter DC 12V to 120V AC Instructions 

Contents [hide](#)

[1 novopal Pure Sine Wave 2000 Watt Car Power Inverter Converter DC 12V to 120V AC](#)

[2 How to Ground an Inverter ?](#)

[3 Documents / Resources](#)

[3.1 Related Manuals / Resources](#)



novopal Pure Sine Wave 2000 Watt Car Power Inverter Converter DC 12V to 120V AC



## How to Ground an Inverter ?

### Grounding

The power inverter has a terminal on the back panel marked “Grounding” or “G”.

This is used to connect the chassis of the power inverter to the ground.

The ground terminal has already connected to the ground wire of AC output receptacle through the internal connecting wire. The ground terminal must be connected to the ground wire, which will vary depending on where the power inverter is installed.

## 1 In some fixed available position

Connect the ground terminal to the earth

A. Connect to household metal water pipes, metal frames (door frames, window frames) connected to the earth

## 2 Indoor conditions

B. Connect to the nails on the wall or ground which contact to the earth

C. Connect to the grounding system of the mains grid which is connected to the ground wire of the socket (Note: this

connection must be operated by a professional electrician)

## 3 Outdoor conditions

Connect one end of earth wire to the inverter grounding terminal, the other end to the nail and insert to the earth.

## 4 In a Vehicle, boat or ship

Connect to the chassis of vehicle or grounding system of boat ship.

### Warning:

- To make sure the firmness of the connection. The ground wire must be 14AWG ( 2.08mm<sup>2</sup> ) or even larger
- Do not operate the power inverter without connecting to ground. Electric shock hazard may result.

### Documents / Resources



[novopal Pure Sine Wave 2000 Watt Car Power Inverter Converter DC 12V to 120V AC \[pdf\]](#)  
Instructions  
Pure Sine Wave 2000 Watt Car Power Inverter Converter DC 12V to 120V AC

### Related Manuals / Resources

[XP Power GCU500 AC-DC Power Supplies Selector User Guide](#)

XP Power GCU500 AC-DC Power Supplies Selector User Guide





### [iTECH WORLD 1000W Pure Sine Wave Inverter Remote Control RC1 User Guide](#)

iTECH WORLD 1000W Pure Sine Wave Inverter Remote Control RC1 Introduction Thank you for purchasing the Techworld pure...



### [ELINZ INTPW24VRM2500 Pure Sine Wave Power Inverter User Manual](#)

PURE SINE WAVE INVERTER USER MANUAL Introduction The inverter is electronic equipment that can convert DC power (from...



### [AIMS Power DC to AC Pure Sine Power Inverter Instruction Manual](#)

www.aimscrop.net DC TO AC PURE SINE POWER INVERTER PWRI200012120S INSTRUCTION MANUAL ETL Listed to UL 458 and CSA...

#### Leave a comment

Your email address will not be published.

Comment

Name

Email

Website

Save my name, email, and website in this browser for the next time I comment.

#### [Manuals+](#)

- [home](#)
- [privacy](#)