

novus DigiRail-4C Digital Counter Input Module Instruction **Manual**

Home » Novus » novus DigiRail-4C Digital Counter Input Module Instruction Manual





DigiRail-4C **Digital Counter Input Module INSTRUCTION MANUAL** V1.1x F



Contents

- 1 INTRODUCTION
- **2 SPECIFICATIONS**
- 3 ELECTRICAL

INSTALLATION

- **4 CONFIGURATION**
- **5 WARRANTY**
- 6 Documents / Resources
 - 6.1 References
- 7 Related Posts

INTRODUCTION

The Modbus Module for Digital Inputs – **DigiRail-4C** is an electronic unit with four digital counter inputs An RS485 serial interface allows reading and configuration of these inputs, through communication network. It's appropriate for mounting on DIN 35 mm rails. The inputs are electrically insulated from the serial interface and the module supply. There is no electrical insulation between serial interface and supply. There is no electrical insulation between the inputs 1 and 2 (common negative terminal), as well as between the inputs 3 and 4. Configuration of the **DigiRail-4C** is performed through the RS485 interface by using Modbus RTU commands. The DigiConfig software allows the configuration of all features of the DigiRail as well as its diagnostics. The DigiConfig offers features for detecting the devices present in the Modbus network and for configuring the communication parameters of the **DigiRail-4C**. This manual provides the instructions for installation and connection of the module. The installer for DigiConfig and the documentation regarding Modbus communication for the **DigiRail-4C** (Communication Manual of the **DigiRail-4C**) they are available for download at **www.novusautomation.com**.

SPECIFICATIONS

Inputs: 4 Digital Inputs: Logical level 0 = 0 to 1 Vdc; Logical level 1 = 4 to 35 Vdc

Internal current limitation at the inputs: approximately 5 mA

Maximum count frequency: 1000 Hz for signals with square wave and working cycle of 50%. Input 1 can be

configured for counting signals of up to 100 kHz.

Counting capacity (per input): 32 bits (0 to 4.294.967.295)

Special countings: Capable of counting pulses in given time intervals (pulse rate) and retaining peak countings

in given time intervals (peak rate). Independent time intervals for both functions.

Power: 10 to 35 Vdc / Typical consumption: 50 mA @ 24 V. Internal protection against polarity inversion.

Electrical insulation between inputs and supply/serial port: 1000 Vdc for 1 minute **Serial communication:** RS485 at two wires. Modbus RTU protocol. Configurable parameters: Com

Serial communication: RS485 at two wires, Modbus RTU protocol. Configurable parameters: Communication speed: from 1200 to 115200 bps; Parity: even, odd or none

Key for restoring communication parameters: The RCom key, at the front panel, will set the device in diagnostics mode (address 246, baud rate 1200, parity even, 1 stop bit), able to be detected and configured by the DigiConfig software.

Frontal light indicators for communication and status:

TX: Signalizes that the device is sending data on the RS485 line; **RX:** Signalizes that the device is receiving data on the RS485 line;

Status: When the light is permanently on, this means that the device is in normal operation; when the light is flashing in a second interval (approximately), this means that the device is in diagnostics mode.

Software configurator in Windows environment: DigiConfig

Electromagnetic compatibility: EN 61326:2000

Operating temperature: 0 to 70 °C

Operational relative humidity: 0 to 90 % RH

Assembly: DIN 35 mm rail

Dimensions: Figure 1 shows the dimensions of the module.

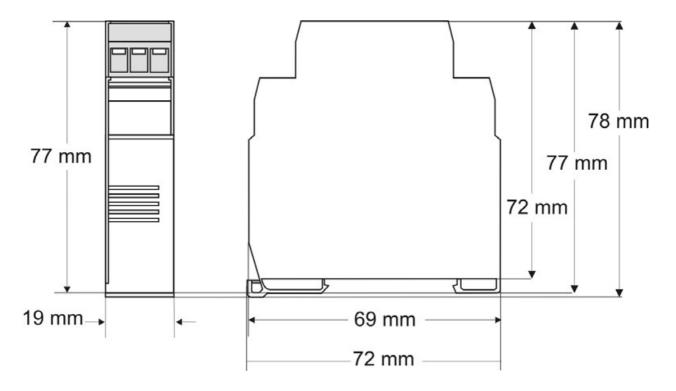


Figure 1 Dimensions

ELECTRICAL INSTALLATION

RECOMMENDATIONS FOR INSTALLATION

- Input and communication signal conductors must pass through the system plant separated from the electrical network conductors, if possible, in grounded conduits.
- The supply for the instruments must be provided from a proper network for instrumentation.
- In control and monitoring applications, it is essential considering what may occur if any of the system parts should fail.
- We recommend the use of RC FILTERS (47R and 100nF, series) in parallel with contactor and solenoid coils which are close or connected to **DigiRail**.

ELECTRICAL CONNECTIONS

Figure 2 shows the necessary electrical connections. The terminals 1, 2, 3, 7, 8 and 9 are intended for the input connections, 5 and 6 for the module supply and 10, 11 and 12 for the digital communication. For obtaining a better electrical contact with the connectors, we recommend the use of pin terminals at the conductors' end. For direct wire connection, the minimum gage recommended is 0.14 mm², not exceeding 4.00 mm².

Be careful when connecting the supply terminals to the DigiRail. If the positive conductor of the supply source is connected, even momentarily, to one of the communication connection terminals, the module may be damaged.

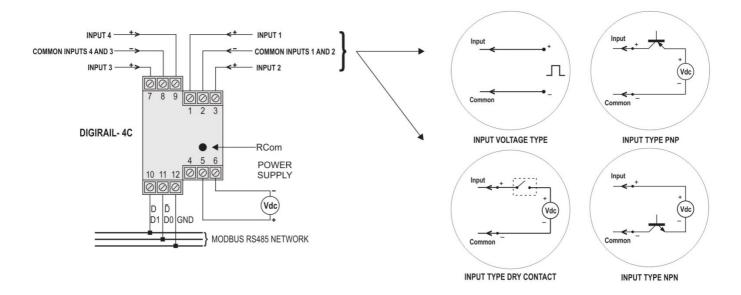


Figure 2 Electrical Connections

Table 1 shows how to connect the connectors to the RS485 communication interface:

| D1 | D | D+ | В | Bidirectional data line. | Terminal 10 |
|-----|----|----|---|--|----------------|
| D0 | -D | D- | Α | Inverted bidirectional data line. | Terminal 11 |
| С | | | | Optional connection which improves the | Terminal 12 |
| GND | | | | communication performance. | |

Table 1 RS485 Connections

Additional information regarding the connection and use of the communication network can be found in the Communication Manual of DigiRail-4C.

CONFIGURATION

The application **DigiConfig** is a program for Windows® used for configuration of the modules DigiRail. For its installation, run the **DigiConfigSetup.exe** file, available on our website and follow the instructions as shown. **DigiConfig** is provided with a complete help file, giving all the information necessary for its full use. For using the help feature, start the application and chose the "Help" menu or press the F1 key. Go to www.novusautomation.com in order to obtain the installer for DigiConfig and the additional product manuals.

WARRANTY

Warranty conditions are available on our web site www.novusautomation.com/warranty.

Documents / Resources



novus DigiRail-4C Digital Counter Input Module [pdf] Instruction Manual DigiRail-4C Digital Counter Input Module, DigiRail-4C, Digital Counter Input Module

References

- MOVUS Automation Inc. Controllers, Thermostats, Data Loggers, Solid State Relays, Sensors, Transmitters, SCADA, Data Acquisition and Temperature Controllers
- Marranty Company NOVUS Automation Inc.

Manuals+,