



nox-xtreme LITE2.5 USB 3.0 External Enclosure User Guide

[Home](#) » [Nox Xtreme](#) » nox-xtreme LITE2.5 USB 3.0 External Enclosure User Guide 

Contents

- 1 nox-xtreme LITE2.5 USB 3.0 External Enclosure User Guide
- 2 Package contents:
- 3 Hardware Setup
- 4 GENERAL RECOMMENDATIONS:
- 5 CLEANING:
- 6 IMPORTANT:
- 7 Read More About This Manual & Download PDF:
- 8 Documents / Resources
 - 8.1 References

nox-xtreme LITE2.5 USB 3.0 External Enclosure User Guide



This user guide provides the necessary information on how to set and use the 2.5" HDD/SSD USB 3.0 external enclosure. If extra information or support is needed, please go to our website at www.nox-xtreme.com and place your question through the contact form.

Package contents:

- USB 0 to HDD/SSD enclosure
- USB 0 cable
- User manual

Hardware Setup

- Connect your hard disk drive properly to the port connector on the HDD enclosure
- Connect the enclosure to your computer by USB cable
- The computer should now detect the new hardware. For Windows 2000 / XP / VISTA / 7 / 8 / 10, no driver setup is necessary. Please proceed to step “format your drive”.

Note:

Should use USB cable to connect the computer for providing extra power.

Hardware Installation (Windows 2000 / XP / VISTA / 7 / 8 / 10)

- No driver installation is
- The enclosure will be found on your computer

IMPORTANT: Each time before unplugging the HDD enclosure from your computer, Should stop the hardware from the system tray (located at the right-bottom corner of your computer screen), If you directly pull out the USB cable without STOP operation, it may cause data loss or hardware damage.

Format your Hard Drive (Windows 2000 / XP / VISTA / 7 / 8 / 10)

For an un-partitioned or un-formatted new HDD drive, it normally does not automatically appear in “My Computer” the first time. Please follow these steps:

1. Right click on the “My Computer” icon,click “Manage” to initialize the Disk Management program.You can also click “Start” -> ”Control Panel” -> ”Administrative Tools” -> “Computer Management”).
2. Please click “disk management” ,right click the “Unallocated” disk and point the “new partition”.

(The HD appears unallocated only when your HD is not partitioned. If your HD has been partitioned and formatted,please skip this part.)

3. Follow up the installation of “Partition Wizard” to operate the disk of partition and
4. When this window shows,please select “Format this partition with the following settings” and check “Perform a quick format”,then click the “Next” button.
5. Finish the
6. Click “My Computer” and confirm that the new “ Removable” icon The External Enclosure with hard disk drive is now ready for use.

All safety warnings give specific details of the potential danger/warning present and indicate how to reduce risk of injury, damage resulting from improper use of the product.

Carefully observe the following instructions:

- Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations.
- Do not repair or replace any part of the appliance unless specifically stated in the user
- The appliance must be disconnected from the power supply before carrying out any installation work
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot
- The product is not intended for use by persons (including children) with any physical, sensory or mental impairment, or without experience and knowledge of the appliance, unless supervised or previously instructed in its use by those responsible for their
- Children must be supervised to ensure they do not play with the
- This product is not suitable for outdoor

GENERAL RECOMMENDATIONS:

Before use:

Remove cardboard protection pieces, protective film and adhesive labels from accessories. Children must be supervised during the process to avoid any risk of suffocation.

Check the appliance for any transport damage.

During use:

To avoid any damage do not place any weights on the appliance. Do not expose the appliance to atmospheric agents.

CLEANING:

IMPORTANT:

Do not use corrosive or abrasive detergents. If any of these products accidentally comes into contact with the appliance, clean immediately with a damp cloth. Do not clean or open the product while when any power cables are attached.


Clean the surfaces with a damp cloth. Finish off with a dry cloth.

IMPORTANT:

Do not use abrasive sponges or metallic scrapers or scourers. Over time, these can ruin the surface.

Read More About This Manual & Download PDF:

Documents / Resources

	<p>nox-xtreme LITE2.5 USB 3.0 External Enclosure [pdf] User Guide wwonku02na-nox_2.5HHD, LITE2.5 USB 3.0 External Enclosure, USB 3.0 External Enclosure, External Enclosure, Enclosure</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.