

NS
CD
**NCSD-318PV2
Radio Control
Operator
Transmitter**



NSCD NCSD-318PV2 Radio Control Operator Transmitter User Manual

[Home](#) » [NSCD](#) » NSCD NCSD-318PV2 Radio Control Operator Transmitter User Manual 

Contents

- [1 NSCD NCSD-318PV2 Radio Control Operator Transmitter](#)
- [2 Using Instruction](#)
- [3 FCC NOTE](#)
- [4 Figures](#)
- [5 Specifications](#)
- [6 FAQs](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

NS
CD

NSCD NCSD-318PV2 Radio Control Operator Transmitter



Using Instruction

INSTRUCTIONS FOR RADIO CONTROL OPERATOR TRANSMITTER

MODEL NO.: NCSD-318PV2

Read the following instructions thoroughly before using the transmitter. This transmitter must be adjusted so that the coding switches match the coding switches on your present operating transmitter or receiver.

Remove the transmitter cover

Remove the access cover from the front of the transmitter by sliding the cover away from the top of the transmitter(Figure A). This will expose the battery and the dip switches. The code can be changed using a small screwdriver.

Setting the code

You may set your transmitter to any code you desire, but be sure the code you set matches on both your transmitter and receiver. There are 8-bit dip switches on your transmitter, each of which can be placed in three different positions(+,0,-). Do not set all switches in the same position, such as all + , all – , all 0(Figure B).

WARNING: No other adjustments should be made inside the transmitter. Now that you have selected your personal code, replace the transmitter cover. The user can click the button. A signal is transmitted out. If the inside dip switch match the receiver switch, the receiver will work.


FCC NOTE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)this device may not cause harmful interference,and (2) this device must accept any interference received, including interference that may cause undesired operation. THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE MODIFICATIONS CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

- By Email: sales@northshorecommercialdoor.com

Figures

- **Figure A:** Diagram showing the removal of the transmitter cover.
- **Figure B:** Diagram showing the dip switch positions labeled 1 to 9 with positions +, 0, and -.

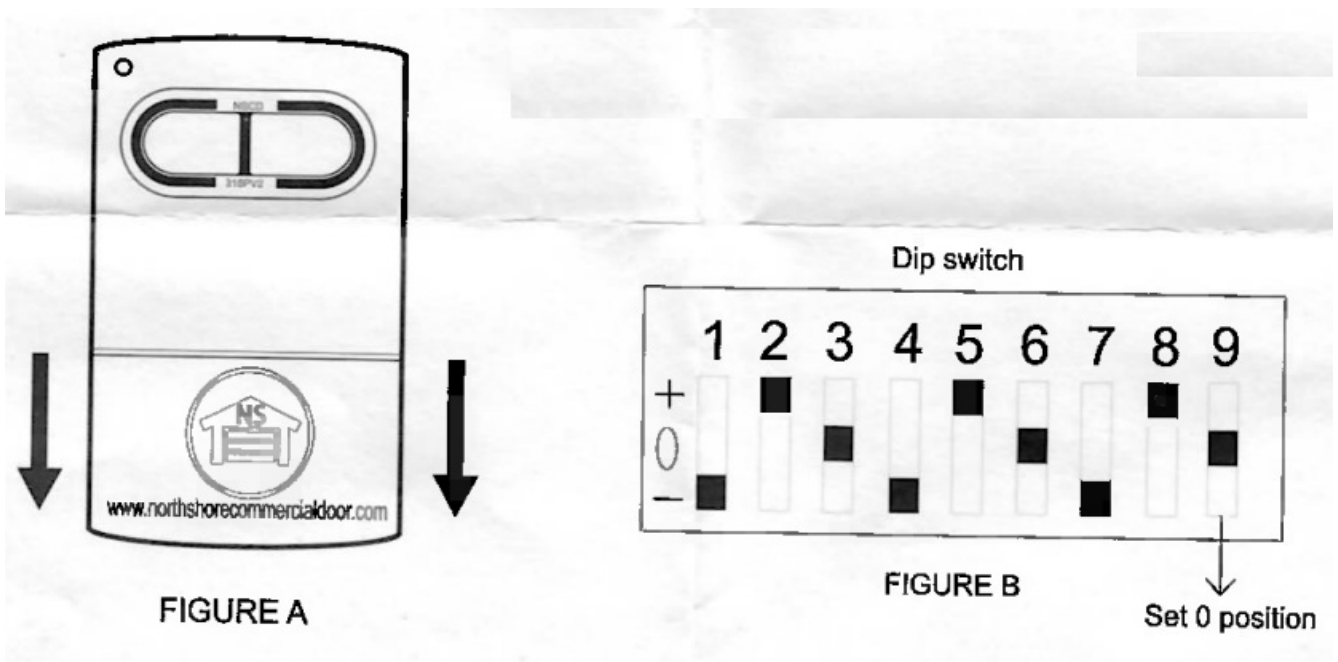

Contact Information

By Email: sales@northshorecommercialdoor.com

- North Shore Residential Door
- 162 Edgewood Street
- Elyria, Ohio 44035
- Phone: [800-783-6112](tel:800-783-6112)
- Fax: [440-365-3514](tel:440-365-3514)

Specifications

Model Number	NCSD-318PV2
Dip Switch Positions	+, 0, -
FCC Compliance	Part 15

FAQs

How do I remove the transmitter cover?

Slide the cover away from the top of the transmitter as shown in Figure A.

What should I do if the transmitter does not work?

Ensure that the dip switch settings on the transmitter match those on the receiver.


Can I set all dip switches to the same position?

No, do not set all switches in the same position, such as all +, all -, or all 0.

What happens if I modify the transmitter?

Unauthorized modifications could void your authority to operate the equipment and may cause interference.

Documents / Resources

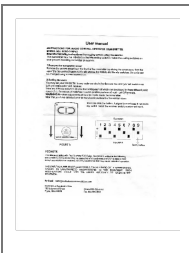

[NCSD NCSD-318PV2 Radio Control Operator Transmitter](#) [pdf] User Manual
318PV2, NCSD-318PV2 Radio Control Operator Transmitter, NCSD-318PV2, Radio Control Operator Transmitter, Operator Transmitter, Transmitter

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.