

nulaxy NX10 Bluetooth FM Transmitter for Car User Manual

Home » Nulaxy » nulaxy NX10 Bluetooth FM Transmitter for Car User Manual

Contents [hide


- 1 nulaxy NX10 Bluetooth FM Transmitter for
- Car
- **2 Product Diagram**
- 3 Package Contents
- **4 Control Functions**
- 5 How to Use
- **6 Important Note**
- 7 Warranty
- 8 FCC ID STATEMENT
- 9 Correct Disposal of This Product
- **10 IC STATEMENT**
- 11 Documents / Resources
- **12 Related Posts**



nulaxy NX10 Bluetooth FM Transmitter for Car



Product Diagram

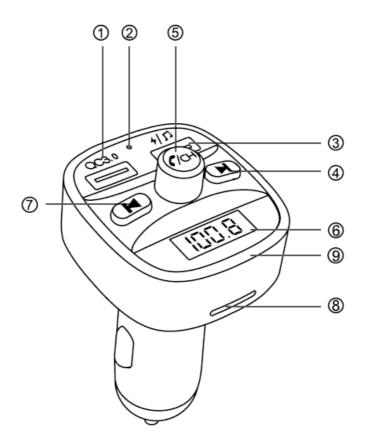

- 1. QC3.0 Charging Port
- 2. Microphone
- 3. USB Reading Port: Supports USB flash drive (Max 32GB)
- 4. Next Song

- 5. Multifunction Button: Play/ Pause/ Answer / Reject / Hang up phone calls
- 6. LED Display Screen
- 7. Previous Song
- 8. MicroSD Card Port: Supports microSD card (Max 32GB)
- 9. RGB Light Button

Package Contents

- 1 * NX10
- 1 * User Manual

Control Functions

- Play/ Pause/ Answer/ Hang up phone calls: Press the multifuction button once.
- Reject Calls: Press the multifuction button and hold for 2 seconds. Redial Call: Press twice the multifuction button.
- **Previous** / + **Next Track** : Press the Previous/ Next button.
- Previous /+Next Frequency: Long pess the multifunction button about 3 seconds to enter into FM mode, then you can adjust the frequency by rotating the knob button or press Previous / Next to increase or decrease fm frequency.
- **Volume+**/-: Rotate the multifunction button to adjust the volume.
- RGB Light Button: You can press the switch to select LED Backlit light from Red/ Green/ Blue/Yellowish Green/ Purple/ Cyan/ White.

How to Use

- 1. Plug NX10 into your car cigarette lighter, it will turn on automatically and show the battery level of your car.
- 2. The bluetooth logo() on the screen will be blinking, that means the NX10 is ready to connect;
- 3. Turn on your phone's Bluetooth and select "NX10" and pair to it.
- 4. After connected, the bluetooth logo() on the screen will not blink and shows the fm frequency;
- 5. Tune the car FM radio to a blank FM station;
- 6. Choose the same radio frequency between the NX10 and the audio system of your car and you will be fully connected (Radio Frequency start in 88.1-107.9MHz (US&CA) / 87.5-108.0MHz (UK));
- 7. Then open the music player or navigation on your smart phones, it can transmit the phone calls, music or navigation to the car stereo system.
- 8. Insert the USB flash drive/MicroSD Card into the NX10, it will automatically detect and play the MP3/WMA/FLAC/WAV format music.
- 9. You can long press the "Next" button about 2 seconds to switch music source between Bluetooth, USB flash drive and microSD card. When choose Bluetooth, you have to press play button to start the music.

Important Note

1. 1NX10 will connect to the last paired device automatically when turn it on next time. (Tum on the Bluetooth of your device first, and then turn on the NX10.)

- 2. For the best audio quality, please turn the volume of your device and FM transmitter to the max level.
- 3. For Noise If the audio has too much noise, please select another radio frequency, maybe the chosen frequency is occupied by a radio station or have too much interference.
- 4. For Unstable Connection Please firstly try with another phone or tablet.
- 5. To prevent your car battery from being drained, please be sure to remove the NX10 from the car cigarette lighter after use.

Warranty

This product has 60 days free replacement warranty.

FCC ID STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator your body.

Correct Disposal of This Product

(Waste Electrical& Electronic Equipment)
This Marking shown on the product or its literature,
indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources Household user should contact either the retailer where they purchased this product or their local government office, for details of where and hew they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contact This product should not be mixed with other commercial wastes for disposal.

IC STATEMENT

Any Changes or modifications not expressly approved by the that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including

Documents / Resources



nulaxy NX10 Bluetooth FM Transmitter for Car [pdf] User Manual NX10, Bluetooth FM Transmitter for Car, FM Transmitter for Car, FM Transmitter, NX10, Transmi tter

Manuals+, home

privacy