

NUM AXES CAM1071 360 Degree Security Camera



# NUM AXES CAM1071 360 Degree Security Camera User Manual

[Home](#) » [NUM axes](#) » NUM AXES CAM1071 360 Degree Security Camera User Manual 

## Contents

- 1 NUM AXES CAM1071 360 Degree Security Camera
- 2 Contents of the product
- 3 Product presentation
- 4 Initial use
- 5 Downloading the application and connecting
- 6 Presentation of the application home page
- 7 Real-time monitoring and playback
- 8 360° camera control
- 9 System settings
- 10 Wall mounting instructions
- 11 Instructions for aiming the camera
- 12 Technical specifications
- 13 After-sales service
- 14 Guarantee conditions
- 15 Documents / Resources
  - 15.1 References
- 16 Related Posts

**NUMAXES**  
PROTECTION

 
 
NUM AXES CAM1071 360 Degree Security Camera



## Contents of the product

- 1 CAM1071 camera
- 1 solar panel
- 1 solar panel bracket
- 2 antennas
- 1 Type-C charging cable
- 1 metal wall mount
- 2 packs of screws and dowels
- 1 Phillips screwdriver
- 1 hex key
- 1 user guide


## Product presentation

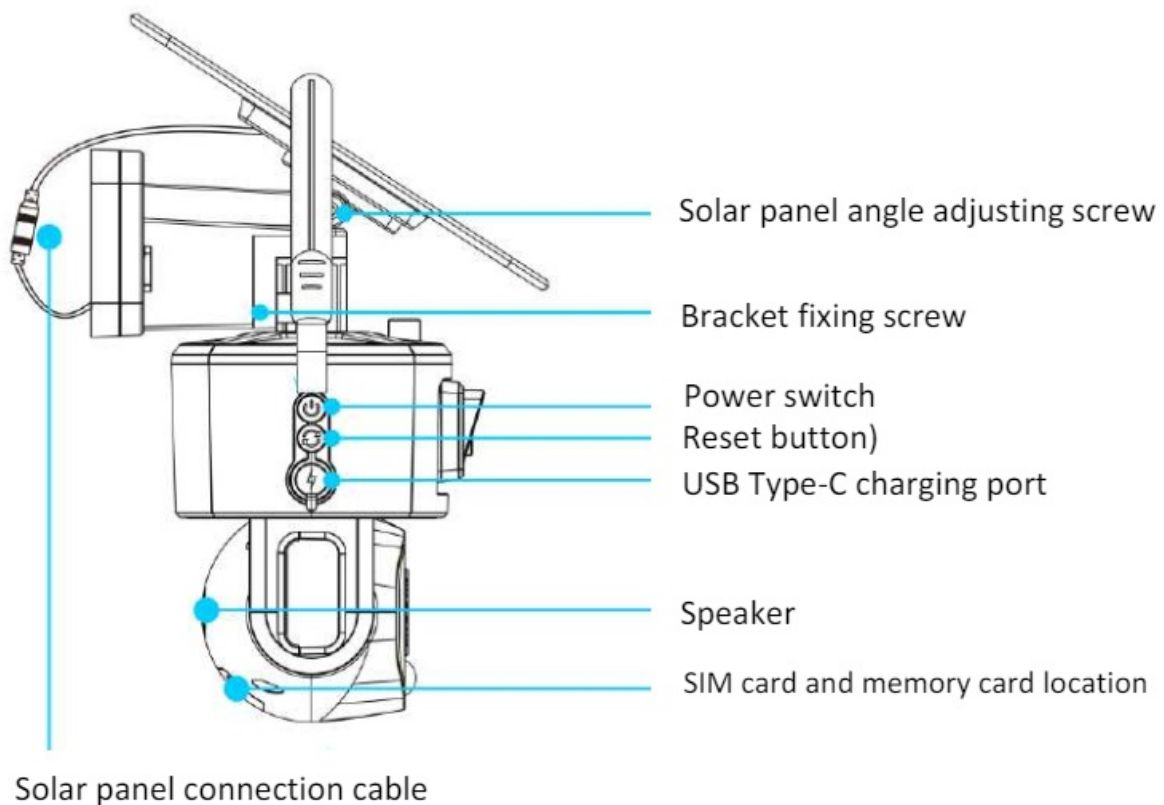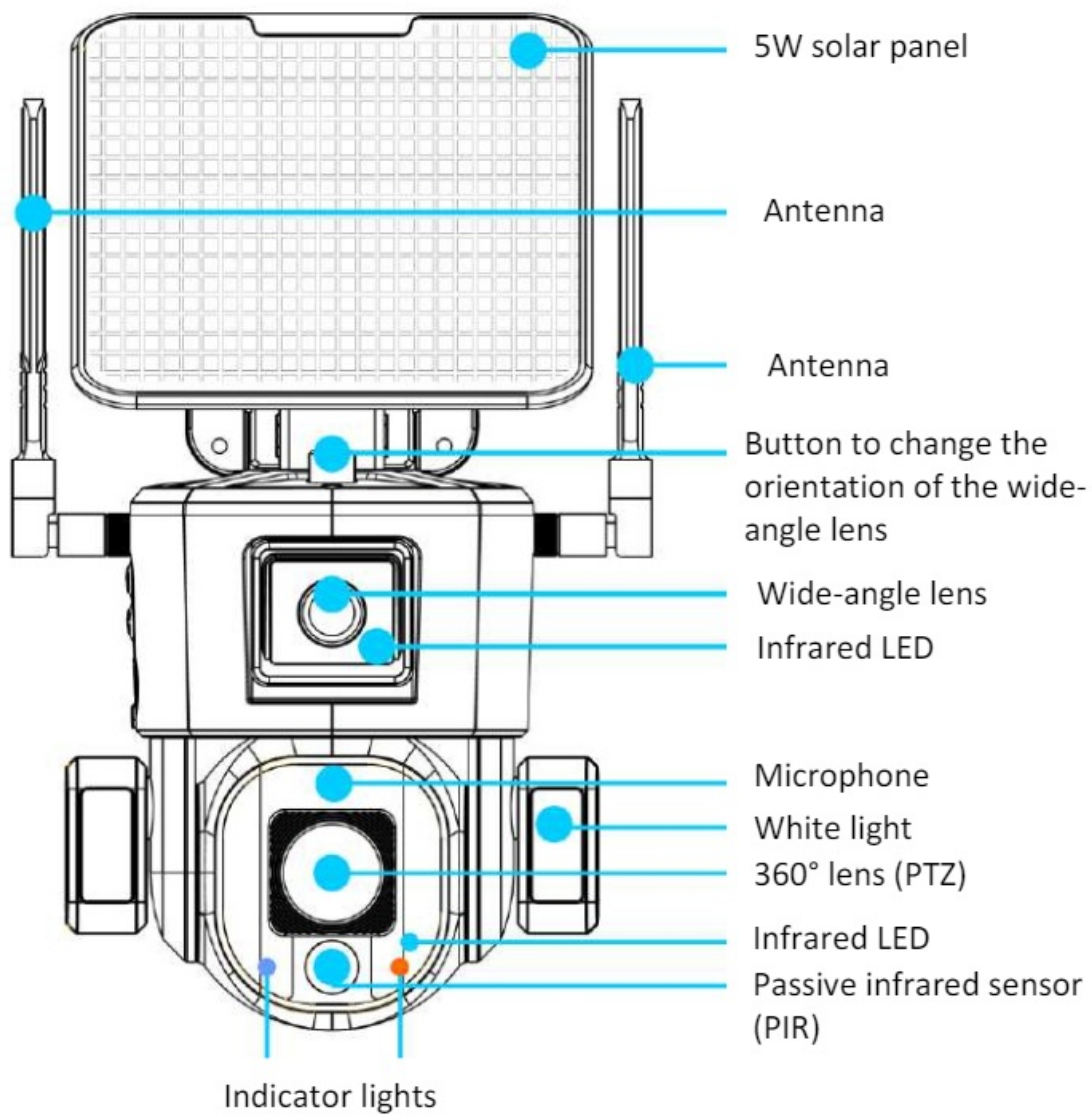

## Initial use


### Antennas

 - Install the antennas on the camera.

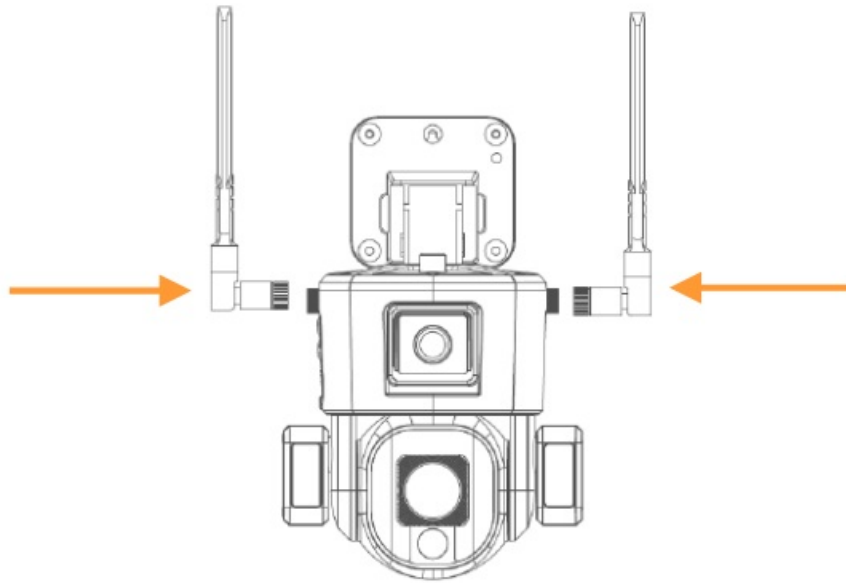


### Battery charge

 For optimal use from the first usage, charge the camera battery for 10 hours before use. Refer to the diagram below illustrating the wiring to be done for charging.

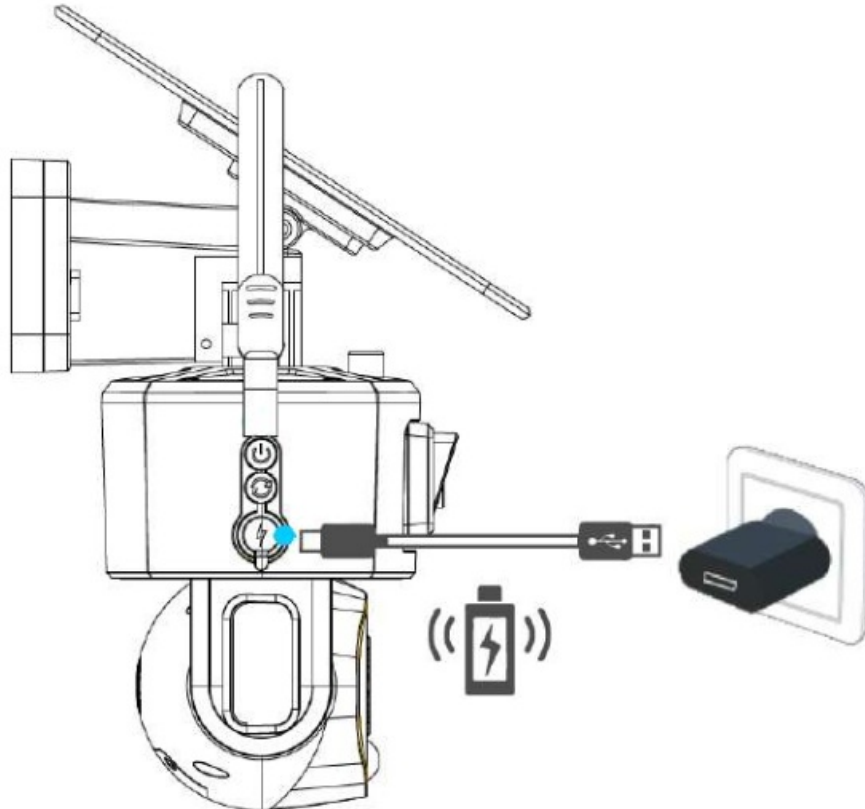

### SIM card and memory card

 Open the small hatch located at the back of the camera by unscrewing the 2 screws then insert the SIM card and memory card following the diagram below. Before replacing the hatch, check the presence of the seal in its groove.

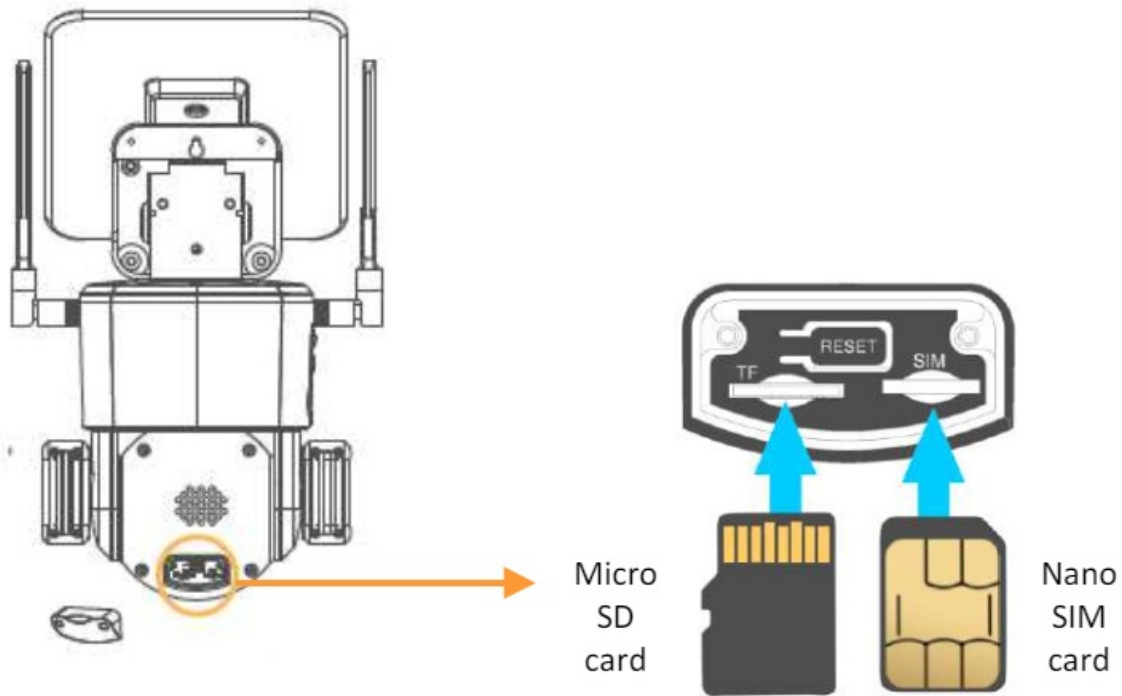


**4G SIM card:** nano-SIM card – Minimum 5 GB data plan recommended Using a smartphone, you must deactivate the PIN code of the SIM card before inserting it into the camera.

**Memory card:** micro-SD card – Max 128 GB – Class 10 minimum

#### Power ON

 Connect the solar charging port, press the power button once to turn on the device, and press it again if you want to turn off the device After turning on the device, press and hold the reset button for 5 seconds to be ready to pair with the network

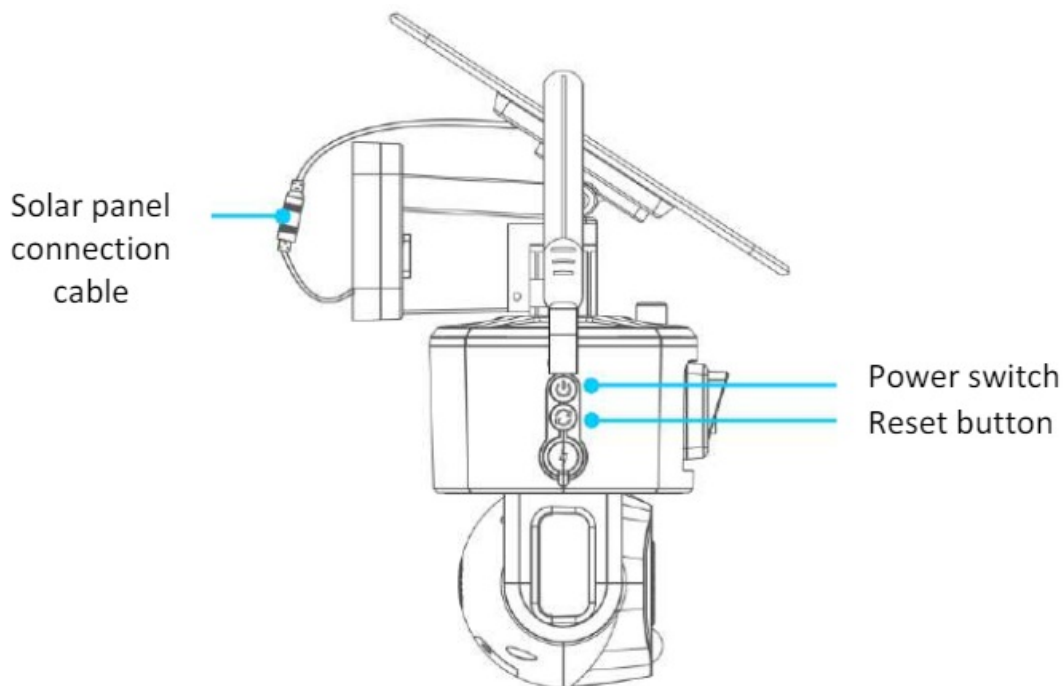

#### Downloading the application and connecting

 
##### Download the application

Download the NIVIEW application on the App Store (for iOS) or on Google Play (for Android). You can also scan the QR code or visit the [app.niceviewer.com](http://app.niceviewer.com) website to download the application.





### Create an account

Create an account on the application once it's downloaded. For a better experience and increased security, we suggest using the registration mode with the validation code for the first registration. Use your email and set up a password, which you will then use for every account login thereafter.

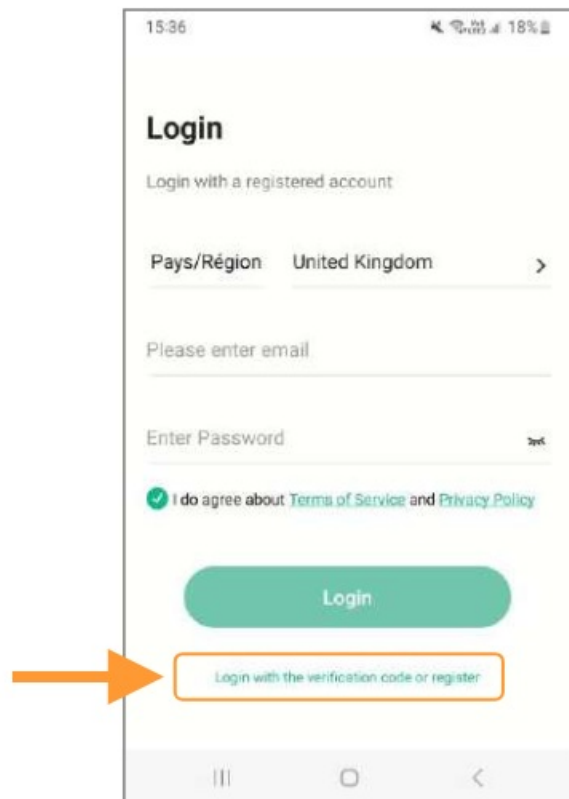

### Add the camera

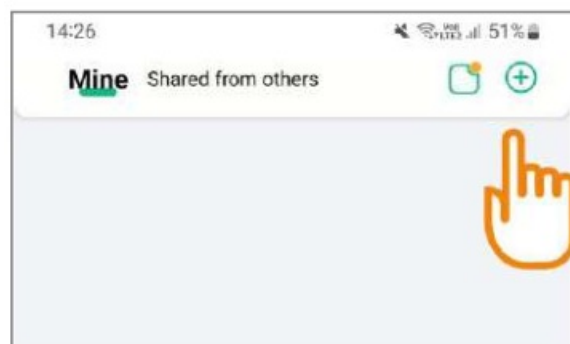 

Once logged in, click on the  icon located at the top right corner of the main menu in your application to connect your camera.


### Choose the network type

 Select the 4G network to continue pairing your device. The CAM1071 camera does not work with Wi-Fi, it only works with 3G or 4G networks.




### Check the camera status

Follow the instructions to determine if the LED light on the front of the camera is flashing alternately in red and blue. If the light is flashing alternately in red and blue, simply click on “Connect” to proceed with the connection.

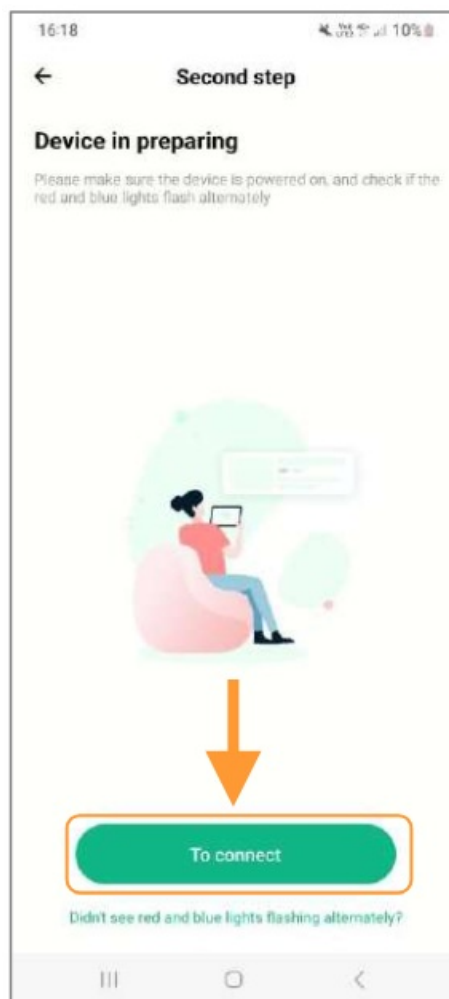

 
When the device is connected and waiting for the network configuration, the indicator light flashes alternately in red and blue. If the indicator does not flash alternately between red and blue, please check whether the camera is powered on and then check the status of the SIM card indicator.

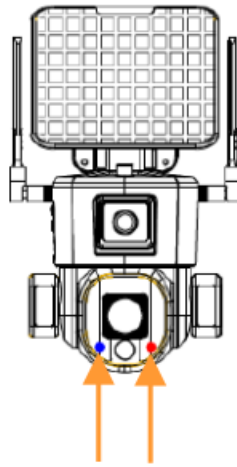

Blue and red indicator lights

### Scan the QR code

 
The application will now ask you to scan the QR code located on the back of the camera to connect the device to your application. Your camera is now successfully connected to your Niview application.

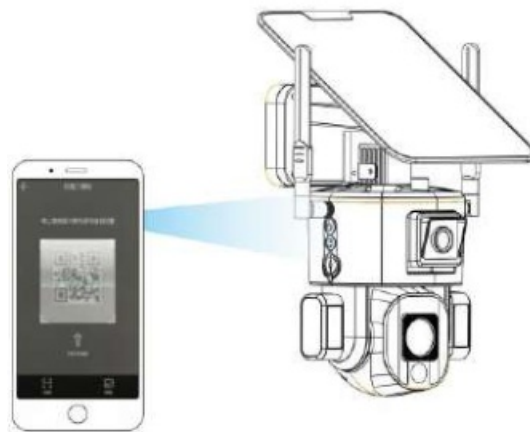

### Presentation of the application home page

 
#### Home page functions



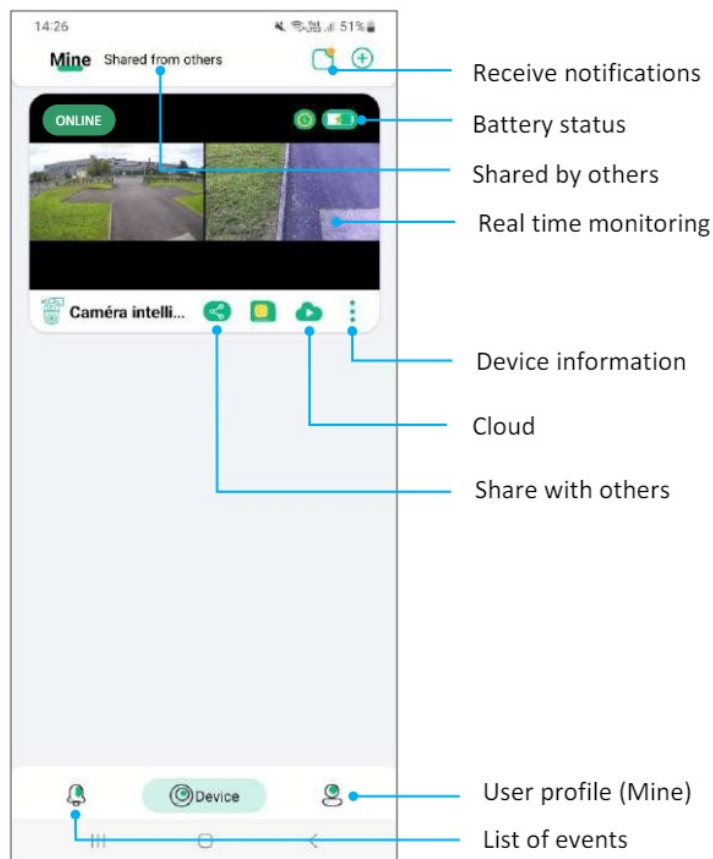


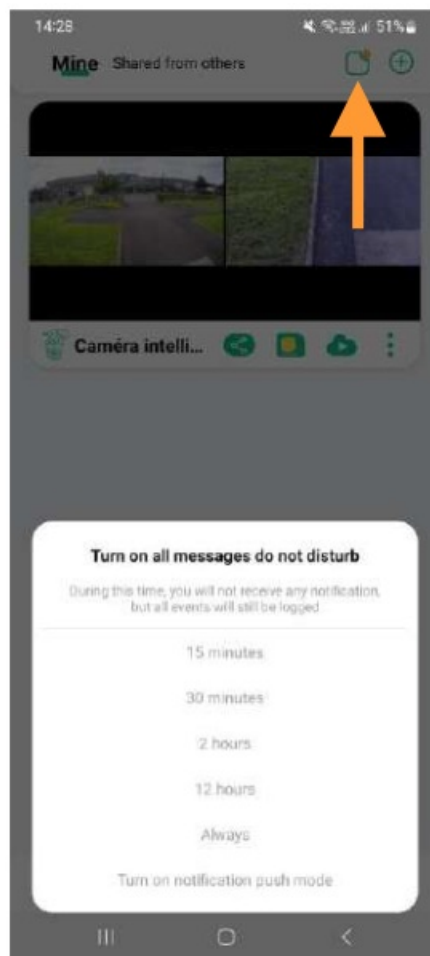 
## “Share” function



- You can share a camera with multiple devices and multiple Niview accounts.
- Simply click on the share icon  in the main menu, then enter the username of the account with which you want to share.


## “Do not disturb” mode

At the top right of the main menu  , you will find the notifications. When the PIR is activated, you will receive real-time notifications. You can choose to stop receiving these notifications by activating the “Do Not Disturb” mode.




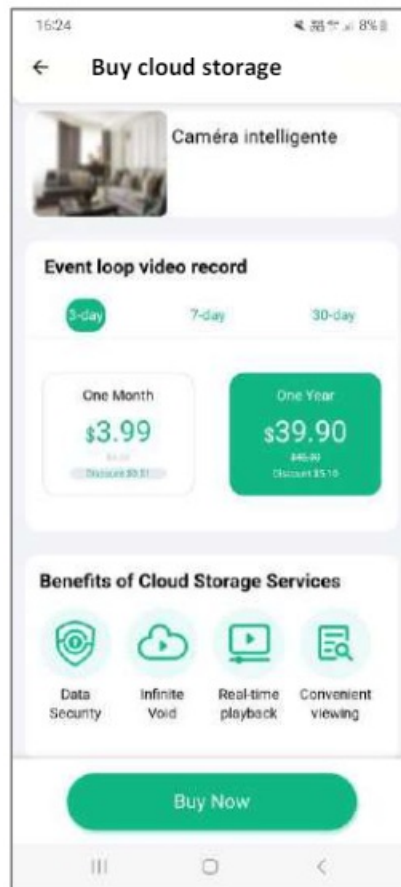 
## Viewing the Event list




- Click on the Event icon  at the bottom left of the main menu to access the videos triggered by the camera when it detects any motion.

### Cloud storage service

- Click on the Cloud icon  to select a Cloud storage plan.
- You can then save your camera recordings in the Cloud.



## Manage your account information

Click on the Mine icon  at the bottom right of the application to access your account information. In this menu, you can change your account password and manage all the functions of the device.



## Real-time monitoring and playback

## Real-time monitoring



### System settings

Manual alarm  
Return

Click on the video screen on the home page to access real-time monitoring.

Wide-angle monitoring

Linkage

Double-click anywhere on the wide-angle screen (top), and the close-focus monitor (bottom) will respond and display the detailed monitoring

Detailed monitoring screen

Screen preview

Full screen mode

Pull up to open the control menu


Video recording

Screenshot

Intercom

## Video playback of memory card



Click on the video playback button  on the homepage of the pull-up control menu to enter playback.  
Select playback from the memory card.

Select the playback time.


You can adjust the precision of the time axis.

Playback date selection

Recorded event list

## Video playback of Cloud storage



Click on the video playback button  on the homepage of the pull-up control menu to enter playback.

Select Cloud storage playback.

Click “Edit” or swipe left to download or delete cloud storage data.

## 360° camera control

- Click on the pull-up menu to enter the control page.

- Click on the PTZ icon  to control the 360° camera.

## Focus calibration

When the optical zoom is activated, if the focus is not sharp due to changes in the monitoring environment, you can click on this button to enter the focus calibration mode. This calibration takes two minutes.

## Tracking calibration

When there is a difference in the rotation direction of the camera’s pan/tilt, you can click on this button, and the camera’s pan/tilt will self-detect and calibrate the pan/tilt position.

## Preset

When the user has multiple fixed points to monitor, he can control the 360° camera to the position that requires fixed surveillance and save the position for quick positioning.

## Guard

When human tracking is activated, the camera will track the person by rotating. Set the guard position to ensure that your key position can be monitored at all times. The setting method is to direct the 360° camera towards your key monitoring point and click on Guard.



Pan/Tilt rotation  
control



Optical zoom

Screenshot

Real-time intercom

Screen recording

### Intelligent tracking

When the function is activated, the 360° camera detects and automatically tracks the person.




Human tracking function deactivated



Human tracking function activated

### Camera quick settings


- Click on  to access the camera quick settings.

 




## System settings

## Device information


- Click on  to access the device information (software version, updates).

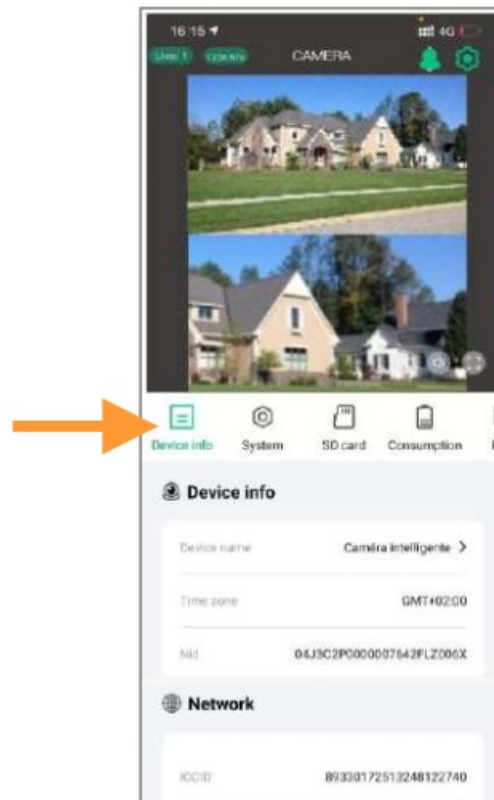

## System settings






- Click on  to access the system settings (change the camera display mode, intercom volume, etc.).

## Memory card settings




Click on  to access memory card settings. You can check its usage status and format it.


Format de memory card  
Memory card status

## Alert notification settings



 
Click on  to access the notification settings of the camera: select the information to be accepted according to your needs.


## Detection settings

Click on  to access the camera motion detection settings. You can adjust the sensitivity and detection distance.



## Power consumption

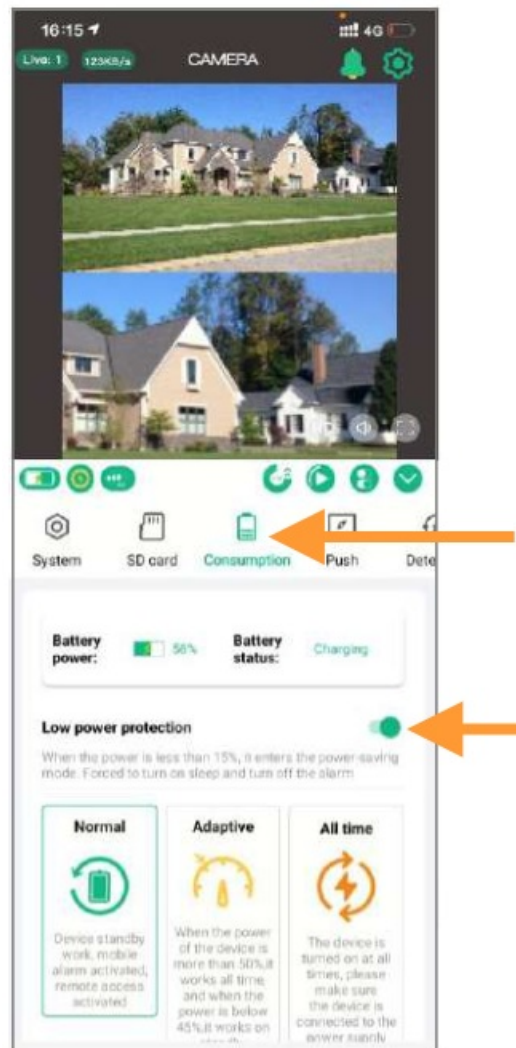

Click on  to enter power management. Select the mode that will best manage the battery based on the camera environment and your needs.

### Low power protection

It's recommended to activate the low power protection. When the battery level of the camera is lower than 15%, the device will automatically disable some high-power consumption functions.

### Normal mode

This is the most energy-saving and efficient mode. When the mobile phone is not remotely monitored, the camera is in standby mode. When a human being walks by, it will automatically activate the alarm and video recording and push to the mobile APP at the same time.

### Adaptive mode

When the battery level is above 50%, the device will work continuously. If the battery level is below 40%, the camera goes to sleep.


### All time mode

This is the most energy-consuming mode. The camera is working continuously (it never goes to sleep). In this mode, make sure the camera is connected to a power supply.



## Sound and light settings / Alarm



Click on  to access the sound and light settings (infrared LED, white lights, sound and light alarm).

**IR mode**: infrared LED control

**Color mode**: white lights are on at night, video is in full color.

 
**Night alarm mode**: at night, when someone passes by, the white lights flash and an audible alarm sounds.

**All-day alarm mode**

Day and night, when someone passes by, the white lights flash and an audible alarm sounds


## Wall mounting instructions

1. **Step 1** Secure the solar panel and bracket together with a hex wrench, and adjust it to the maximum sun orientation according to the installation environment.
2. **Step 2** Connect the solar panel charging port.
3. **Step 3** Use screws to fix the metal wall bracket on the wall, hang the camera on it, then lock the tamper-proof screws underneath.

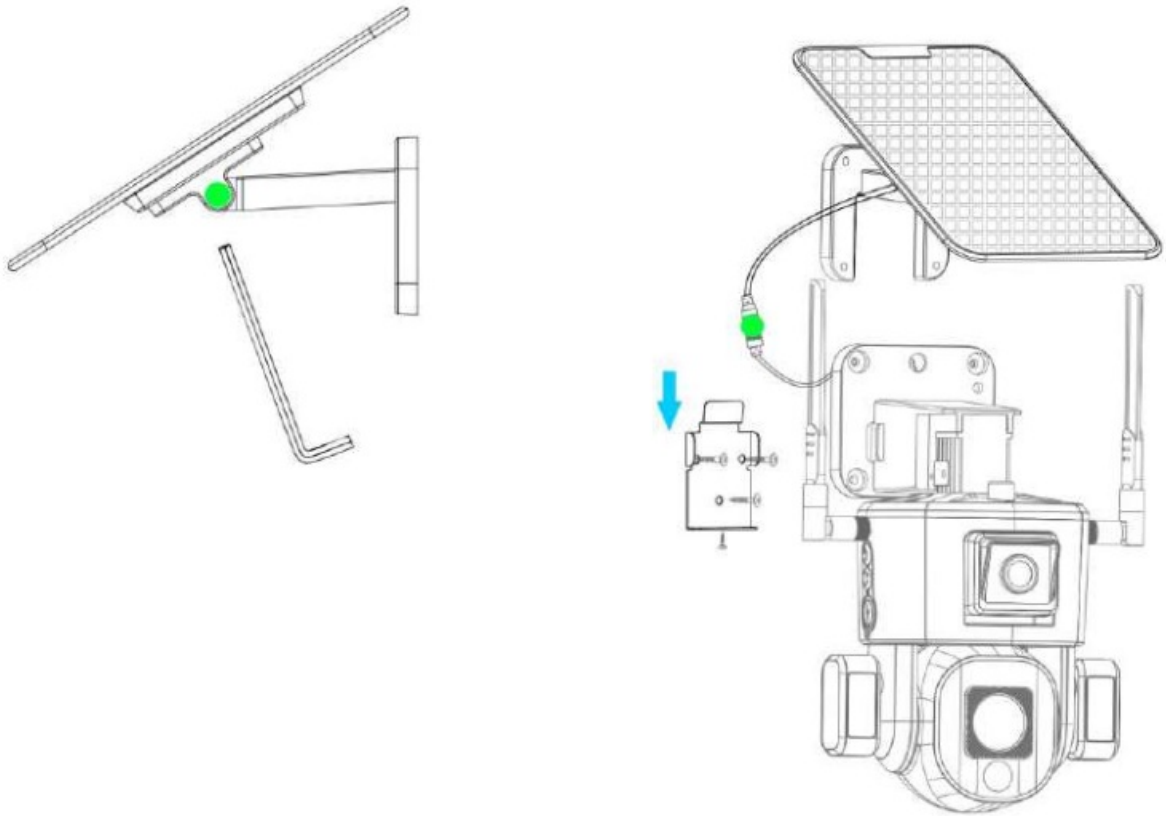


### Ceiling mounting instructions

 - **Step 1** Unscrew the fixing screw at A, then pull out the upper wall bracket.

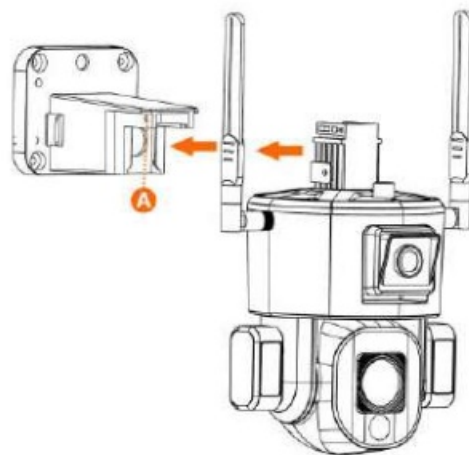

 - **Step 2** Put the upper wall bracket upright, insert it along the rail and fix the screws.

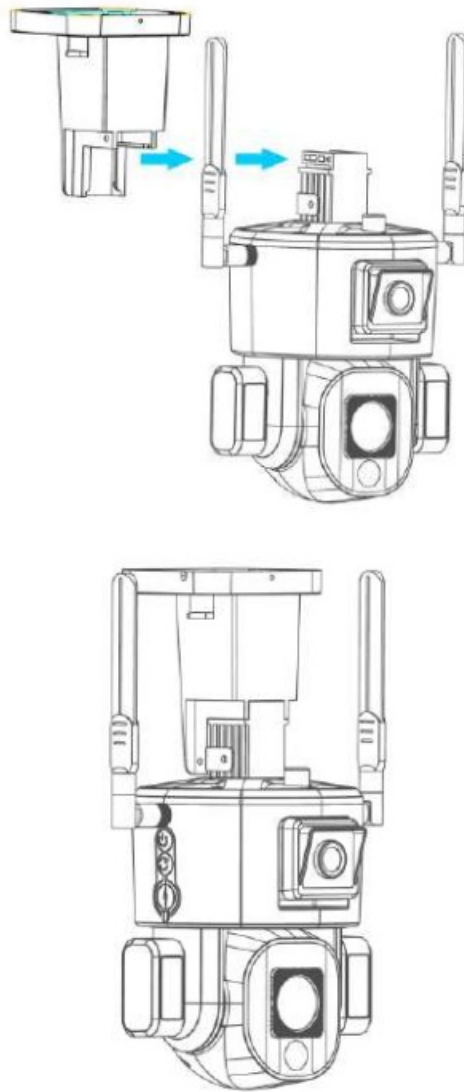

**Instructions for aiming the camera**

 
After adjusting the tilt angle of the wide-angle camera, tighten the thumbscrew to fix the lens position.

According to your monitoring requirements, manually adjust the up and down tilt angle of the wide-angle camera.

You can manually adjust the angle of the white light on both sides, the recommended angle is 15 degrees downward tilt.

Adjust the angle of the solar panel to achieve the maximum sunlight. The recommended orientation is 25 degrees inclination.

The horizontal direction of the upper wide-angle camera bracket can be adjusted left and right, and the positioning screw can be fixed after adjustment.

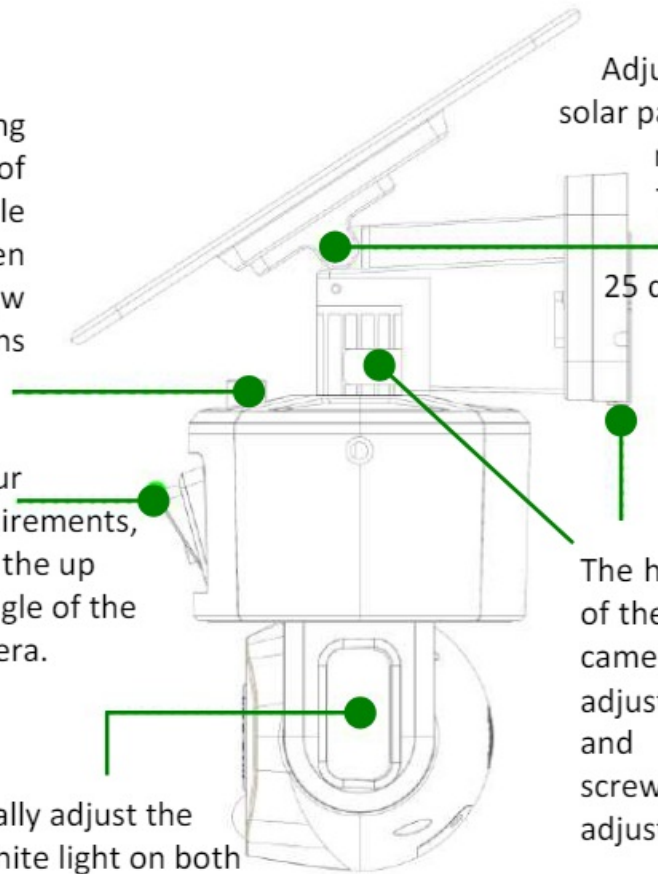

## Technical specifications



<b>Image sensors</b>	2 x 4MP colour CMOS
<b>Wide-angle lens</b> → for panoramic views	Lens: 2.5 mm Field of view: 120° Manual horizontal rotation: 180° Manual vertical rotation: 15°
<b>360° lens (PTZ)</b> → for close-up views	Lens: 6 mm Field of view: 80° Automatic horizontal rotation: 355° Automatic vertical rotation: 90° Optical zoom from 4X up to 10X
<b>Human detection</b>	Yes
<b>Automatic human tracking</b>	Yes
<b>Alarm</b>	Yes   Siren and lights   Automatic or manual
<b>Video resolution</b>	4K ULTRA HD
<b>Nighttime videos</b>	In colours or black and white
<b>White lights</b>	Light up 50 m <sup>2</sup>   Tilttable
<b>Infrared LED</b>	Range from 5 up to 40 m
<b>Motion detection</b>	Adjustable detection range: from 0 up to 45 m Adjustable detection sensitivity
<b>Audio function</b>	Yes, bi-directional Allows you to speak and hear
<b>Networks</b>	Works with 3G and 4G networks
<b>External memory</b>	Micro SD card up to 128 GB   Class 10 minimum
<b>Power supply</b>	5W solar panel Built-in rechargeable batteries (20 000mAh) Mains
<b>Installation</b>	Vertical (wall mounting) or horizontal (ceiling mounting)
<b>Watertightness</b>	IP65 Use indoors or outdoors
<b>Free app</b>	NIVIEW (iOS/Android) Real-time remote control using the app Dual live video (panoramic/close-up) Notifications in case of motion detection, low batteries...

## After-sales service

Should your product stop working or develop a fault, first read this guide over, and then check that you are using the product correctly. If the problem persists, contact your distributor or check out on [www.numaxes.com](http://www.numaxes.com). You can also contact the NUM'AXES Group at +33.2.38.69.96.27 or [export@numaxes.com](mailto:export@numaxes.com). Depending on the extent of the malfunction, you may have to return the product for service and repair. For all repairs, please supply the complete product and the proof of purchase (invoice or sales receipt). If you omit one of these items, the after-sales service will have to invoice you for any repair costs incurred.

## Guarantee

The NUM'AXES Group guarantees the product against production defects for two years after purchase. All postage and packing charges will be the purchaser's sole responsibility.

## Guarantee conditions

1. The guarantee will be valid only if the proof of purchase (invoice or sales receipt), without cancellation, is submitted to the distributor or to the NUM'AXES Group. The guarantee is limited to the original purchaser.
2. This guarantee does not cover the following:
  - direct or indirect risks incurred when sending the article back to the distributor or to the NUM'AXES Group
  - damage to the product caused by:



- negligence or incorrect use
  - use contrary to the instructions or not envisioned therein
  - repairs performed by unauthorized persons
  - loss or theft
3. If the product is found to be defective, the NUM'AXES Group will either decide to repair or to replace it.
  4. No claim may be advanced against the NUM'AXES Group, particularly about incorrect use or breakdown.
  5. The NUM'AXES Group reserves the right to modify the characteristics of its products to make technical improvements or to comply with new regulations.
  6. The information contained in this guide may be subject to amendment without prior notice.
  7. Photos and drawings are not contractual.


### Collection and recycling of your device at the end of its life

This pictogram means that your product can not be thrown with household refuse. You have to bring the device to a collection location suitable for the treatment, development, and recycling of electronic waste or bring it back to your distributor. Adopting this process, you do something for the environment; you contribute to the preservation of natural resources and to the protection of human health.

Z.A.C. des Aulnaies 745 rue de la Bergeresse C.S. 30157 45161 OLIVET CEDEX – FRANCE Tél. +33 (0)2 38 69 96 27 – Fax +33 (0)2 38 63 31 00

- [export@numaxes.com](mailto:export@numaxes.com)
- [www.numaxes.com](http://www.numaxes.com)

### Documents / Resources

	<p><b><a href="#">NUM AXES CAM1071 360 Degree Security Camera</a> [pdf] User Manual</b>  CAM1071 360 Degree Security Camera, CAM1071, 360 Degree Security Camera, Degree Security Camera, Security Camera, Camera</p>
---	---

### References

- [app.niceviewer.com](http://app.niceviewer.com)
- [NUM'AXES | NUM'AXES](#)
- [NUM'AXES | NUM'AXES](#)
- [NUM'AXES | NUM'AXES](#)
- [NUM'AXES | NUM'AXES](#)
- [User Manual](#)

#### Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.