



Numark NH10 Mixstream Pro Go Standalone Streaming DJ Controller User Guide

[Home](#) » [Numark](#) » Numark NH10 Mixstream Pro Go Standalone Streaming DJ Controller User Guide 

Contents

- [1 Numark NH10 Mixstream Pro Go Standalone Streaming DJ Controller](#)
- [2 GETTING STARTED](#)
- [3 OPERATION](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Numark

Numark NH10 Mixstream Pro Go Standalone Streaming DJ Controller



ENGINEDJ.COM/SUPPORT

For articles, videos, and phone and web support.



GETTING STARTED


Package Contents: Mixstream Pro Go, Power Supply, USB Cable, Getting Started Card, Display Cleaning Cloth, Quickstart Guide, Safety & Warranty Manual

NUMARK.COM/MIXSTREAM-GET-STARTED



- REGISTER YOUR PRODUCT
- DOWNLOAD THE USER GUIDE
- DOWNLOAD INCLUDED SOFTWARE
- WATCH TUTORIAL VIDEOS

CONNECTION DIAGRAM

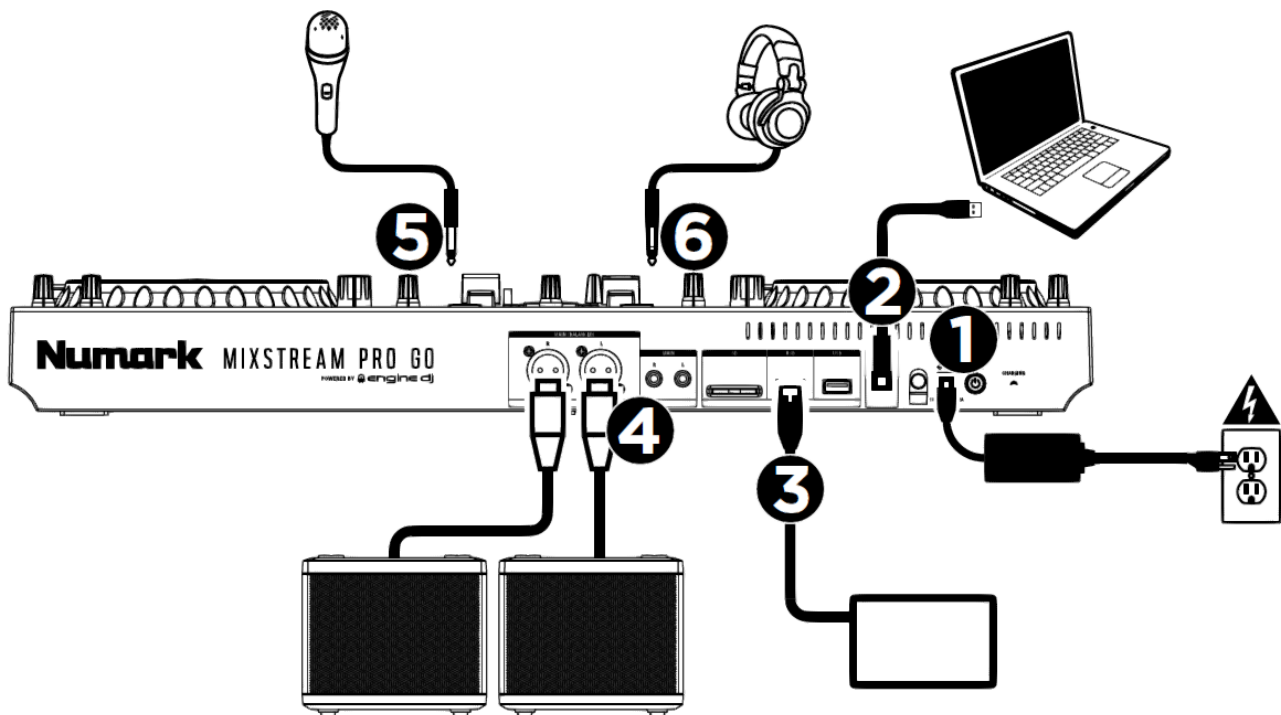

1. Power/Charging
2. USB-8 Port: Connect to computer.
3. USB-A Ports: Connect to hard drives or Sound Switch DMX interfaces
4. Main Outputs (XLR or RCA)
5. Mic Input (Front Panel, 1/4")
6. Headphones (Front Panel, 1/4" and 1/8")

OPERATION

Engine DJ Standalone OS

Connect USB drive or SD card, or use built-in Wi-Fi to connect to streaming services or access your library from the cloud.

7" HD Touchscreen



Multi-gesture support allows you to browse and load tracks and view responsive waveforms.

Press VIEW to cycle between Performance and Library Views.

Press SHIFT + VIEW to cycle between horizontal and vertical waveforms.


Built-In Battery

CHARGING



The CHARGING LED next to the POWER button will be solid red when charging and turn off when fully charged.

Onboard Speakers

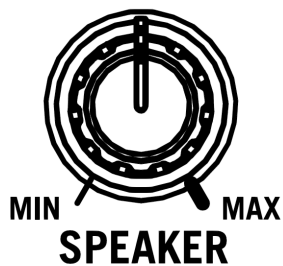

With independent volume control using the SPEAKER LEVEL knob

Smart Scratch

● SMART
⊖ NORMAL



Press to disable or enable Smart Scratch. When enabled, the track's timeline continues when you use the platter 8 to scratch the track. When the platter is released, the track will resume normal playback from where it would have been if the platter wasn't moved. When disabled, use the platter to scratch as you would with a vinyl record. Press SHIFT and this button to enable jog mode to adjust the track's speed with the platter

Built-In Software Effects



FX SELECT buttons to select an effect.


Move the FX TOGGLE switch away to latch the effect. Hold the switch toward you to activate it momentarily. Use the touchscreen to adjust the FX RATE and WET/DRY.

Control Center



Press MENU to open the Control Center, where you can access Source, Wi-Fi, Record, User Profile, and Settings menus.

Engine Lighting

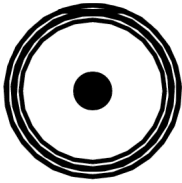

LIGHTING

Press LIGHTING to open Engine Lighting view to control compatible light fixtures.

Pad Modes



CUE: Set and jump to hot cue points.

SAVED LOOP: Create and trigger manual loops.


AUTO LOOP: Trigger automatic, time-based loops.

ROLL: Trigger loop rolls as the track continues.

Press each button a second time to access a second bank of values for the four performance pads.

DOWNLOAD THE FULL USER GUIDE TO LEARN MORE [ENGINEDJ.COM](https://enginedj.com)

Documents / Resources

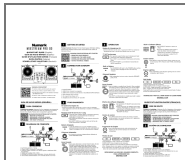

[Numark NH10 Mixstream Pro Go Standalone Streaming DJ Controller](#) [pdf] User Guide
NH10 Mixstream Pro Go Standalone Streaming DJ Controller, NH10, Mixstream Pro Go
Standalone Streaming DJ Controller, Pro Go Standalone Streaming DJ Controller, Go Standalone Streaming DJ Controller, Standalone Streaming DJ Controller, Streaming DJ Controller, DJ Controller, Controller