

Nutale F17X Smart Tracker



Nutale F17X Smart Tracker User Manual

[Home](#) » [Nutale](#) » Nutale F17X Smart Tracker User Manual 

Contents

- [1 Nutale F17X Smart Tracker](#)
- [2 Product Usage Instructions:](#)
- [3 Instructions for device button](#)
- [4 FCC Caution.](#)
- [5 Product overview](#)
- [6 FAQs](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Nutale

Nutale F17X Smart Tracker



Specifications

- Model: F17X
- Brand: Nutale

Product Information:

The F17X by Nutale is a versatile device designed to help you locate your belongings with ease. With its compact size and simple operation, this device is a must-have for anyone prone to misplacing their valuables.

Product Usage Instructions:

Important tips

When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following actions are recommended:

1. Change the phone's network, such as switching between WiFi and mobile network.
2. Factory Reset for the device: When the device is powered on, double-click the device button. The device will beep, then immediately long press the device button for eight seconds until the device beeps for the second time and the indicator light flashes. Release the button, Factory Reset is completed.
(Note: after long pressing the device button for 2 seconds, the device will sound "tick, tick, tick", and the indicator light near the button flashes. Do not release it. Continue to press and hold the button until the device emits a music for the second time, and the indicator light flashes. Release the button).
3. Pair with Find My app

nutservice@nutspace.com



Instructions for device button

1. Power on

After installing the battery, long press the button for five seconds, the device will beep, the light will flash three times, and the device will be turned on.

2. Device status confirmation

Double-click the device button, the device will beep, and the light will flash three times, indicating that the device is working. If the device does not ring, the device is off. Long press the button for five seconds to turn it on.

3. **The device enters the pairing state again** After removing the device in the app, the device will beep and the light will flash six times, it will not shut down and will be in the pairing mode. If there is no re-pairing within 10 minutes, the device will leave the pairing state. If you want to pair a device at this time, you need to click the device button once, the device will beep, and the light will flash once. At this time, the device enters the pairing state and can be paired with the app again.

4. Factory Reset

First, remove the item from Find My app then, after the device is powered on, double-click the device button. The device will beep. Long press the device button for eight seconds until the device beeps and the light flashes three times. Release the button to complete factory reset. The device can now be paired.

5. Power off

When the device is on, press the device button 5 times in 2 seconds. The device will beep, the light will flash three times, the device will be powered off.

Regulatory Safety Information

WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN

Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.

If you suspect your child has swallowed or inserted a button battery, immediately call the 24-hour Poison Information Centre for fast expert advice.

- Rated voltage 3V
- Rated current ~15mA
- Immediately dispose of used batteries and keep away from children.
- Do NOT dispose of batteries in household trash. Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- KEEP BATTERIES OUT OF REACH OF CHILDREN Keep in original package until ready to use. Call a local poison control center for treatment information.
- **Australia: 13 11 26 Canada:**
 - 1-[800-268-9017](tel:800-268-9017)(Ontario), 1-[800-567-8911](tel:800-567-8911)(BC), 1-[800-463-5060](tel:800-463-5060) (Quebec) US: [800-498-8666](tel:800-498-8666). Verify suitable. emergency call numbers for your country.

Do not use if the compartment is not secure. Dispose of used button batteries promptly and safely. Flat batteries can still be dangerous.



■ European Union-Disposal Information The symbol above means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: CR2032.
- Nominal battery voltage :3 V.
- on-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60 °C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of

time according to local regulations.

- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries

Risk of fire and burns.

Do not recharge, disassemble, heat (-20°C +70°C) or incinerate.

Article 12

Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the certified lower power frequency electric machinery.


Article 14

- The application of low power frequency electric machineries shall not affect the navigation safety nor interfere a legal communication. if an interference is found, the service will be suspended until improvement is made and the interference no longer exists.
- The foregoing legal communication refers to the wireless telecommunications operated according to the telecommunications laws and regulations.
- The low power frequency electric machinery should be able to tolerate the interference of the electric wave radiation electric machineries and equipment for legal communications or industrial and scientific applications.

Safety Statement

WARNING



-  **INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. KEEP new and used batteries OUT OF REACH OF CHILDREN.
- Seek Immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to

part 15 of the FCC Rules . These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- – Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ADD5-F17X

credit line

- Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.
- Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Product overview

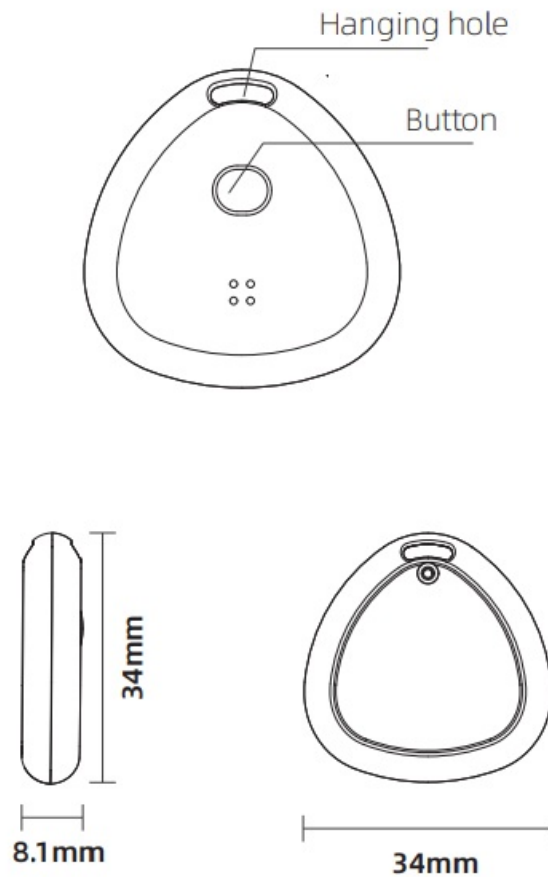

WWW.NUTALE.COM


FAQs

1. How to confirm whether the device has been turned on?

Double-click the device button. The device will beep, and the light will flash three times if it's working. If no response, long press the button for five seconds to turn it on.

2. How to replace the battery?

1. Use a screwdriver to loosen the screws on the back of the device.
2. Slide a plastic sheet along the gap to pry open the outer shell.
3. Replace the old battery with a new one ensuring correct polarity.
4. Reassemble and power on the device by holding the button for 5 seconds.

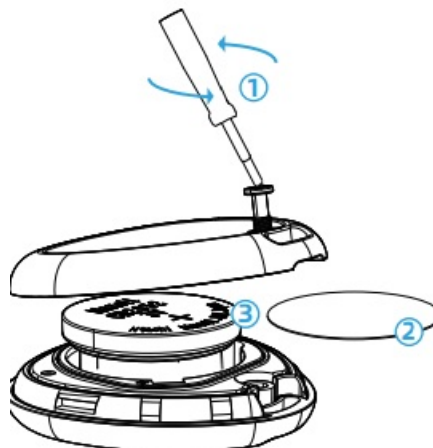



[Nutale F17X Smart Tracker](#) [pdf] User Manual
F17X, F17X Smart Tracker, F17X, Smart Tracker, Tracker

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.