



NUTRIBULLET NB-101B Magic Bullet High-Speed Blender Instruction Manual

[Home](#) » [nutribullet](#) » NUTRIBULLET NB-101B Magic Bullet High-Speed Blender Instruction Manual 

Contents

- [1 NUTRIBULLET NB-101B Magic Bullet High-Speed Blender](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 Technical specifications:](#)
- [4 CLEANING & USER MAINTENANCE INSTRUCTIONS](#)
- [5 BLADES:](#)
- [6 NUTRIBULLET ACCESSORIES:](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

The NUTRIBULLET logo is displayed in white capital letters on a black rectangular background. The letter 'i' in 'BULLET' has a small registered trademark symbol (®) above it.

NUTRIBULLET NB-101B Magic Bullet High-Speed Blender



Congratulations on purchasing your NutriBullet®, the original nutrient extractor! We're thrilled you've chosen to optimize your health and vitality. Since we want your experiences with NutriBullet® to be fantastic, please read these safety and cleaning instructions before each use. Enjoy your NutriBullet®.

IMPORTANT SAFEGUARDS

When using your NutriBullet, basic safety precautions should always be observed.

WARNINGS

- To avoid any risk of electrical shock, never immerse the power base, cord or plug in water or other liquids.
- NEVER LEAVE THE NUTRIBULLET UNATTENDED WHILE IT IS IN USE.
- Close supervision is necessary when an electrical appliance is used by or near children. Keep cord out of reach of children.

MEDICAL SAFETY & INTERACTIONS

The information contained in this user guide is not meant to replace the advice of your physician. Always consult your physician regarding health and nutrition concerns. If you are taking any medication, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the NutriBlast® recipes. BAD PITS – Do not use the following seeds and pits in the NutriBullet®, as they contain a chemical that releases cyanide into the body when ingested: apple seeds and

pits of cherries, plums, peaches and apricots.

1. Use of the NutriBullet® in locations with different electrical specifications may result in damage to the product so please check specifications before operation. Do not use this product with any type of adapter or voltage converter device; this is considered an unauthorized modification of the product and as such voids the warranty.
2. Do not pull, twist, or damage the power cord, don't hang it over the edge of the table or counter and don't allow to touch hot surfaces, including a stove. Periodically inspect cord and plug. Do not operate the NutriBullet® with a damaged cord or plug. A damaged cord or plug must be replaced by a qualified person in order to avoid a hazard.
3. If the appliance malfunctions, is dropped or is damaged in any manner, contact Customer Service for assistance via NutriLiving.shop.
4. Unplug your NutriBullet when not in use and make sure it's unplugged before assembling, disassembling, adding additional parts, cleaning, while operating moving parts and before leaving the unit unattended. For NutriBullet BLUE 1000 turn the on/off button upright; for NutriBullet Select the switch button 'OFF'.
5. Do not use your NutriBullet outdoors or in inclement weather.
6. The NutriBullet®, the cups or any other NutriBullet® accessory are not intended to use in microwave ovens and freezers.
7. This appliance may be used, cleaned and/or maintained by children aged 8 years and older and by persons with reduced physical, sensory or mental abilities or lack of experience and/or knowledge, provided that this is done under supervision plus they have been instructed about the safe use of the device and have understood the associated risks. A NutriBullet® is not a toy.
8. If the motor stops working, unplug the power base and let it cool for an hour before attempting to use it again.
9. Periodically inspect NutriBullet components for damage or wear that may impair proper function. Discontinue use and replace components if you detect cracking, crazing or cloudiness or other damage to the plastic, the tabs, gasket or the power base.
10. Blending containers (cups, pitchers) and blades are specific to each model. Use of incompatible parts may result in damaging your NutriBullet or creating safety hazards. When replacing containers, blades or ordering additional accessories at NutriLiving.shop, please verify it's compatible with your unit.

Only use original NutriBullet® parts and accessories. Use of items, including (canning) jars, not recommended or sold by the manufacturer may cause fire, electric shock or injuries and will void the warranty. You may purchase new blending cups and blades at www.NutriLiving.shop.

VENTILATION SAFETY

To prevent a fire hazard, the openings on the bottom of the power base should be free of dust or lint and never obstructed as they are provided for ventilation to ensure reliable motor operation to prevent overheating. Never place your NutriBullet on top of flammable materials such as newspapers, tablecloths, napkins, dish towels, placemats or another similar type of materials. Always operate the NutriBullet on a level surface, leaving unobstructed space beneath and around the power base to permit proper air circulation.

HEAT AND PRESSURE SAFETY

- **DO NOT BLEND HOT INGREDIENTS OR LIQUIDS!** Never put hot ingredients or hot liquids in any closed-top blending cup/pitcher before or while blending. The heat from the ingredients could cause pressure to build up in the sealed cups causing possible expulsion which may cause personal injury or property damage. Always start

with room temperature or cooler ingredients (21°C or less).

- NEVER ALLOW THE NUTRIBULLET® TO RUN MORE THAN ONE MINUTE at a time as it may result in the contents overheating which can increase the pressure and may cause the container to burst, resulting in possible personal injury or property damage. If you need to blend for longer, blend for 1- minute intervals allowing power base to shut off completely in between for 15 seconds. After 3 consecutive 1-minute intervals allow contents to settle for 2-3 minutes before continuing if necessary.

NutriBullet BLUE 1000, MAX 1200-series and Rx are equipped with SMART Technology, a pre-programmed Autocycle that automatically switches off the device after optimal extraction. This function can also be activated manually by pressing the button within 5 seconds after the start of blending and ensures the contents are first pulsed a few times before extraction starts.

- The NutriBullet has an internal thermal breaker that shuts off the motor when it overheats. Unplug the power base and let it cool down for an hour or more before using it again. The power base will reset when the thermal breaker has cooled down sufficiently.
- Never blend carbonated liquids or ingredients (i.e., baking soda, yeast etc.). Pressure from released gases can cause the blending cup or blade to burst and resulting in possible injury.
- Don't allow blended mixtures to sit in a sealed cup for long periods of time! Sugar in fruits and vegetables could ferment. If you do not plan to consume your drink immediately, remove the blade and use a lid to close the cup. Remember to periodically release the pressure that may have built up due to fermentation by carefully unscrewing the lid. Built-up pressure can cause ingredients to burst and spray out when opened.
- After blending, allow the contents to settle and release any pressure that may have built up during the extraction process by slowly unscrewing the cup from the blade assembly. Have the cup pointed away from your body!
- NEVER touch the gears of the blade and the coupling in the basic unit with your hands, as the blending will make them hot.

NOTE When making nut butter or oil-based foods:

Due to its consistency, the food will stick to the sides of the cup during processing. Proceed in 20-30 second increments only by simply lifting the cup off the power base between intervals. Tap the cup in combination with opening it to scrape down the ingredients to the center before continuing to process the next increment. Allow your NutriBullet to cool down for 10 minutes after 4-5 cycles to prevent overheating and damaging the unit.

BLADE SAFETY

to reduce the risk of personal injury or property damage

- Blades are sharp! Use care while handling the blades, do not touch the edges.
- Avoid contact with moving parts! Keep hands and utensils out of and away from the blade while blending food. A scraper may be used, but only when the appliance is not running.
- Always inspect your blades before each use.

NutriBullet extractor blades are specially designed for blending and are available for all models. NutriBullet milling blades are available for Baby Bullet, Magic Bullet and 600-series only and ideal for turning dry ingredients into powders, e.g. milling oats, coffee beans, cereals, sugar and crunching herbs, nuts and seeds.

TO PREVENT LEAKAGE and to avoid the risk that residue builds up and damages the power base, always make sure:

- the blade is undamaged and its gasket is completely seated in the blade;
- the blade is securely screwed onto the blending container BEFORE placing it on the power base and operating the NutriBullet®.
- the ingredients do not extend above the MAX line.
- NEVER BLEND WITHOUT LIQUID AS DOING SO MAY DAMAGE THE EXTRACTOR BLADE. The Cyclonic Action® of your NutriBullet® requires the use of liquids to make NutriBlasts® and other nutritious beverages.
- The NutriBullet® is not intended to be used as an ice crusher or without liquids. To make cold drinks, we suggest to use frozen fruit and chilled liquids. Alternatively, you may add crushed ice up to 25% of the total cup volume, with water or other liquid-filled up to the MAX line. For NutriBullet® BLUE 1000 and NutriBullet® MAX 1200 see the MAX line at the inner side of the stainless steel vessel.
- NEVER use crushed ice, ice cubes or frozen fruit in Magic Bullet and Baby Bullet!
- DO NOT USE the extractor blade for grinding dry ingredients such as grains, cereals, coffee beans etc. as this may damage the motor and the extractor blade.
- Once you have stopped your NutriBullet®, carefully remove the blending cup/blade assembly, the motor comes to a stop and the unit powers down.

We recommend replacing the blades every six months or as needed to maintain optimal performance.

MICROWAVE & STOVE-TOP HEATING SAFETY

After blending room temperature or cooler ingredients, transfer the mixture to an unsealed microwave-safe container or to a stove-top pot to heat.

Do not place any of the NutriBullet parts in a microwave oven, or stove-top pot or immerse in boiling water as this may result in damage to the accessory.

Technical specifications:

- Voltage: 220-240V
- Frequency: 50/60Hz
- Protection Class: II

Manual for Magic Bullet, Baby Bullet, 600-series, 900-series, 1000-series, 1200-series.

CLEANING & USER MAINTENANCE INSTRUCTIONS

Cleaning your NutriBullet is so easy... simply place any of the pieces (except for the power base and blades!) on the top shelf of the dishwasher or rinse/hand wash with warm soapy water.

HERE'S HOW TO CLEAN YOUR NUTRIBULLET:

- STEP 1: The most important thing — is ALWAYS UNPLUG the power base from the power supply outlet. STEP 2: Make sure the blending cup/blade assembly is not attached to the power base.
- STEP 3: Now clean the individual components:

POWER BASE – for the most part, the power base doesn't really get dirty, but if you neglect to twist the extractor blade on to the blending cup tightly, liquids can leak out and get into the base. Please:

- Do not remove the white actuator tabs inside the power base.
- NutriBullet® Balance: remove the Smart Nutrition Sensor™ from the power base and wipe with a damp cloth

until clean.

- Use a sponge/cloth moistened with warm (soapy) water to wipe down the inside well and outside until clean.
- NutriBullet® Balance: replace the Smart Nutrition Sensor™ by lining up the arrow on the disc to the arrow in the well of the power base. Gently press down until the disc is level.
- Please pay particular attention to the white actuator tabs to loosen any sticky debris from drips and spills. If necessary you may use a small brush to ensure it is kept clean.
- NEVER submerge the power base in water or put it in the dishwasher!

*The NUTRIBULLET® BALANCE ® is equipped with a Smart Nutrition Sensor™ which includes a delicately calibrated scale. Handle with care. If it is dropped or jarred, it may impact the calibration causing it not to connect or detect the placement of the cup. If this occurs, please contact customer service via NutriLiving. shop.

BLADES:

- Rinse in warm water immediately after each use to prevent debris from drying on the blades and gasket.
- NEVER wash blades in the dishwasher, elevated temperatures warp the plastic and damage the gasket.
- NEVER remove the gasket as this may permanently damage the blade and cause leakage. If after washing as indicated additional disinfecting is desired, you may rinse with a 10% vinegar/water solution or with lemon juice.
- Dry both sides of the blade completely.
- If, over time, the gasket becomes loose or damaged, you may order a new blade at NutriLiving.shop.

NUTRIBULLET ACCESSORIES:

Cups, pitchers, lids and lip rings are all TOP RACK dishwasher safe. We recommend rinsing them and giving them a quick brush with a dish brush to remove any dried debris before washing them in the dishwasher. NEVER use the sanitize cycle to wash the blending containers as this may warp the plastic.

STUBBORN CLEANUP

If ingredients dry inside the NutriBullet containers, make your cleanup a snap by filling it with about 2/3 full with room temperature (21°C or less) water and screw on the extractor blade. Place the blending container/extractor blade assembly on the power base for about 20-30 seconds. This will loosen the stuck ingredients, and with a light scrub and rinse, you'll be all done. SAVE THESE INSTRUCTIONS – FOR HOUSEHOLD USE ONLY Warranty: two year against factory and material defects. This warranty does not affect applicable legal rights.

IF YOU HAVE ANY COMMENTS, QUESTIONS OR CONCERNS, PLEASE GO TO NEUTRALIZING.SHOP or send an email to customercare@NutriBulletbenelux.nl

#NutriBullet.SE / .DK / .NO / .FI

On social media we take you on a discovery in the world of smoothies, and more! With this hashtag, you will find numerous tips, tricks and accessible recipes that you can make with your NutriBullet. It will undoubtedly inspire you to get started yourself.

THIS MARKING INDICATES THAT THIS PRODUCT SHOULD NOT BE DISPOSED OF WITH OTHER HOUSEHOLD WASTES THROUGHOUT THE EU. TO PREVENT POSSIBLE HARM TO THE ENVIRONMENT OR HUMAN HEALTH FROM UNCONTROLLED WASTE DISPOSAL, RECYCLE IT RESPONSIBLY TO PROMOTE THE SUSTAINABLE REUSE OF MATERIAL RESOURCES. TO RETURN YOUR USED DEVICE. PLEASE USE THE RETURN AND COLLECTION SYSTEMS OR CONTACT THE RETAILER WHERE THE PRODUCT WAS PURCHASED. THEY WILL TAKE CARE FOR ENVIRONMENTALLY SAFE RECYCLING.

Manufactured for:

NUTRIBULLET®, LLC

LOS ANGELES, CA 90025, U.S.A. Made in CHINA

Imported and distributed by:


NutriBullet Retail • 1251 NA the Netherlands www.NutriLiving.shop

info@NutriBulletbenelux.nl

customercare@NutriBulletbenelux.nl

PLEASE RETAIN THE INFORMATION FOR FUTURE REFERENCE.

Documents / Resources

 <p>NUTRIBULLET USER GUIDE</p> <p>COMBINATION OF SEVERAL DIFFERENT GRADES OF BLENDING TECHNOLOGY COMBINATION OF SEVERAL DIFFERENT GRADES OF BLENDING TECHNOLOGY</p>	<p>NUTRIBULLET NB-101B Magic Bullet High-Speed Blender [pdf] Instruction Manual NB 101B Magic Bullet High-Speed Blender, NB 101B, Magic Bullet High-Speed Blender</p>
---	---

References

-  [nutribullet Nederland = De officiële nutribullet website](#)
-  [Nutribullet Outlet](#)
-  [RYB.nl](#)

Manuals+.