



# nutriBullet NBF07520 Smart Touch Blender Combo User Guide

[Home](#) » [nutribullet](#) » nutriBullet NBF07520 Smart Touch Blender Combo User Guide

# nutribullet®

## Contents [ [hide](#) ]

- 1 nutriBullet® NBF07520 Smart Touch Blender Combo User Guide
- 2 Important safeguards
- 3 GENERAL SAFETY INFORMATION
  - 3.1 HEAT & PRESSURE SAFETY
  - 3.2 BLENDING WITH NUTRIBULLET® CUPS
  - 3.3 BLENDING WITH THE PITCHER
- 4 BLADE SAFETY
- 5 PITCHER SAFETY
- 6 ELECTRICAL SAFETY
  - 6.1 STOVE-TOP HEATING SAFETY
  - 6.2 VENTILATION WARNINGS
- 7 ADDITIONAL INSTRUCTIONS FOR PROPER USAGE
- 8 What's included
- 9 Assembly guide.
- 10 Getting started.
- 11 Pitcher assembly & use.
- 12 nutribullet® cup assembly & use
- 13 Blending control panel: manual speeds
- 14 Blending control panel: intelligent programs
- 15 Care & maintenance.
- 16 Accessories
- 17 How to store.
- 18 Warranty registration.
- 19 Documents / Resources
- 20 Related Posts



## Important safeguards

**Warning!** To avoid the risk of serious injury, carefully read all instructions before operating your nutriBullet®. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

**!Save these instructions!**  
**FOR HOUSEHOLD AND SIMILAR USE ONLY**

## GENERAL SAFETY INFORMATION

- Children shall not play with the appliance.
- This appliance may be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Do not use outdoors.
- NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.
- ALWAYS UNPLUG THE NUTRIBULLET® WHEN NOT IN USE.

## HEAT & PRESSURE SAFETY

- Always use extreme care and attention when blending hot liquids or hot ingredients. The release of thermal energy from the ingredients and friction from the rotating blades (during the blending process) can further heat and pressurize the mixture. Only operate with vented lid securely attached.
- Allow to cool before assembling or disassembling parts and before cleaning the appliance.

## BLENDING WITH NUTRIBULLET® CUPS

To avoid personal injury, never blend hot or carbonated ingredients or liquid in any sealed nutriBullet® cup! Only use the Pitcher with the vented lid when blending hot or warm ingredients. Heated ingredients can pressurize sealed containers when agitated and cause cup and blade separation or violently expel hot contents upon opening. Always start the blending process with room temperature or

refrigerated ingredients and liquids (21°C or cooler).

When using the sealed cup, only blend for one minute or less. Friction from prolonged operation can heat ingredients and generate internal pressure in the sealed container. This pressure can cause the cup and blade to separate or blended contents to erupt from the container, resulting in possible personal injury and/or property damage. If the sealed nutribullet® cups are warm to the touch, power off your machine leaving the cup attached to the base and allow the vessel

to cool for fifteen minutes or more. Allow contents to settle before slowly releasing the cup from the motor base.

With the nutribullet® cup, pointed away from your face and body, slowly unscrew the easy-twist extractor blade to gently release any residual pressure.

If you need to blend for longer than one minute, blend for 1-minute intervals. After each 1-minute interval, allow the motor base to shut off completely and wait at least one minute before starting the next cycle. Do not run for more than 3 consecutive

1-minute intervals to prevent the contents from overheating. Allow contents to settle for 2-3 minutes after the third blending cycle to prevent overheating and build-up of pressure.

Sugar in fruits and vegetables can ferment over time, releasing gases that cause pressure to build up in a sealed nutribullet® cup. Do not store any smoothies or blended mixtures in vessels sealed with the easy-twist extractor blade. If you will not consume your smoothie immediately, remove the easy-twist extractor blade and cover your nutribullet® cup with plastic wrap before refrigerating. If your smoothie or blended mixture was made in the pitcher, transfer to another storage container before refrigerating. Never store any blended mixture in a sealed cup unrefrigerated, or for any prolonged period of time; contents will spoil and ferment, producing gases that might cause eruption.

Never blend carbonated liquids or effervescing ingredients (e.g., baking soda, baking powder, yeast, etc.).

Pressure from released gases can cause a sealed blending container to burst, resulting in possible injury and/or property damage.

## **BLENDING WITH THE PITCHER**

Use extra caution when blending hot liquids or ingredients in the pitcher.

Never turn the power on while using the pitcher without the vented lid cap inserted and locked into the pitcher lid, as ingredients can splash, and if hot or warm, could potentially cause thermal injury and/or property damage.

Steam and splattering ingredients can escape through the pitcher lid, potentially scalding and/or burning the user.

NEVER blend hot liquids or ingredients in your pitcher without the pitcher lid and vented lid cap locked and attached. The vented lid cap allows steam and pressure to escape, while guarding against excess splashing.

NEVER blend hot or carbonated ingredients or liquids in your nutribullet® cups or any other sealed vessel.

When blending hot liquids, add liquid and solid ingredients to your pitcher below their respective MAX lines. Attach the pitcher lid with the vented lid cap inserted and locked. Press POWER and begin blending by selecting the desired program or if you are using manual speeds, start blending on the LOW setting. Once ingredients are integrated, adjust speed as needed.

When using the pitcher with vented lid to blend hot liquids or ingredients longer than one minute, always use caution when opening the pitcher lid.

## **BLADE SAFETY**

Never store any extractor blade in the motor base unattached to a nutribullet® cup.

An exposed blade can present a laceration hazard.

Blades are sharp! Handle carefully. Use care when handling any blade. To avoid laceration injury, do not handle or touch any blade edge.

AVOID CONTACT WITH MOVING PARTS! Keep hands and utensils out of and away from blades while blending food to reduce the risk of severe personal injury.

- TO REDUCE THE RISK OF PERSONAL INJURY OR PROPERTY DAMAGE, never place the extractor blade on the motor base without the cup properly attached. Make sure the blade is securely twisted (hand-tightened) onto the nutribullet® cup before placing it on the motor base and operating the nutribullet® Smart Touch Blender™ Combo. Check to make sure the extractor blade is aligned properly before placing it on the motor base and operating your nutribullet®.

- After blending, turn the power button off. Wait to remove the nutribullet® cup/easy-twist extractor blade assembly or the pitcher from the motor base until the blades come to a full stop and the unit powers down completely. Taking the blending vessel off the unit prior to complete power down can cause damage to the easy-twist extractor blade coupling or motor gear.  
Never use the nutribullet® Smart Touch Blender™ Combo without adding liquid, as doing so may damage the blades.
- The cyclonic action of your nutribullet® requires the use of liquids to make smoothies and other nutritious items. The nutribullet® Smart Touch Blender™ Combo is not intended to be used without liquids, or as an ice crusher. ALWAYS ADD LIQUID to your recipe.
- DO NOT USE the extractor blade for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor and/or the extractor blade.
- We recommend replacing your easy-twist extractor blade every 6 months (depending on use) or as needed for optimal performance as the blade dulls with use.

## PITCHER SAFETY

- Always operate the pitcher with the pitcher lid securely in place. Pitcher lid must be locked onto the pitcher in order to operate the unit.
- With recipes that require certain ingredients to be incorporated during blending, first add the base ingredients, seal the pitcher lid with vented lid cap attached, and begin blending. Then, once the ingredients are well mixed, twist open the vented lid cap and carefully pour or drop ingredients into the mixture. If your blended mixture is hot or warm, use caution when opening the vented lid cap. Open the vented lid cap slowly.



- Keep hands and utensils, other than the tamper provided, out of container while blending to reduce the risk of severe injury to persons or damage to the blender. The cover must remain in place when using the tamper through the cover opening. A scraper may be used but must be used only when the blender is not running.



- If you need to push ingredients closer to the blade, **ONLY USE THE TAMPER PROVIDED** with the nutribullet® Smart Touch Blender™ Combo. **DO NOT** use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools can make contact with the blade, which may result in damage to the machine, shattering of the vessel, damage to property, and/or possible injury.



- **NEVER USE YOUR FINGERS OR ANY PART OF YOUR HAND TO PUSH INGREDIENTS DOWN TOWARD THE BLADE.** Only use the provided tamper.



## **ELECTRICAL SAFETY**

Do not use this product in locations with different electrical specifications or plug types. Do not operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury, or product damage.

- The use of attachments, including canning jars, is not recommended and may cause fire, electric shock, personal injury, or product damage and will void the product's warranty.
- To avoid the risk of electric shock, never immerse the cord, plug, or motor base of the nutribullet® Smart Touch Blender™ Combo in water or other liquids. Discontinue use if the cord, plug, or motor base is damaged.



- Always POWER OFF and UNPLUG the nutribullet® Smart Touch Blender™ Combo when it is not in use or BEFORE assembling, disassembling, changing accessories, or cleaning. Do not attempt to handle the nutribullet® Smart Touch Blender™ Combo until all parts have stopped moving.



- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the appliance and disconnect from power supply before changing accessories or handling moving parts.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.



- The Smart Touch Blender™ Combo is ready to operate when unit is plugged in and power icon is illuminated. Avoid inadvertent contact with the touch screen display.
- Do not allow the cord to hang over the edge of the table or counter. Do not pull, twist, or damage the power cord. Do not allow the cord to touch hot surfaces, including the stove.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the motor stops working, unplug the motor base and let it cool for at least 15 minutes before attempting to use it again. Your nutribullet® has an internal thermal breaker that shuts off the motor when it overheats. The thermal breaker will reset when the unit is unplugged, and the thermal breaker cools down sufficiently.



- This appliance has important markings on the plug. The attachment plug or entire cord set is not suitable for replacement. If damaged, the appliance will be replaced.

### STOVE-TOP HEATING SAFETY

To heat items that have been blended at room temperature or cooler (21°C or less), transfer mixture to a stove top pot to heat. Always use a thermometer to test the internal temperature of cooked ingredients; they may feel cool to the touch, yet still be hot inside.

The nutribullet® Smart Touch Blender™ Combo is not intended for use on the stove top. Do not place the motor base or any nutribullet® accessory on the stove or microwave or immerse in boiling water. This may result in damage to the accessory.

- Do not place any of the nutribullet® parts in a microwave, oven, or in a stove top pot, or immerse in boiling water, as this may result in damage to the part.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

### VENTILATION WARNINGS

To prevent a fire hazard, power base openings (underneath the motor base) should be free of dust and lint and never obstructed with flammable materials such as newspapers, tablecloths, napkins, dish towels, place mats or other similar type materials.

**CAUTION!** Always operate the nutribullet® Smart Touch Blender™ Combo on a level surface, leaving unobstructed space beneath and around the motor base to permit proper air circulation. Vents on the bottom of the product are provided for ventilation to ensure reliable motor operation and to prevent overheating.

### MEDICAL SAFETY

The information contained in this User Guide or in the Recipe Guide (you can download the Recipe Book via [www.nutriliving.shop](http://www.nutriliving.shop) or [www.nutribullet.nu](http://www.nutribullet.nu)) is not meant to replace the advice of your physician. Always consult your physician regarding health and nutrition concerns.

### MEDICATION INTERACTIONS

If you are taking any medication, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the recipes contained in the recipe guide (available online at [nutriliving.shop](http://nutriliving.shop) or [nutribullet.nu](http://nutribullet.nu)).

**CAUTION!** Avoid blending the following seeds and pits in the nutribullet® Smart Touch Blender™ Combo, as they contain a chemical known to release cyanide into the body when ingested: apple seeds, cherry pits, plum pits, peach pits, and apricot pits. Fruit pits may also

cause damage to the blade and/or pitcher.

## ADDITIONAL INSTRUCTIONS FOR PROPER USAGE


- TO AVOID LEAKAGE, DO NOT OVERFILL THE BLENDING VESSELS! The pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquid ingredients (lower line). Your nutribullet® cups are also marked with a MAX line. When filling the blending vessels, make sure your ingredients do not exceed their respective MAX lines. Exceeding the indicated MAX lines can result in leakage, and may lead to dangerous pressurization.
- Blending vessels and extractor blades are specific to the exact model of nutribullet® you possess. Use of incompatible parts (parts from other models) may result in damage to your nutribullet® Smart Touch Blender™ Combo or create safety hazards. When ordering replacement parts (nutribullet® cups, pitcher, extractor blades) on [www.nutriliving.shop](http://www.nutriliving.shop) or via customer service, please specify the machine model to ensure you receive parts that are compatible with your unit.
- Always use genuine nutribullet® replacement parts. After market parts are not made to nutribullet's specifications and may damage your unit or cause serious injury.
- Periodically inspect all nutribullet® components for damage or wear that may impair proper function or present an electrical hazard. Make sure that the power cord and plug are undamaged. Discontinue use and replace blending vessels if you detect cracking, cloudiness, or damage to the plastic. Ensure that the blades rotate freely and that the structure is undamaged. Make sure that the motor base is unobstructed and clean. Follow maintenance recommended in this User Guide and never operate your nutribullet® with damaged components. If your nutribullet® malfunctions in any way, immediately discontinue use and contact customer service via [info@nutribulletretail.com](mailto:info@nutribulletretail.com).

You may purchase new nutribullet® cups, pitchers, and easy-twist extractor blades at [www.nutriliving.shop](http://www.nutriliving.shop) or [nutribullet.nu](http://nutribullet.nu) or by contacting customer service.

### Save these instructions!


If you have any comments, questions, or concerns, please go to [info@nutribulletretail.com](mailto:info@nutribulletretail.com) or [service@nutribulletretail.com](mailto:service@nutribulletretail.com).

### What's included

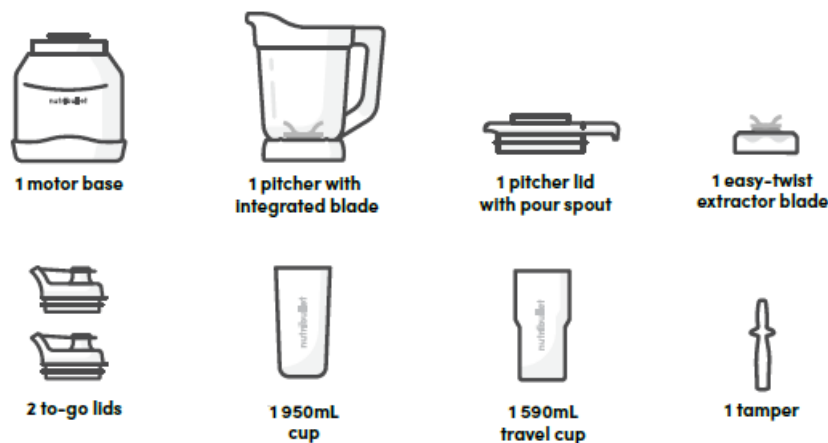

### Assembly guide.



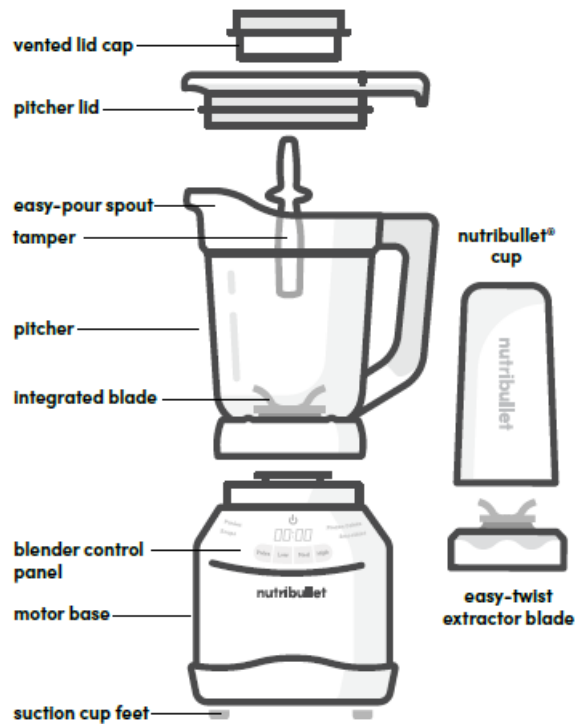

## Getting started.

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- Make sure the base is plugged in for use.
- Never run the appliance while empty.
- Appliance accessories are not intended to be used in the microwave as it may damage the accessories.
- Never leave the appliance unattended while in use.

Never blend hot or carbonated liquids or ingredients when using any sealed nutribullet cups. Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C or cooler).

Use extra caution when blending hot liquids or ingredients in the pitcher. Steam and splatters can escape through the vented lid, potentially causing scalding and/or burns. NEVER blend hot liquids in your pitcher without the pitcher lid and vented lid cap attached. The vented lid cap is ventilated to allow steam and pressure to release, while guarding against excess splashing. NEVER blend hot liquids in your nutribullet cups or any other sealed vessel, only use the vented pitcher.

When blending hot liquids in the vented pitcher, add liquid and solid ingredients to your pitcher below their respective MAX lines. Attach the pitcher lid with the vented lid cap inserted. Press POWER, then select desired program or begin blending on LOW setting. Once ingredients are integrated and the mixture is level (no splashing), increase speed as needed.

Always use care when opening the pitcher lid after blending hot ingredients making sure that excess pressure has been released.

## Pitcher assembly & use.

Review all warning and caution statements in the Important Safeguards section (pg 3-6) and on the previous paragraph before proceeding to Step 1.

1. Place the motor base on a clean, dry, level surface such as a counter or table.
2. Place the pitcher on a clean, dry surface. Add the ingredients to the pitcher, making sure they do not exceed the MAX line.  
**NOTE:** The blending pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquids (lower line). When filling the blender, make sure your ingredients do not exceed their respective MAX lines.
3. Place the lid on top of the pitcher and press down firmly until locked in place. Place the lid cap over the lid opening, then press down and twist until locked in place.  
**NOTE:** The motor will not run unless the lid is locked in place.
4. Place the pitcher (lid-side up) onto Place the pitcher on a clean, dry, level surface. Add the ingredients to the pitcher, making sure they do not exceed the MAX line.  
**NOTE:** You may need to twist the pitcher slightly until you feel it settle into the grooves on top of the base.
5. Plug the power cord into an electrical outlet and press POWER to turn on the blender. Once the pitcher is fully locked and the unit is plugged in, the Blending Control Panel will illuminate and the unit will be ready to operate.  
**NOTE:** If pitcher lid and pitcher are not fully secured onto the base, control panel will not illuminate.
6. To begin blending, select a manual speed or program on the Blending Control Panel. To pause blending, press the current speed or program once, the unit will stop running and the timer will pause. To resume blending, press a manual speed or the same program again.  
**NOTE:** Go to the blending control panel section on pages 20-23 for speed and program definitions, images, and other information.  
**NOTE:** If you need to add additional ingredients while blending, switch the setting to LOW and remove the lid cap from the pitcher lid, leaving the lid attached. Add ingredients through the hole in the top of the lid, followed by the tamper if necessary. Replace the lid cap, then increase to your desired speed. DO NOT attempt to add items through the vent hole when blending HOT ingredients.  
**CAUTION:** Do not use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools are long enough to reach the blade, which may result in damage to the machine, damage to property, and possible injury.
7. When you have reached your desired consistency, stop the appliance by pressing POWER . If you are using a program, you will hear a beep when the program has completed. Wait for the blades to stop turning. The unit will enter idle-mode. The timer will reset and the Blending Control Panel will remain illuminated. Press POWER again to turn off the unit completely and the illuminated display will turn off.
8. Twist pitcher counterclockwise and lift off the motor base. our and enjoy!  
**WARNING:** Blades are sharp. Never insert your hands into the pitcher.  
**NOTE:** Press up with your thumb on the tab near handle first to loosen pitcher lid for easy removal!

## **nutribullet® cup assembly & use**

Review all warning and caution statements in the Important Safeguards section (pg 3-6) and on the previous page before proceeding to Step 1.

1. Place the motor base on a clean, dry, level surface such as a counter or table.
2. Add ingredients to the nutribullet® cup.

**NOTE:** Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.

**WARNING:** NEVER BLEND HOT OR CARBONATED INGREDIENTS OR LIQUIDS IN THE SEALED VESSEL, as doing so may cause excessive pressure buildup, resulting in risk of personal injury and or property damage.

3. Twist the easy-twist extractor blade onto the cup until tightly sealed.

**WARNING:** Handle the easy-twist extractor blade assembly with care, as the blades are sharp. Never leave the appliance unattended while in use.

4. Plug the power cord into an electrical outlet and press POWER to turn on the blender.
5. Turn the cup upside down and place it onto the motor base, gently turning the cup clockwise to lock into the motor base.

**NOTE:** The cup must be locked onto the base for the unit to operate.

6. To begin blending, select a manual speed or program on the Blending Control Panel. To pause blending, press the current speed or program once, the unit will stop running and the timer will pause. To resume blending, press a manual speed or the same program.

### CAUTION

Do not remove the easy-twist extractor blade from the nutribullet® cup until blending has completely ceased. Do not use the easy-twist extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. When storing contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.

**NOTE:** Proceed to the blending control panel chart on page 11 for speed definitions.


7. When you have reached your desired consistency, stop the appliance by pressing POWER . The unit will enter idle-mode. The timer will reset and the Blending Control Panel will remain illuminated. Press POWER again to turn off the unit completely.

**NOTE:** speeds will automatically shut off after 60 seconds.

8. Unlock the assembly by gently twisting the cup counterclockwise. You will hear a click. Enjoy!

**NOTE:** Blending should never take longer than one minute to yield smooth and creamy results.

## Blending control panel: manual speeds

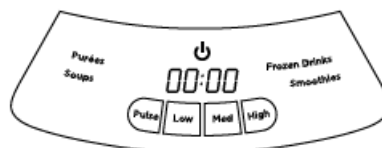

### TURNING ON/OFF

The power button controls the master power of the appliance. If pitcher with pitcher lid or nutribullet® cup is locked in place, pressing POWER will indicate the motor is powered on and illuminate the Blending Control Panel.



### TIMER

When using a blending speed: timer starts at zero (00:00) and increases during operation, showing time elapsed

since blending began. When using program presets: timer counts down during operation until program is completed.



## PULSE


Use to control chopping and processing.

**WARNING:** DO NOT use this setting with hot ingredients as ingredients may splash.




## LOW SPEED

Use to mix thin batters, gravies and marinades. Or, to scramble eggs, process cooked foods and uncooked fruits.

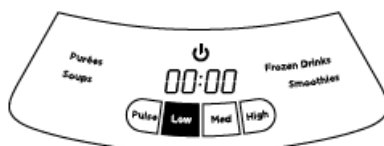


## WARNING!

NEVER BLEND HOT LIQUIDS OR OTHER HOT INGREDIENTS IN ANY SEALED NUTRIBULLET® CUP. Doing so may cause excessive pressure buildup, resulting in risk of personal injury or property damage. Hot items should only be blended in the pitcher using proper safeguards.

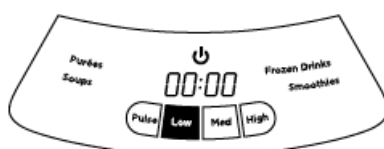

## TO SELECT A SPEED

Press the desired speed once to turn on. The selected speed will illuminate and the rest of the speeds will dim. To toggle to another blending speed, press the inactive, dimmed speed desired. To pause blending at any point, press the active speed, the motor will stop and the timer will pause counting. To resume blending, press a manual speed button again. To return to main blending control panel, press POWER once. To fully power down after pausing, press POWER twice and unplug the unit.

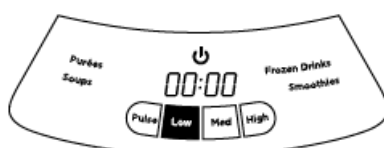

## MEDIUM SPEED

Use to cream soups, blend sauces and spreads, or mix dips. Also great for grinding nuts, making mixed drinks,

powdered drinks or milkshakes.



## HIGH SPEED

Use to liquefy thick mixtures and extract frozen fruits and vegetables into smoothies.

## Blending control panel: intelligent programs

### PURÉES


Delivers a perfectly smooth texture — ideal for dips, sauces and spreads of all kinds.



### SOUPS

Blends sweet or savory ingredients into the silkiest of ready to heat soups and chilled gazpachos. The Soups program is only available when using the pitcher.

**NOTE:** The Soups program does not heat the ingredients you are blending. Always be careful when opening the pitcher after blending hot or warm ingredients.

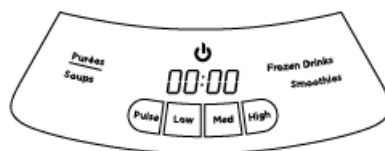

### FROZEN DRINKS

Perfect for ice-blended mocktails or cocktails, and frappe style drinks.



### SMOOTHIES

Easily turn fresh or frozen fruits and vegetables into sippable nutritious smoothies.

## TO SELECT A PROGRAM

Press the desired program to turn on. The selected program will illuminate and the rest of the blending control panel will disappear. The program will start to run, and timer will countdown until the program is complete. When the program is complete, there will be an audible alert and main blending control panel will be illuminated. To pause a program before completion, press the active program. The motor will stop and the timer will pause counting. To resume the program, press the program button again. To return to main blending control panel, press POWER

once. To fully power down, press POWER twice and unplug the unit.

Our intelligent programs are expertly designed to give you the perfect results every time. During each program,

the unit may pulse, change speeds, and blend as needed until the program is complete.

**NOTE:** If the unit stops running and power and timer display are flashing, your device may be overheated. Unplug your device and wait 15 minutes. Plug back in to reset.

## Care & maintenance.

Here's how to clean the nutribullet®:

- **STEP 1:**

The most important thing — ALWAYS POWER OFF THE UNIT and UNPLUG the motor base from the power outlet when it is not in use. Do not attempt to handle the appliance until all parts have stopped moving!

- **STEP 2:**

Detach the nutribullet® cup / extractor blade or pitcher from the motor base.

- **STEP 3:**

Clean the individual components (motor base, extractor blade, nutribullet® cups) as recommended:

- **MOTOR BASE:**

- To avoid risk of injury, NEVER attempt to clean the actuator system on the motor base while the nutribullet® is plugged in.
- Do not attempt to remove any pieces from the motor base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the motor base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.
- To clean leakage residue from the motor base, wipe with a damp sponge and warm water.

**WARNING:** Never submerge the motor base in water.

## EASY-TWIST EXTRACTOR BLADE:

- Blades are sharp! Handle the blade with care when cleaning! It is best to clean blades immediately after use to reduce buildup of residue. If food particles get stuck, use a small brush or sponge to target and dislodge them.
- Do not remove any components of the extractor blade; this can result in permanent damage to the blade, resulting in leakage when blending. If, over time, the blade becomes loose or damaged, you may order a new extractor blade at [nutriliving.shop](http://nutriliving.shop) or contact customer service.
- Dry the blade completely after every use.
- Regularly check the condition of the bottom of the blade for cracking or breakage. If damaged, replace blade immediately to prevent possible personal injury.

## NUTRIBULLET® CUPS & TO-GO LIDS:

These items are TOP RACK dishwasher-safe. We recommend rinsing and briefly scrubbing them with a dish brush to remove any remaining debris before placing in the dishwasher. NEVER use the sanitize cycle to wash the cups — heat this high can warp the plastic.

## NUTRIBULLET® PITCHER:

- The pitcher is dishwasher-safe. We recommend rinsing and briefly scrubbing it with a dish brush to remove any remaining debris before placing in the dishwasher. NEVER use the sanitize cycle to wash the pitcher — heat this high can warp the plastic.
- If preferred, hand-wash the pitcher with soap and water. Stuck-on ingredients might require extra scrubbing

from a dish brush or sponge.

The blades are sharp. Take care not to touch while hand-washing.

- Regularly check the structure of the pitcher and twisting threads for cracking, crazing, or breakage. If damaged, replace immediately to prevent possible personal injury.

#### **TAMPER:**

Always hand-wash the tamper with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.

### **Accessories**

To order accessories, please visit our website at [nutribullet.nu](http://nutribullet.nu) or [nutriliving.shop](http://nutriliving.shop).

### **How to store.**

Store the nutribullet® Smart Touch Blender™ Combo pitcher upright with the pitcher lid secured on top. Do not place anything on top of the pitcher lid. Store remaining pieces in a safe place where they will not be damaged and won't cause harm.

**WARNING:** NEVER store the extractor blade on the motor base without a nutribullet® cup or the pitcher as the exposed blades pose a serious laceration hazard.

### **Waranty registration.**

Please visit [nutriliving.shop](http://nutriliving.shop) to register your new nutribullet® Smart Touch Blender™ Combo. You will be asked to enter the Serial Number\* of your product, along with the purchase date and name of the shop of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By registering your product you acknowledge to have read and understood the instructions for safety and use, and the warnings set forth in the accompanying instructions.

\*To find the serial number, check under the Motor Base.

### **Are you happy with your nutribullet®?**

Share your recipes, posts, tips & tricks! Like & follow us @nutribullet.nordics

Tag your blends #nutribullet #nutribullet.nordics #nutrilovers #healthy #healthylifestyle

Unsure of where to start? The recipe guide outlines everything you need to know.

Visit [www.nutriliving.shop](http://www.nutriliving.shop) or [www.nutribullet.nu](http://www.nutribullet.nu) and download your copy.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

### **Documents / Resources**



[nutriBullet NBF07520 Smart Touch Blender Combo](#) [pdf] User Guide

NBF07520 Smart Touch Blender Combo, NBF07520, Smart Touch Blender Combo, Blender Combo, Combo