



## **nutriChef NCFP8 Multifunction Food Processor User Guide**

[Home](#) » [nutriChef](#) » nutriChef NCFP8 Multifunction Food Processor User Guide 



### **NCFP8 Multifunction Food Processor USER GUIDE**



**Visit Our Website**



SCAN ME

[nutrichefkitchen.com](https://links.nutrichefkitchen.com/)

<https://links.nutrichefkitchen.com/Home>

## Contents

- [1 About NutriChef](#)
- [2 Features:](#)
- [3 IMPORTANT SAFETY INSTRUCTIONS](#)
- [4 PRODUCT CONFIGURATION](#)
- [5 OPERATING GUIDE](#)
- [6 For Masher & Slicer & Shredder](#)
- [7 For Chopper, Flour, & Emulsor](#)
- [8 For Citrus Juicer](#)
- [9 MAINTENANCE/CLEANING METHOD](#)
- [10 TROUBLESHOOTING](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)

## About NutriChef

### A mission born out of need

NutriChef was created on the principle that healthy home cooking should be attainable to all, regardless of skill level and economic status. Starting in 2014, we noticed the disconnect in our lives and in the lives of those around us. We were so busy, always rushing forward, and our health and personal lives suffered. We needed to find some way to slow down and put our health first, all without sacrificing convenience or taste.

Could we somehow create healthier versions of our favorite foods, easily in our own kitchens? The answer was a resounding yes, and NutriChef was born.



**We create products that make life a little easier and a little healthier**

Our brand was created out of a desire to provide an alternative to fast food convenience and reintroduce people to home cooking. A healthy home-cooked meal is what brings families and friends together. We believe strongly in the value of simple pleasures. An evening spent cooking and sharing a meal of wholesome, nourishing foods is a memory in the making.




**We believe a moment shared is priceless**

Today, we have built upon our original mission and now in addition offer products that make the art of entertaining a simpler one. Entertaining and hosting family and friends are one of the great joys of life.

Why waste a moment stuck in the kitchen?

We offer products that free you up to socialize, while never sacrificing quality or taste.

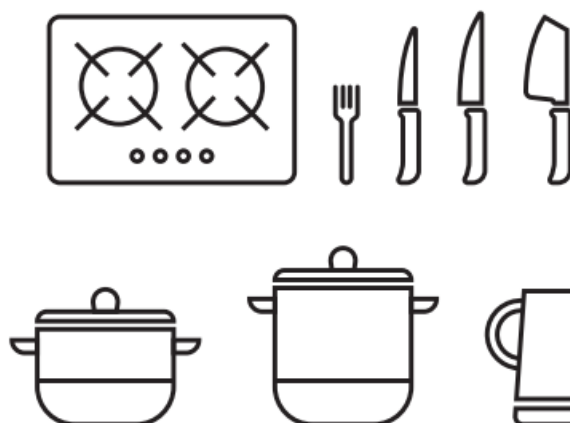

IMPORTANT SAFETY INSTRUCTIONS  
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

**⚠WARNING:** Cancer and Reproductive Harm – [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

**Features:**

- Quiet Powerful Motor
- Includes 6 Attachment Blades: Slicer/Shredder Blade Disc, Masher Blade Disc, Chopper Blade, Knead Dough Blade, Emulsifying Blade, and Citrus Juicer
- Quick to Put Together
- Silent Strength, Ultra-Quiet
- Energy Efficient with Low Power Consumption
- Pre-set Speed Function
- Compact Design

- Automatic Shut-Off
- Easy to Store and Clean
- Electronic Overload Protection
- Every Part (except the base with the motor, cup & gearbox) is Dishwasher Safe
- Silicone rubber bottom suction in order to hold strong on countertops while in use

#### **What's in the Box:**

- (1) Shredding/Slicing
- (1) Masher Blade Disc
- (1) Top-rated S blade
- (1) Emulsifying
- (1) Kneading
- (1) Citrus juicer attachment
- Power Cable

#### **Technical Specs:**

- Construction Material: ABS Housing, AS Cup
- Voltage: AC120V, 60Hz.
- Power Output: 600W
- Load Capacity: 12 Cups for Dry Ingredients, 9 Cups for Liquid Ingredients
- Continuous Use: <Tmin
- Power Cable Length: 3.28' ft.
- Product Dimension (L x H): 13.78" x 7.48" x 13.58" -inches

**Read This Instruction Manual Carefully Before Using This Equipment.  
For household use only!**

### **IMPORTANT SAFETY INSTRUCTIONS**

1. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance in a safe way and understand the hazards involved.
2. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl, and during cleaning.
3. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
4. Do not operate any appliance with a damaged cord or plug, or after the appliance has been dropped or damaged in any way.  
Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
5. To protect against the risk of electrical shock, do not put cord, plug, base, or motor in water or other liquid.
6. Make sure the motor has completely stopped before removing the cover.
7. Make sure that the cover and feed tube are securely locked in place before operating the food processor.

8. Unauthorized use may cause fire, electrical shock, or damage to your food processor.
9. Indoor use only. Do not expose to rain, snow, or other adverse environments.
10. Please keep it out of reach of children.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
12. Do not use the machine continuously for more than 1 minute.
13. If the motor stops during normal use, it means the motor protection has activated. Please turn off the switch and wait about 20-30 minutes, then use it again.
14. Always unplug from the outlet when not in use, before removing food, and before cleaning.
15. Care shall be taken when handling the sharp cutting blades, emptying the bowl, and during testing.

## PRODUCT CONFIGURATION




## OPERATING GUIDE

Function	Food	Time	Processing produce
Masher	Nuts	1 min	Cut the nuts into small pieces
Slicer & Shredder	Vegetables or any fresh fruits	1 min	Choose the correct disc blades
Chopper	Meat (350g)	30 seconds	Cut the meat into small cubes
Flour	300g Flour with water	Tmin	Make sure theres enough water
Emulsor	Egg or any cream	30 seconds	Pour some water
Citrus Juicer	Citrus and orange	Imin	Cut the round one into half

### For Masher & Slicer & Shredder

These accessories are used for mashing nuts, slicing, and shredding carrots, potatoes, tomatoes, and any vegetables or fruit.

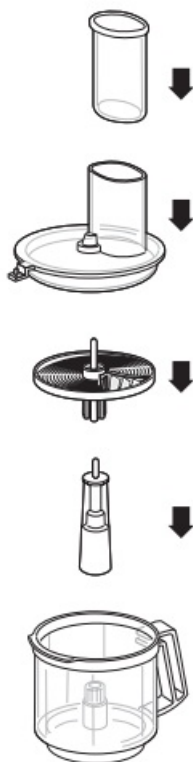

1. Put the spindle into the bowl.
2. . Place the blade disc on the spindle in the bowl and secure it.
3. . Cover it and turn until locked and level.
4. . Install the bowl on the unit base, turn it clockwise to lock.
5. . Plug in the power, turn on the switch, and put the food into the feed hole. Use the food pusher to press it in.


Note: Please cut the food into small pieces if it is very large.

6. When finished, turn off the switch, unplug, open the cover, and remove the blade disc to access the food.
7. The masher, slicer, and shredder have the same operation.

**Note:**

Slicer and Shredder use the same blade disc: one side for slicing, the opposite side for shredding.

**For Chopper, Flour, & Emulsor**

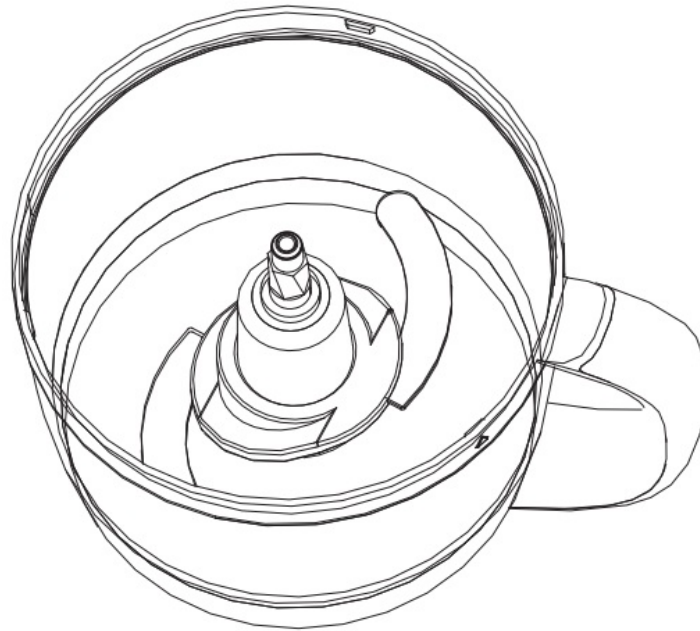

1. Attach the chopper blade to the bowl.

Note: Sharp blade, do not touch the edge of the blade.

2. Cut the meat into suitable pieces and place in the bowl, then cover.

Note: Please remove the bones from the meat.

3. Install the bowl on the unit base, turn clockwise to lock.

4. Plug in the power and turn on the switch.

**Note:** If the food causes the machine to shake, stop the machine, open the cover, and separate the food evenly.

This bowl is not for liquid food.

5. When finished, turn off the switch, unplug, remove the bowl from the base, open the cover, and remove the blade. Access the meat as needed.

6. The chopper, flour, and emulsor have the same operation.

## For Citrus Juicer

**Note:** Please operate it one by one as per the following diagram.



## CAUTION

1. Do not use the machine continuously for more than 1 minute.  
Allow at least 1 minute of rest.
2. Remove bones from the meat.
3. Do not use large quantities of meat and flour in the bowl.

## MAINTENANCE/CLEANING METHOD

1. You should always unplug the appliance when not in use.
2. Unplug the appliance from the electrical outlet when not in use for a long time. Store the unit in a cool, dry place.
3. Clean the accessories in water except for the motor base.
4. Always unplug the appliance before removing accessories or cleaning the motor unit. Wipe the motor base with a dry cloth; never flush or dip it in water.

## TROUBLESHOOTING

Malfunction	Analysis	Solution
Motor not working	1.Plug not connected to power. 2.Bowl or cover not installed correctly. 3.Motor protector activated	1.Check socket is well connected. 2.Ensure the bowl and cover are properly installed. 3.Wait for about 20-30 minutes and try again.
Safety switch not working	Switch jamming	Do not repair yourself; take it to the repair service.
Food jam	Too much food	Turn off the machine, reduce the food quantity.
Abnormal smell from motor base	Working too long	Do not operate for more than 1 minute at a time.
Leakage under blade seat	Blade seal broken, too much water in bowl.	Turn off the machine, remove the food, check the screw, seal, and reinstall.

## ENVIRONMENT



Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and enter the food chain, damaging health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least free of charge.





### Register Product

Thank you for choosing Nutrichef. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support.

Complete the form to access expert support and to keep your Nutrichef purchase in perfect condition.



<https://links.nutrichefkitchen.com/Register>



Questions or Comments?

We are here to help!


Phone: 1.718.535.1800

[nutrichefkitchen.com/ContactUs](https://links.nutrichefkitchen.com/ContactUs)



<https://links.nutrichefkitchen.com/Contact>

## Documents / Resources

 The image shows the cover of the user guide for the NutriChef NCFP8 Multifunction Food Processor. It features a photograph of the food processor, which has a black base and a clear plastic bowl. The NutriChef logo is at the top left. At the bottom, there is a QR code and the text 'NCFP8 Multifunction Food Processor USER GUIDE'.	<p><a href="#">nutriChef NCFP8 Multifunction Food Processor</a> [pdf] User Guide</p> <p>NCFP8 Multifunction Food Processor, NCFP8, Multifunction Food Processor, Food Processor, Processor</p>
---	--

## References

- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.